




Contents

Power Adaptor Setup	4
Docking your iPod	5
Charging	6
Standalone operation Connections for any amplifier	8
Arcam Solo Mini Connections	10
Arcam Solo Music	12 13
Arcam Solo Movie Connections — SCART version Connections — Component Video version Setup Remote control	16 17 18
Arcam T32 Connections Remote control	20
Arcam AVR600, AV888	22 23
Navigation from the Front Panel Song Selection Changing Selection	26
Navigation from the On Screen Display Song Selection Changing Selection	28

 Power Adaptor Setup

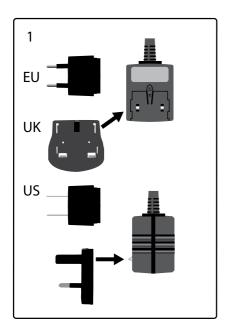

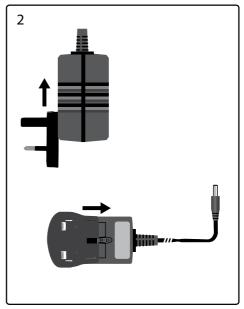





Docking your iPod

The docking adaptor is supplied with your iPod. It is important to fit the correct docking adaptor for your particular model of iPod. Failure to do so may result in damage to the irDock connector.

Spare docking adaptors are available from Apple.

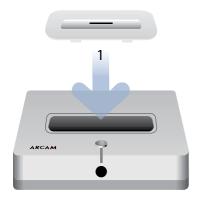

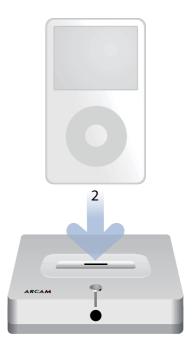

Charging





charging on	red	charging off	blue
© chargement en cours	rouge	chargement terminé	bleu
D Ladevorgang ein	rot	Ladevorgang aus	blau
NL laden aan	rood	laden uit	blauw

Standalone operation

Connections for any amplifier



Remote control (CR1)

The supplied remote control can be used to control your iPod when the irDock is not connected to a supported Arcam product. If you are using the irDock with a supported Arcam product, use the Arcam system remote instead.

Please remove the plastic tab to connect the supplied batteries before use.



- Turn the dock on/off.
- Go to previous menu (Albums, Artists, Playlists etc.)
- Mute the volume.
- Increase or
- decrease the volume.




Select music by playlist, artist etc.


- Activate repeat and
- shuffle playback modes.
- Activate/deactivate iPod charging.
- Start or pause playback.
- Jump to the next track, track start
- or previous track in the current selection.

Arcam Solo Mini

Connections

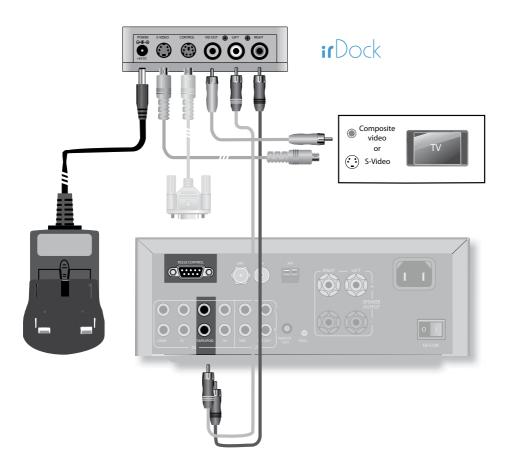


Remote control — Solo Mini

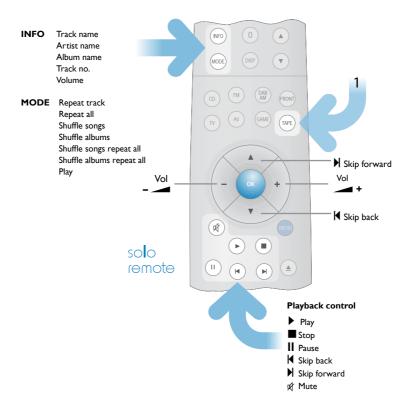


Arcam Solo Music


Connections

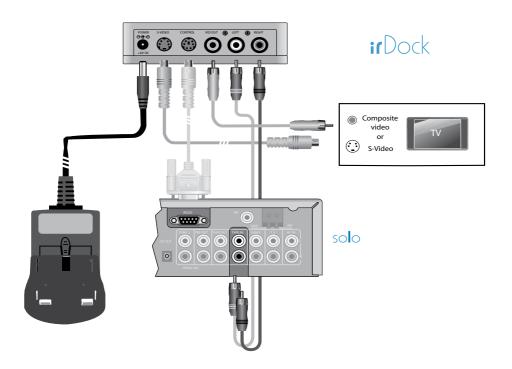

Setup — Solo Music

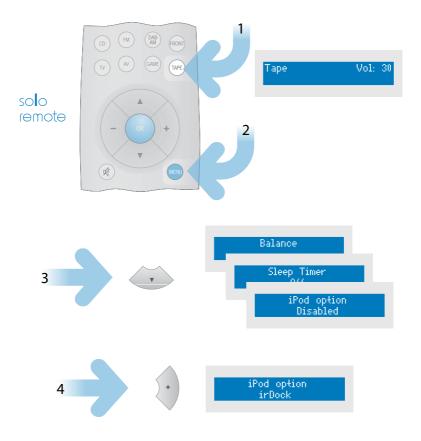


Remote control — Solo Music

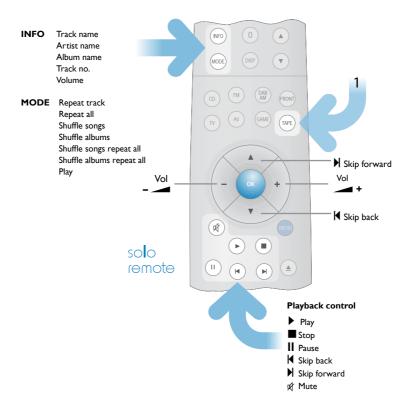


Arcam Solo Movie


Connections — SCART version

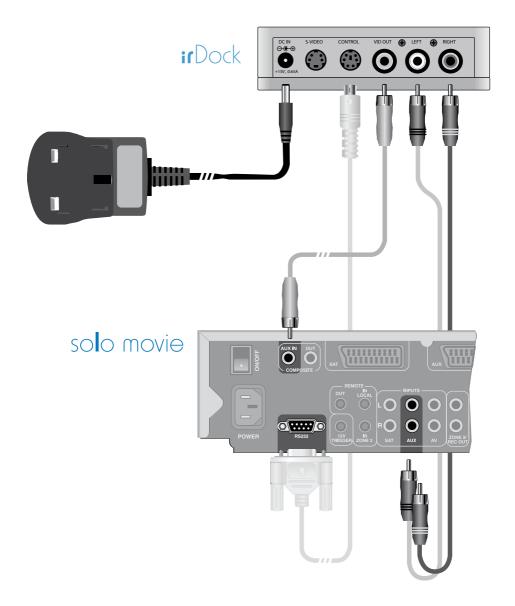


Connections — Component Video version

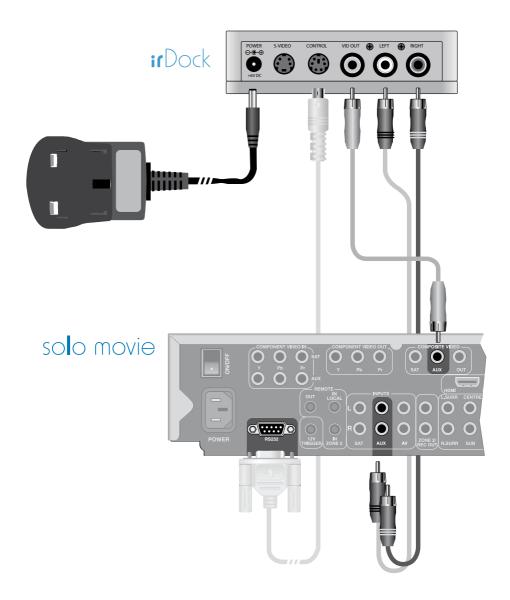

Setup — Solo Movie

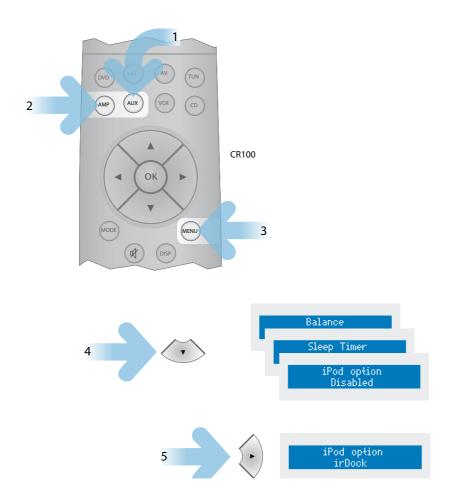


Remote control — Solo Movie (CR100)

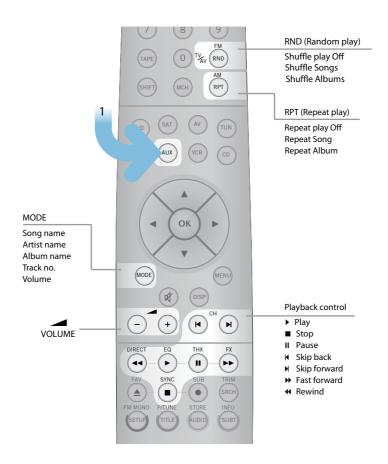


Arcam T32

Connections

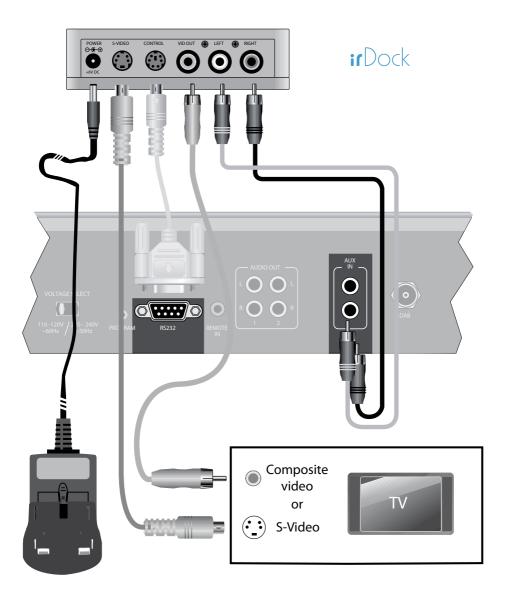


Remote control — T32 (CR90)

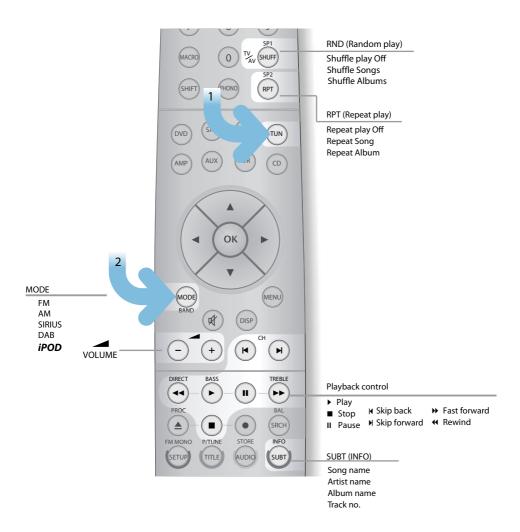


Arcam AVR600, AV888

Connections

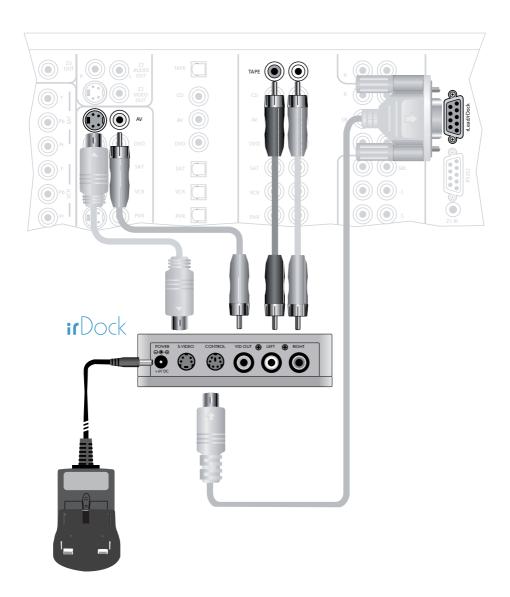


Setup — On Screen Display

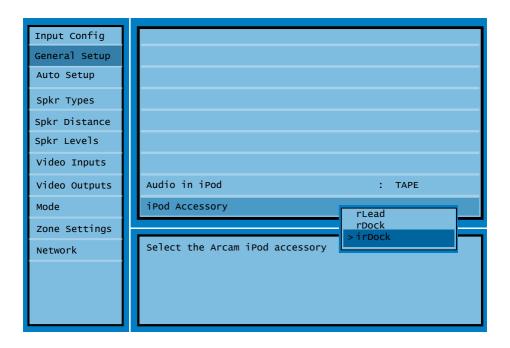




Remote control — AVR600, AV888 (CR102)

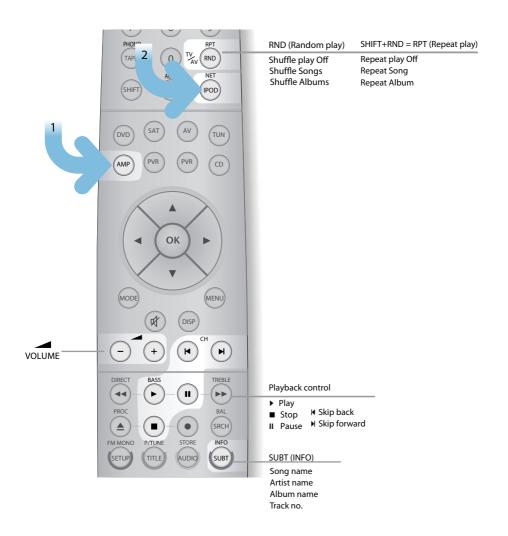


Navigation from the Front Panel

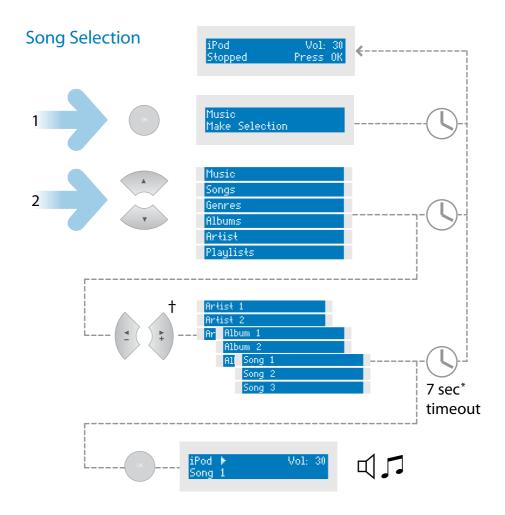

⁺ -/+ = Solo remote

^{◄/ ►=}CR90/CR100/CR102

Changing Selection

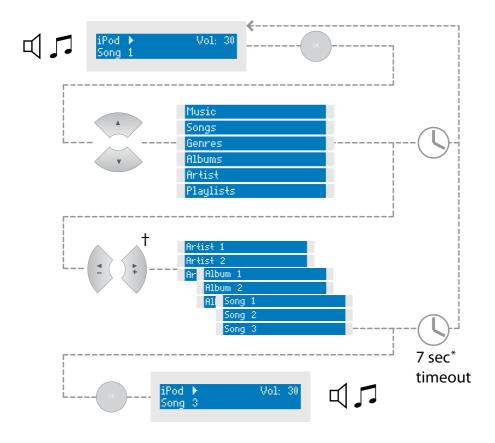

- † -/+ = Solo remote
 - **◄**/ ►=CR90/CR100/CR102

Navigation from the On Screen Display

Song Selection


















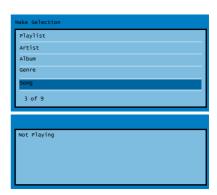

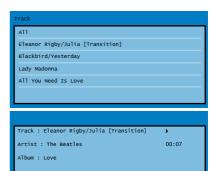

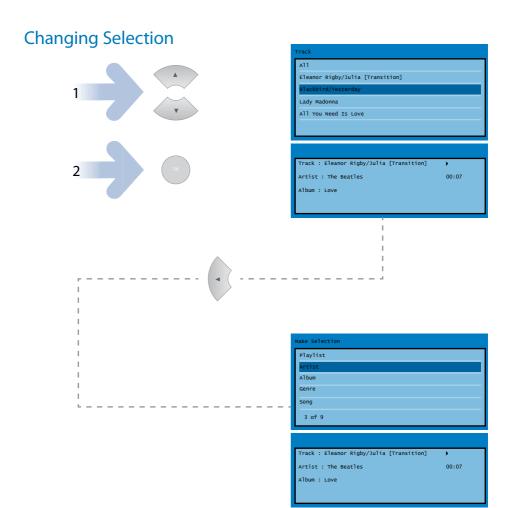



http://www.arcam.co.uk

Pembroke Avenue, Waterbeach, CAMBRIDGE, CB25 9QR, England