

ARCAM

Radia Remote Control Alternative Functions



Table of Contents

Table of Contents2

A5+, A15+, A25+3

 Alternative function selection3

 Amplifier Remote Control Codes4

CD5.....5

 Alternative function selection5

 CD5 Remote Control Codes5

ST5.....6

 Alternative function selection6

 ST5 Remote Control Codes6

Revision7

The remote controls supplied with the ARCAM Radia A5+, A15+, A25+ amplifiers, the CD5 CD player and ST5 streamer are supplied to work with the products with which they are supplied and for the most common use cases. To help our customers who may have more specialised requirements the function of the remotes for all these products can be configured to allow different system codes or the ability to control some functions of other products.

ARCAM A5+, A15+, A25+

The remote supplied with the A5+, A15+ and A25+ Radia amplifiers can be configured to:

- Use system code 19, instead of code 16 to allow independent control of two ARCAM amplifiers or AVRs.
- Control the playback function of an ARCAM CD player
- Control the playback function of an ARCAM ST5

Alternative function selection

- Press and hold the POWER and OK key for 3 seconds. LED on the remote will now stay lit.
- The navigation keypad is now used to select an alternative function for the remote.

- UP - Sets the system code of all keys to code 19.
LED will flash TWICE.
- RIGHT - Sets the transport keys (PLAY/PAUSE, SKIP FWD, SKIP BACK) to control an ARCAM CD player. All other keys set to system code 16.
LED will flash THREE times.
- DOWN - Sets the transport keys (PLAY/PAUSE, SKIP FWD, SKIP BACK) to control an ARCAM ST5. All other keys set to system code 16.
LED will flash FOUR times.
- LEFT – Restores the remote to default settings. All keys set to system code 16.
LED will flash ONCE.

ARCAM

Amplifier Remote Control Codes

Key function	Default Code LEFT	Alternative Code UP	Alternative Code RIGHT	Alternative Code DOWN
	System/Command	System/Command	System/Command	System/Command
Power	16/12	19/12	16/12	16/12
Nav Up	16/86	19/86	16/86	16/86
Nav Left	16/81	19/81	16/81	16/81
Nav OK	16/87	19/87	16/87	16/87
Nav Right	16/80	19/80	16/80	16/80
Nav Down	16/85	19/85	16/85	16/85
Info/Menu	16/55	19/55	16/55	16/55
Vol+	16/16	19/16	16/16	16/16
Mute	16/13	19/13	16/13	16/13
Music	16/30	19/30	16/30	16/30
Vol-	16/17	19/17	16/17	16/17
Brightness	16/59	19/59	16/59	16/59
Skip back	16/33	19/33	20/33	21/33
Play/Pause	16/53	19/53	20/53	21/53
Skip fwd	16/11	19/11	20/11	21/32

ARCAM CD5

The remote supplied with the CD5 Radia CD player can be configured to:

- Use system code 19, instead of code 16 for the VOLUME and MUTE keys.

Alternative function selection

- Press and hold the POWER and OK key for 3 seconds. LED on the remote will now stay lit.
- The navigation keypad is now used to select an alternative function for the remote.
- RIGHT – VOLUME and MUTE keys set to system code 19.
LED will flash TWICE.
- LEFT – Restores the remote to default settings. VOLUME and MUTE keys set to system code 16.
LED will flash ONCE.

CD5 Remote Control Codes

Key function	Default Code LEFT	Alternative Code RIGHT
	System/Command	System/Command
Power	20/12	20/12
Nav Up	20/86	20/86
Nav Left	20/81	20/81
Nav OK	20/87	20/87
Nav Right	20/80	20/80
Nav Down	20/85	20/85
Info/Menu	20/55	20/55
Vol+	16/16	19/16
Mute	16/13	19/13
Music	20/82	20/82
Vol-	16/17	19/17
Brightness	20/59	20/59
Skip back	20/33	20/33
Play/Pause	20/53	20/53
Skip fwd	20/11	20/11

ARCAM ST5

The remote supplied with the ST5 Radia streamer can be configured to:

- Use system code 19, instead of code 16 for the VOLUME and MUTE keys.

Alternative function selection

- Press and hold the POWER and OK key for 3 seconds. LED on the remote will now stay lit.
- The navigation keypad is now used to select an alternative function for the remote.
- RIGHT – VOLUME and MUTE keys set to system code 16 to allow control of an ARCAM amplifier. LED will flash TWICE.
- DOWN – VOLUME and MUTE keys set to system code 19 to allow control of an ARCAM amplifier. LED will flash THREE times.
- LEFT – Restores the remote to default settings. VOLUME and MUTE keys will control the ST5. LED will flash ONCE.

ST5 Remote Control Codes

Key function	Default Code LEFT	Alternative Code RIGHT	Alternative Code DOWN
	System/Command	System/Command	System/Command
Power	21/12	21/12	21/12
Nav Up	21/86	21/86	21/86
Nav Left	21/81	21/81	21/81
Nav OK	21/87	21/87	21/87
Nav Right	21/80	21/80	21/80
Nav Down	21/85	21/85	21/85
Info/Menu	21/55	21/55	21/55
Vol+	21/16	16/16	19/16
Mute	21/13	16/13	19/13
Music	21/66	21/66	21/66
Vol-	21/17	16/17	19/17
Brightness	21/59	21/59	21/59
Skip back	21/33	21/33	21/33
Play/Pause	21/53	21/53	21/53
Skip fwd	21/32	21/32	21/32

ARCAM

Revision

Issue 3 – Correct key order for CD and ST remotes. Update for ARCAM A5+, A15+ and A25+

Issue 2 – Correct amplifier alternative key table

Issue 1 – Initial Release

ARCAM



HARMAN International, Incorporated

8500 Balboa Boulevard, Northridge, CA 91329 USA

Danzigerkade 16G 1013 AP Amsterdam, Netherlands

Ground Floor, Westside 2, London Road, Apsley, Hemel Hempstead,
Hertfordshire, HP3 9TD, United Kingdom

www.arcam.co.uk

© 2025 HARMAN International Industries, Incorporated. All rights reserved.

ARCAM is a trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries.

Features, specifications, and appearance are subject to change without notice.