

## Solo IR Remote Codes

The following information is supplied for owners of advanced programmable remote controls, such as the Philips 'Pronto' and similar devices, where it is possible to program remote codes directly into the device.

The main system control uses RC-5 system codes '16' with the tuner section using system code '17' and the CD section using '20' (this is to provide compatibility with existing Arcam equipment. So, for example, to program in a 'Standby' command, use the command '16-124'.

Zone 2 also uses RC-5 system code 16 as standard, as Zone 2 is normally operated in a separate room using a standard (system code 16) remote control.

System Code	Command	Command Code	Comments
16	Select TV	0	
	Select AV	2	
	Select DAB/AM	3	
	Select TAPE	5	
	Select GAME	6	
	Select CD	7	
	Select FRONT	8	
	Select FM	53	
	Toggle Standby	12	
	Toggle Mute	13	
	Vol Plus	16	
	Vol Minus	17	
	Bass Plus	22	
	Bass Minus	23	
	Treble Plus	24	
	Treble Minus	25	
	Balance Plus	26	
	Balance Minus	27	
	Info	55	
	Display	59	
	Vol Zone 1 Plus	67	
	Vol Zone 1 Minus	68	
	Toggle Mute Zone 1	69	
	Mute Zone 1 On	70	
	Mute Zone 1 Off	71	
	Vol Zone 2 Plus	72	
	Vol Zone 2 Minus	73	
	Toggle Mute Zone 2	74	
	Mute Zone 2 On	75	
	Mute Zone 2 Off	76	
	Navigate Right	80	
	Navigate Left	81	
	Menu	82	
	Navigate Down	85	
	Navigate Up	86	
	OK	87	
	Toggle Alarm 1 on/off	113	
	Toggle Alarm 2 on/off	114	
	Toggle Alarm 3 on/off	115	
	Toggle Alarm 4 on/off	116	
Activate/reduce Sleep time	118		
Mute On	119		
Mute Off	120		
Standby Off	123		
Standby On	124		

System Code	Command	Command Code	Comments
17	Number 0	0	For Tuner & CD
	Number 1	1	
	Number 2	2	
	Number 3	3	
	Number 4	4	
	Number 5	5	
	Number 6	6	
	Number 7	7	
	Number 8	8	
	Number 9	9	
	Preset Up	32	
	Preset Down	33	
	Toggle Mode	37	
	Info	63	
System Code	Command	Command Code	Comments
20	Number 0	0	CD Only
	Number 1	1	
	Number 2	2	
	Number 3	2	
	Number 4	4	
	Number 5	5	
	Number 6	6	
	Number 7	7	
	Number 8	8	
	Number 9	9	
	Repeat	29	
	Next Track	32	
	Previous Track	33	
	Program	41	
	Eject	45	
	Pause	48	
	Scan Back	50	
	Scan Forward	52	
	Play	53	
	Stop	54	
Clear	58		