


ARCAM

F·MJ AVR500 / AVR600 / AV888

HANDBOOK AVR surround amplifier / AV processor



Safety guidelines

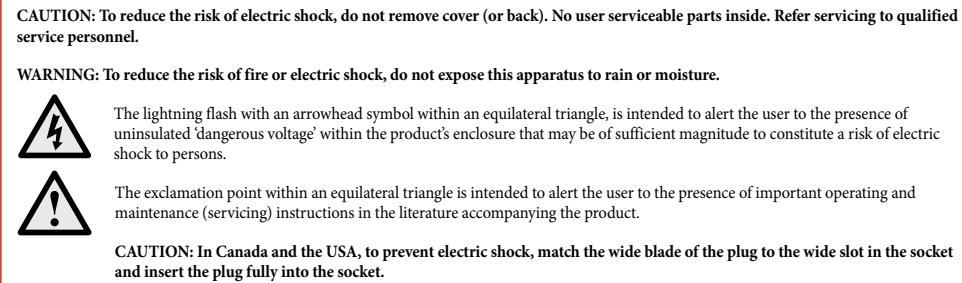

Many of these items are common sense precautions but, for your own safety and to ensure that you do not damage the unit, we recommend that you read them.

Important safety instructions

This product is designed and manufactured to meet strict quality and safety standards. However, you should be aware of the following installation and operation precautions.

1. Take heed of warnings and instructions

You should read all the safety and operating instructions before operating this equipment. Retain this handbook for future reference and adhere to all warnings in the handbook or on the equipment.

2. Water and moisture

The presence of electricity near water can be dangerous. Do not use the equipment near water – for example next to a bathtub, washbowls, kitchen sink, in a wet basement or near a swimming pool, etc.

3. Object or liquid entry

Take care that objects do not fall and liquids are not spilled into the enclosure through any openings. Liquid-filled objects such as vases should not be placed on the equipment.

4. Placing the equipment

Only use a rack or shelf that is stable and strong enough to support the weight of this equipment.

5. Ventilation

Do not place the equipment on a bed, sofa, rug or similar soft surface, or in an enclosed bookcase or cabinet, since ventilation may be impeded.

6. Heat

Locate the equipment away from naked flames or heat-producing appliances such as radiators, stoves or other appliances that produce heat.

7. Climate

The equipment has been designed for use in moderate climates and in domestic situations. Unplug this equipment during lightning storms to prevent possible damage from a strike or mains surge.

8. Cleaning

Unplug the unit from the mains supply before cleaning. The case should normally only require a wipe with a soft, lint-free cloth. Do not use chemical solvents for cleaning. We do not advise the use of furniture cleaning sprays or polishes as they can cause permanent white marks.

9. Power sources

Only connect the equipment to a power supply of the type described in the operating instructions or as marked on the equipment.

The primary method of isolating the equipment from the mains supply is to remove the mains plug. The equipment must be installed in a manner that makes disconnection possible.

10. Power-cord protection

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to the point where they exit from the equipment.

11. Power lines

Locate any outdoor antenna/aerial away from power lines.

12. Speaker connections

Any speakers must be connected to the unit using high quality class II wire (i.e. no connection to Earth should be made). Failure to observe this precaution may cause the unit to become damaged.

13. Non-use periods

If the equipment is not being used for an extended period, we recommend that you unplug the power cord of the equipment from the outlet, to save power.

14. Abnormal smell

If an abnormal smell or smoke is detected from the equipment, turn the power off immediately and unplug the equipment from the wall outlet. Contact your dealer and do not reconnect the equipment.

15. Servicing

You should not attempt to service the equipment. Contact your dealer to arrange servicing.

16. Damage requiring service

The equipment should be serviced by qualified service personnel when:

- A. the power-supply cord or the plug has been damaged, or
- B. objects have fallen into, or liquid has spilled into the equipment, or
- C. the equipment has been exposed to rain, or

Class II product

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth ('ground' in the U.S.).


- D. the equipment does not appear to operate normally or exhibits a marked change in performance, or
- E. the equipment has been dropped or the enclosure damaged.

Safety compliance

This equipment has been designed to meet the IEC/EN 60065 international electrical safety standard.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

consignes de sécurité

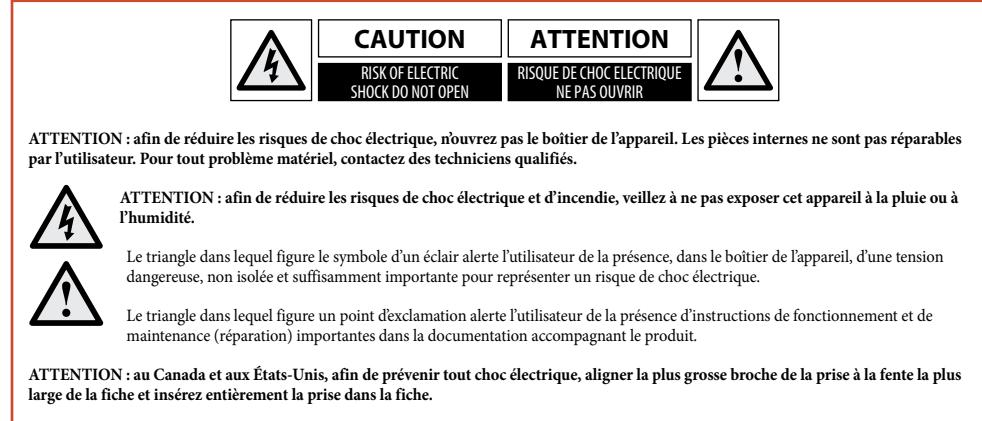

Bon nombre des consignes ci-dessous sont de simples précautions de bon sens. Nous vous recommandons toutefois de les lire pour votre propre sécurité et pour celle de l'appareil.

Instructions de sécurité importantes

Cet appareil a été conçu et fabriqué conformément aux normes de qualité et de sécurité les plus strictes. Vous devez cependant observer les précautions qui suivent lors de son installation et de son utilisation.

1. Avertissements et consignes

Il est impératif de lire les consignes de sécurité et d'utilisation avant de mettre cet appareil en marche. Conservez ce manuel pour vous y référer par la suite et respectez scrupuleusement les avertissements figurant dans ce manuel ou sur l'appareil lui-même.

2. Eau et humidité

L'installation d'un appareil électrique à proximité d'une source d'eau présente de sérieux risques. Il ne faut donc pas installer l'appareil près d'une baignoire, d'un lavabo, d'un évier, dans un sous-sol humide, près d'une piscine, etc.

3. Chute d'objets ou infiltration de liquides

Veillez à ne pas laisser tomber d'objets ni couler de liquides à travers les ouvertures de l'appareil et ne placez pas sur l'appareil d'objet contenant du liquide, tel qu'un vase par exemple.

4. Placement de l'équipement

Utilisez uniquement une étagère assez stable et solide pour supporter le poids de cet équipement.

5. Ventilation

Évitez de placer l'appareil sur un lit, un canapé, un tapis ou une surface similaire instable ou dans une bibliothèque ou un meuble fermé. Ceci risquerait de nuire à la ventilation du système.

6. Exposition à la chaleur

Ne placez pas l'appareil à proximité d'une flamme nue ou de tout dispositif produisant de la chaleur : radiateur, poêle ou autre.

7. Conditions climatiques

L'appareil est conçu pour fonctionner dans des climats modérés. Déconnectez cet équipement pendant un orage pour éviter tous dommages possibles d'un impact de la foudre ou de surtension.

8. Nettoyage

Mettez l'appareil hors-tension avant de le nettoyer. Pour l'entretien du boîtier, utilisez uniquement un chiffon doux, humide et non pelucheux. N'utilisez pas de solvant chimique.

L'emploi d'aérosols ou de produits de nettoyage pour meubles est déconseillé, car le passage d'un chiffon humide risquerait de laisser des traces blanches et indélébiles.

9. Alimentation secteur

Branchez l'appareil uniquement sur une alimentation secteur du type mentionné dans le manuel d'utilisation ou indiqué sur l'appareil lui-même.

Le principal moyen d'isoler l'appareil du secteur est d'utiliser l'interrupteur situé à l'arrière de l'appareil. Cet appareil doit être installé de façon à pouvoir être débranché si nécessaire.

10. Protection des câbles d'alimentation secteur

Veillez à ce que les câbles d'alimentation ne se trouvent pas dans un lieu de passage ou bloqués par d'autres objets. Cette règle s'applique plus particulièrement aux prises et câbles d'alimentation et à leurs points de sortie de l'appareil.

11. Câbles haute tension

Évitez de monter l'antenne extérieure de l'appareil à proximité de câbles haute tension.

12. Branchement des haut-parleurs

Tous les haut-parleurs doivent être connectés à l'AVR600 avec du câble de classe II (aucune mise à la terre nécessaire). Le non-respect de cette précaution est susceptible d'endommager l'appareil.

13. Périodes de non-utilisation

Si l'appareil possède une fonction de mise en veille, un courant faible continuera de circuler lorsqu'il sera réglé sur ce mode. Débrancher le cordon secteur de la prise murale si l'appareil doit rester inutilisé pendant une période prolongée.

14. Odeur suspecte

Arrêtez et débranchez immédiatement l'appareil en cas d'émission de fumée ou d'odeur anormale. Contactez immédiatement votre revendeur.

Class II produit



Ce produit est un appareil électrique à isolation double (appareil de classe II). Il a été conçu pour ne pas nécessiter de connexion de sécurité à la terre (ou à la masse).

French

Contents

safety guidelines.....	E-2
welcome.....	E-3
before you begin...	E-4
audio/video connections	E-7
AVR600/AV888 rear panel connectors .E-8	
Connection guide - AVR600/AV888.....	E-12
AVR500 rear panel connectors.....	E-14
Connection guide – AVR500.....	E-18
radio connectors	E-20
other connectors.....	E-22
speakers.....	E-23
operation	E-25
front panel operation.....	E-27
remote control.....	E-28
essential setup.....	E-36
auto speaker setup.....	E-37
setup menus	E-38
video & audio connection settings	E-39
decoding modes	E-46
Dolby volume	E-48
tuner operation.....	E-50
network/usb operation	E-52
external amplifiers.....	E-53
multi-room set up	E-54
Multi-room connection guide	E-55
customising the CR102.....	E-56
Command summary	E-59
Device codes	E-59
troubleshooting	E-60
specifications	E-62
product guarantee	E-63
device code tables	64

Thank you and congratulations for purchasing your Arcam FMJ AVR500/AVR600 surround amplifier or AV888 AV processor.

Arcam has been producing specialist audio products of remarkable quality for over three decades and the new FMJ products are the latest in a long line of award winning Hi-Fi. The design of the FMJ range draws upon all of Arcam's experience as one of the UK's most respected audio companies, to produce Arcam's best performing range of products yet – designed and built to give you years of watching and listening enjoyment.

This handbook is intended to give you a detailed guide to using the AVR500/AVR600 surround amplifier and the closely related AV888 AV processor. It starts by giving advice on installation, moves on to describe how to use the product and finishes with additional information on the more advanced features. Use the contents list shown on this page to guide you to the section of interest.

We hope that your FMJ product will give you years of trouble-free operation. In the unlikely event of any fault, or if you simply require further information about Arcam products, our network of dealers will be happy to help you. Further information can also be found on the Arcam website at www.arcam.co.uk.

The FMJ development team

Professional Installation?

It may be that the unit has been installed and set up as part of your Hi-Fi installation by a qualified Arcam dealer. In this case, you may wish to skip the sections of this handbook dealing with installation and setting up, and move directly to the sections dealing with using the unit. Use the Contents list to guide you to these sections.

DIY setup?

The AVR500, AVR600 and AV888 are powerful and sophisticated items of AV equipment. If you are setting a unit up yourself, it is recommended that you read this handbook thoroughly before beginning. For instance, correct speaker configuration and placement is a key to getting the most out of your FMJ product and making sure that all the elements of your system work in harmony.

welcome

English

before you begin...

The AVR500/AVR600 is a high-quality and high-performance home-cinema processor and amplifier built to Arcam's quality design and manufacturing standards. The closely related AV888 is a home-cinema processor which provides multichannel input to an external amplifier (such as Arcam's P777). They both combine digital processing with high-performance audio and video components to form the locus of an unrivalled home-entertainment centre.

The AVR500/AVR600/AV888 allow switching and control of eight analogue and seven digital sources. The AVR500 and AVR600 have internal AM, FM and DAB* radio and the AVR600 can accept a SiriusConnect™ Home Tuner input. The AVR600, AV888 and optionally the AVR500* can accept networked and USB audio sources – making it an ideal hub for both home-cinema and two-channel stereo systems.


**DAB and network/USB connectivity are optional for the AVR500, please contact your dealer for information.*

Since many of these source components are also capable of generating video signals, the AVR500/AVR600 receiver and the AV888 processor units include broadcast-quality switching for HDMI, Composite, S-Video, RGB and Component video signals. There are audio and video outputs for PVR and VCR recording, as well as two digital outputs for digital recording of digitised audio sources (AVR600/AV888 only). DVD-Audio and SACD can be connected via the multichannel input. Control of the AVR500, AVR600 or the AV888 is either by front panel control buttons, IR remote control or RS232 port.

The CR102 remote control supplied with either unit is an eight-device 'universal' learning remote control which is simple to use, and once set up is able to control a complete system. It can be programmed using its vast internal code library to control CD and DVD players, PVRs, TVs and other devices.

The installation of the AVR500, AVR600 or AV888 in a listening room is an important process which requires care at every stage. For this reason, the installation information is very comprehensive and should be followed carefully to achieve an unrivalled level of performance.

The AVR500/AVR600 surround amplifier and AV888 AV processor are designed to produce a level of performance that will truly bring music and movies to life.

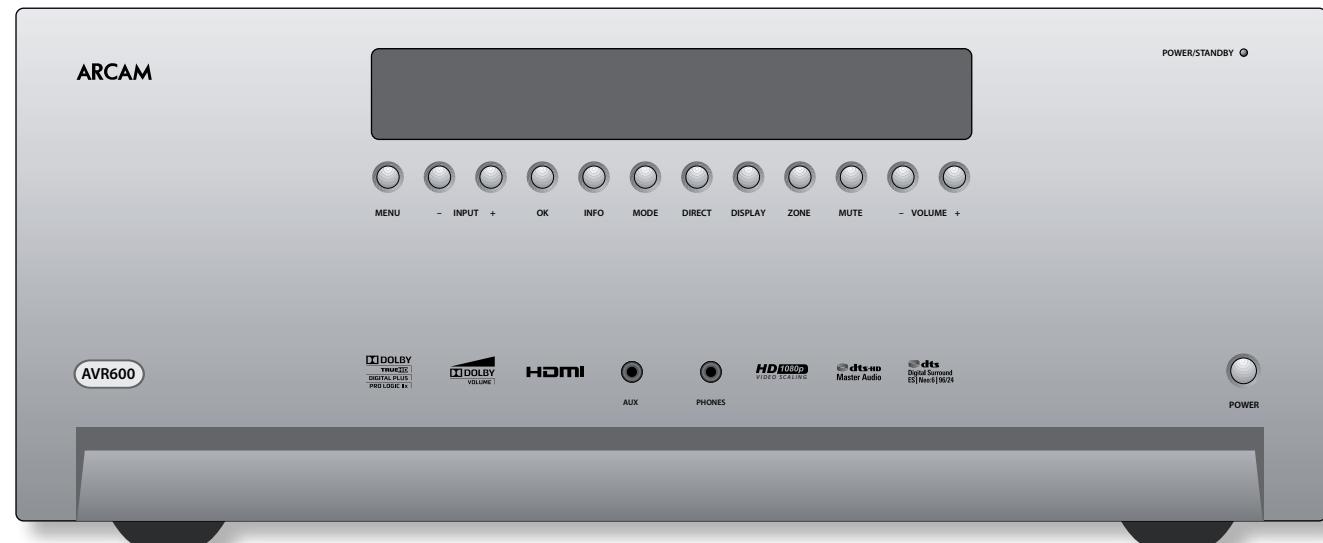

Placing the unit

- Place the unit on a level, firm surface, avoiding direct sunlight and sources of heat or damp.
- Do not place the unit on top of a power amplifier or other source of heat.
- Do not place the unit in an enclosed space such as a bookcase or closed cabinet unless there is good provision for ventilation. The unit will run warm during normal operation.
- Do not place any other component or item on top of the amplifier as this may obstruct airflow around the heat-sink, causing the amplifier to run hot. (The unit placed on top of the amplifier would become hot, too.)
- Make sure the remote-control receiver on the front panel display is unobstructed, otherwise this will impair the use of the remote-control. If line-of-sight is impractical, a remote-control repeater can be used with the rear panel connector (see page 17).
- Do not place your record deck on top of this unit. Record decks are very sensitive to the noise generated by mains power supplies which will be heard as a background 'hum' if the record deck is too close.

Power

The amplifier is supplied with a moulded mains plug already fitted to the lead. Check that the plug supplied fits your supply – should you require a new mains lead, please contact your Arcam dealer.

If your mains supply voltage or mains plug is different, please contact your Arcam dealer immediately.

The amplifier can be switched for operation between 220–240V (switch position 230V) and 110–120V (switch position 115V).

NOTE

Ensure that the unit is switched off and the power lead removed before changing the position of the voltage range switch.

Push the IEC plug end of the power cable into the socket on the back of the amplifier, making sure that it is pushed in firmly. Plug the other end of the cable into your mains socket and, if necessary, switch the socket on.

The amplifier can be turned on using the **POWER** switch on the front panel. While switched on, the front panel LED will glow green.

Standby power

The unit can be switched into standby mode using the \textcircled{O} button on the CR102 remote control. While in standby mode the front panel LED will glow red and power consumption is around 3 watts.

While in Standby mode, it may be possible to hear a slight residual hum coming from the mains transformer inside the amplifier. This is perfectly normal. However, if the unit is to be left unused for an extended period, we recommend that you disconnect it from the mains supply to save power.

Interconnect cables

We recommend the use of high-quality screened cables that are designed for the particular application. Other cables will have different impedance characteristics that will degrade the performance of your system (for example, do not use cabling intended for video use to carry audio signals). All cables should be kept as short as is practically possible.

It is good practice when connecting your equipment to make sure that the mains power-supply cabling is kept as far away as possible from your audio cables. Failure to do so may result in unwanted noise in the audio signals.

For information on speaker cabling, please refer to the 'Speakers' section, beginning on page 23.

Radio interference

The AVR500, AVR600 and AV888 are audio devices containing microprocessors and other digital electronics. They have been designed to very high standards of electromagnetic compatibility.

This is a Class A product. In a domestic environment this product may cause radio interference, in which case the user may be required to take adequate measures.

If the unit causes interference to radio or television reception (which can be determined by switching the unit off and on), the following measures should be taken:

- Re-orient the receiving antenna or route the antenna cable of the affected receiver as far as possible from the unit and its cabling.
- Relocate the receiver with respect to the unit.
- Connect the affected device and the unit to different mains outlets.

If the problem persists, please contact your Arcam dealer.

Trademark acknowledgements

Arcam is a registered trademark of A & R Cambridge Ltd.

	Dolby Volume Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
	Dolby True HD, Digital, Digital Plus, PL IIx Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.
	DTS-HD Master Audio Manufactured under license under U.S. Patent #s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTS-HD Master Audio are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved. DTS-HD High Resolution Audio Manufactured under license under U.S. Patent #s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,212,872; 7,333,929 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark and the DTS logos, Symbol, DTS-HD, DTS-HD High Resolution Audio and DTS-HD High Res Audio are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.
	DTS Digital Surround ES Neo:6 96/24 Manufactured under license under U.S. Patent #s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,003,467; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS, DTS Digital Surround, ES, and Neo:6 are registered trademarks and the DTS logos, Symbol and DTS 96/24 are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.
	AAC/AAC Plus aacPlus is a trademark of Coding Technologies. See www.codingtechnologies.com for more information.
	FLAC FLAC Decoder Copyright © 2000, 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008 Josh Coalson Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: - Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. - Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. - Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
	Ogg/Vorbis Ogg/Vorbis Decoder Copyright © 2002, Xiph.org Foundation Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: - Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. - Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. - Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
	WMA & Microsoft DRM10 This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary Content providers are using the digital rights management technology for Windows Media contained in this device ("WM-DRM") to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. This device uses WM-DRM software to play Secure Content ("WM-DRM Software"). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content ("Secure Content Owners") may request that Microsoft revoke the WM-DRM Software's right to acquire new licenses to copy, display and/or play Secure Content. Revocation does not alter the WM-DRM Software's ability to play unprotected content. A list of revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocation lists onto your device on behalf of Secure Content Owners.
	vTuner This product is protected by certain intellectual property rights of NEMS and BridgeCo. Use or distribution of such technology outside of this product is prohibited without a license from NEMS and BridgeCo or an authorized subsidiary.
	MP3 MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia
	iPod iPod is a trademark of Apple Inc., registered in the US and other countries.
	Sirius SIRIUS, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. All rights reserved. Service not available in Alaska and Hawaii.

audio/video connections

Before connecting your AVR500/AVR600 or AV888 and power amplifier (e.g. the Arcam P777) to your source components and speakers, please read through the next few pages which will explain all the input and output connectivity that is available. The 'Speakers' section explains how to connect up your speakers to avoid damage to the amplifier and how to arrange your speakers for best performance.

General

The inputs are named to make it easier to reference connected devices (e.g. 'DVD' or 'VCR'). They all have the same input circuit (with the exception of the 'PHONO' input), so there is no reason why you should not connect a different device to any of the inputs. For example, if you had two DVD players and the AV input was not being used, then the second DVD player could be connected to the AV input.

When connecting a video source, its audio must be connected to the corresponding sockets. For example, if you had a satellite decoder plugged into a SAT video input, the audio must be connected to the SAT audio inputs!

The hierarchy for video connections for best quality is as follows;

- HDMI
- Component/RGB
- S-Video
- Composite.

You should connect as many of these as possible. The unit will automatically select the best quality connection for the source available. For any video source to be available in Zone 2 you must have an S-Video or Composite connection between the unit and the source.

Making connections

- Wherever possible, connect both the analogue and digital outputs of digital sources. This enables use of a digital input for the main zone and the corresponding analogue input for recording onto an analogue tape deck, VCR or PVR, or for the Zone 2 or 3 output.
- Take care to place cables as far from any power supply cabling as is practicable, to reduce hum and other noise problems.

Important notes about Component/RGB video inputs and outputs

- When you connect your devices to these connectors, take care to follow the letter/colour coding for each input. No damage will occur due to incorrect connection but incorrectly coloured or unstable pictures will result.
- The Component video inputs have sufficient bandwidth for NTSC (525/60) or PAL (625/50) video and HDTV video signals.

Product differences and options

Product operation is broadly similar for the AVR500, AVR600 and AV888, however, the AVR600 & AV888 have a greater variety of input connectors and a different rear panel layout. For this reason, two sections of connection diagrams are presented. Please see Page 8 for the AVR600 & AV888. For the AVR500 please skip ahead to Page 14.


AVR600 AV888 rear panel connectors

Voltage select

Ensure the voltage selected matches your local power supply

Power inlet

Connect the correct mains cable here

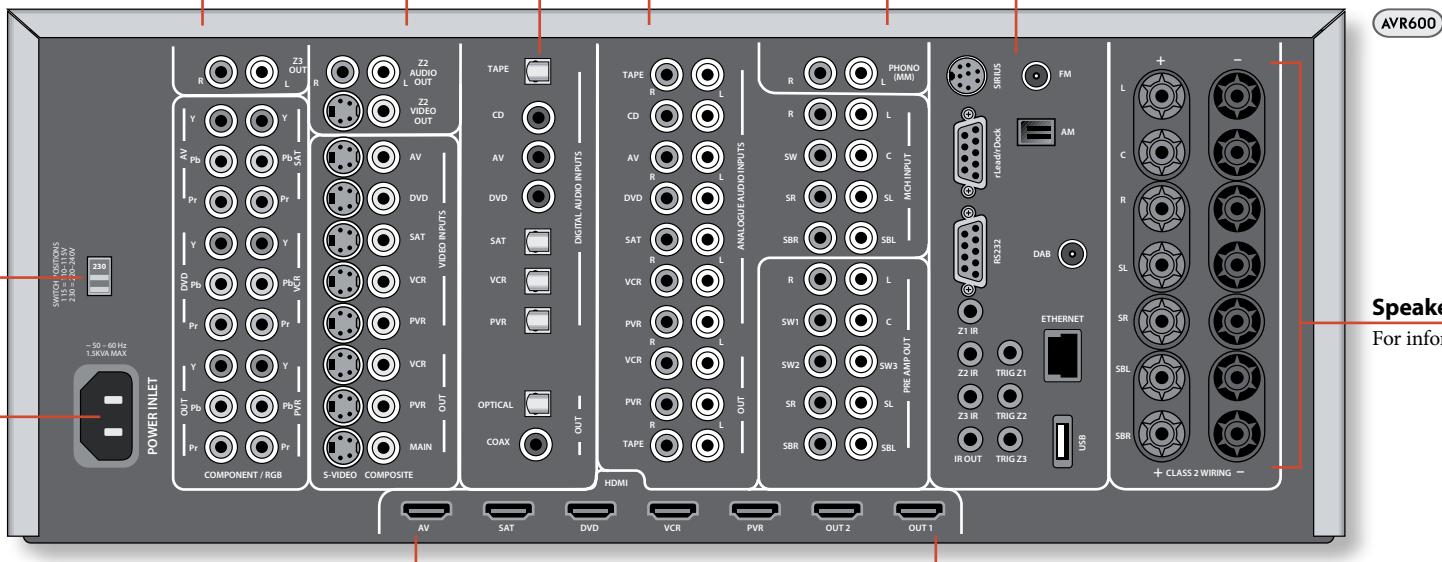

AVR600

Speaker connectors


For information, see page 23.

HDMI

For information, see page 9.

NOTE

Please read the 'Placing the unit', 'Power' and 'Interconnect cables' sections on page 5 before connecting up your AVR600 or AV888!

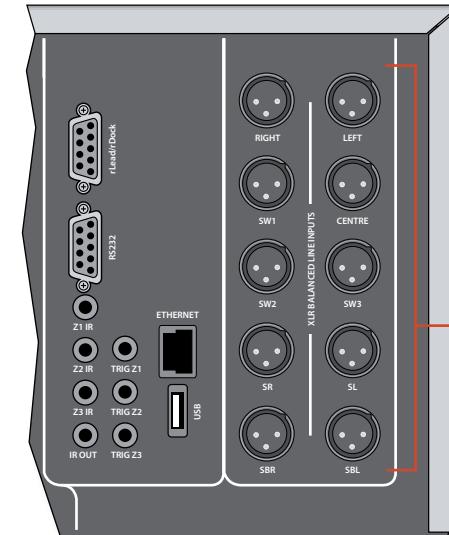


AV888

XLR audio output

Balanced XLR connectors for each of seven channels, to an XLR-equipped amplifier.

For information, see page 53.



HDMI connectors

AV, SAT, DVD, VCR, PVR

Connect the HDMI video outputs of your source equipment to these corresponding HDMI inputs.

OUT 1

Connect this output to the HDMI video input of your main zone display device.

OUT 2

Connect this output to the HDMI video input of your second display device or to another HDMI display device in a second living space. As the unit has only one processed video path, this signal will be a copy of the signal on OUT 1.


NOTE

All Zone 1 analogue video outputs will be disabled if an HDMI digital video source is selected.

Zone 3 connectors

Z3 OUT

Connect these analogue audio outputs to your Zone 3 equipment. See 'Multi-room Setup' on page 54 for information.

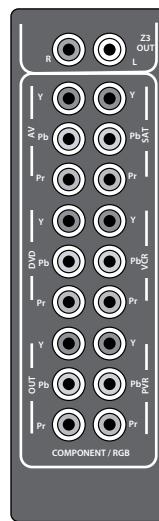

Component/RGB video connectors

These inputs are suitable for connection to source devices which output Component (YUV or YPbPr) or RGB high quality analogue video signals. These signals are usually available from DVD players, set-top boxes or games consoles.

If you are connecting up to an RGB source you will also need to connect the source's Composite output to the unit's Composite input to act as a video sync. The Composite signal should be on the same named input as the RGB signals.

RGB video outputs on source equipment are often on SCART connectors. You will need to use a SCART to 'RGB+Sync on phono' breakout cable, available from your Arcam dealer.

NOTE

When setting up the menus (later in this manual), you will need to select whether the three-wire high quality video input is Component or RGB for each input. This is done on the 'HQ Video In' line in the Input Config menu. Failure to do this can result in a green looking picture or a picture that is unstable.

AV, DVD, SAT, VCR, PVR


Connect the Component video outputs of your source equipment to these inputs.

OUT

Connect this output to the Component video input of your display device.

NOTE

Analogue RGB video output is not available from the AVR500, AVR600 or AV888. The analogue three-wire high quality video output is always configured as Component video.

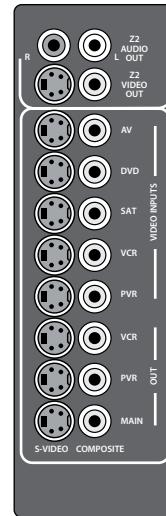

Zone 2 connectors

Z2 AUDIO OUT, Z2 VIDEO OUT

Connect these analogue audio and video outputs to your Zone 2 equipment. See 'Multi-room Setup' on page 54 for information.

S-Video and Composite connectors

AV, DVD, SAT, VCR, PVR

Connect these inputs to the S-Video and Composite outputs of your available source equipment.

VCR OUT, PVR OUT

These are recording outputs. Connect these to the 'S-Video in' or 'Composite in' sockets (usually labelled 'RECORD') on your recording device.

MAIN OUT

Connect this output to the S-Video or Composite sockets on your primary Zone 1 display.



Digital audio connectors

TAPE, CD, AV, DVD, SAT, VCR, PVR

Connect these inputs to the digital outputs of your available source equipment.


OPTICAL, COAX

Connect the optical or coaxial output to your digital recording device such as CD-R, digital VCR or Minidisc player.

When a digital source is selected, the digital output will send an exact copy of the incoming digital signal. For example, for a 5.1 digital source, the digital output will also be in 5.1 format.

When an analogue-only source is selected, this is digitized by the unit and routed to the digital outputs.

These outputs are muted if a source is selected where the HDMI connection is used and is transmitting HD audio. The digital audio from the HDMI link will not be routed to these outputs.

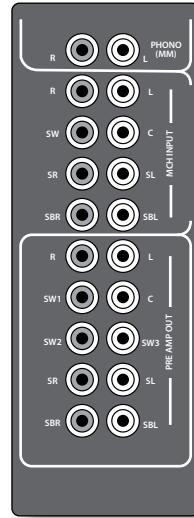

Phono

This input can be connected directly to a record deck which has a direct output from a moving magnet (MM) cartridge.

MCH input

This multichannel analogue audio input can be connected to a source device which outputs surround sound on its analogue outputs. Such devices typically include DVD-Audio and SACD players. This input does not pass through any of the audio processing in the unit, therefore functions such as speaker size and distance from the listening

position should be copied from the Setup menus into the Setup menus of your multichannel source. Note however that speaker level trims *are* applied to the MCH input on the unit. Therefore speaker level trim settings on multichannel source equipment should be left unset at zero.

Analogue pre-amplifier outputs

All pre-amplifier analogue outputs are buffered, have a low output impedance, are at line level and follow the Zone 1 volume control setting. They are able to drive long cables or several inputs in parallel if required.

For more information on connecting speakers or additional power amplifiers, see page 23 and 53.



Analogue audio inputs

TAPE, CD, AV, DVD, SAT, VCR, PVR

Connect the left and right inputs to the left and right outputs of your source equipment.

Analogue record outputs

VCR OUT, PVR OUT, TAPE OUT

Connect the left and right outputs to the left and right input sockets of your cassette deck, PVR or VCR (usually labelled 'RECORD'). The PVR and VCR connectors may be used for a second and third cassette deck. These outputs are fixed at full line level.

Front panel AUX input


The front panel AUX input can be used as an analogue or optical digital input.

For analogue sources, use a stereo 3.5mm lead; for digital sources use a 3.5mm optical lead. The front input is also used for the auto-setup microphone input.

Front panel PHONES socket


This socket accepts headphones with an impedance rating between 32Ω and 600Ω, fitted with a 3.5mm stereo jack plug. The headphone socket is always active, except when AVR600/AV888 is muted.

When the headphone jack is inserted, the speaker outputs and analogue pre-amplifier outputs are automatically muted.

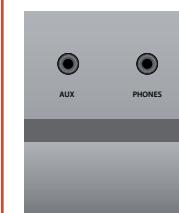

Trigger connectors


The trigger connectors (**TRIG Z1**, **TRIG Z2** and **TRIG Z3**) provide an electrical signal whenever the amplifier is switched on and the relevant zone enabled.

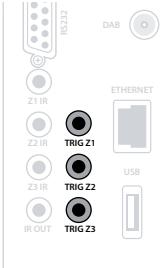

The trigger signal can be used to switch on and off compatible pieces of home entertainment equipment, for example, you could set up a trigger to turn on your television and DVD player whenever the unit was switched on.

There are three trigger output sockets on the unit, each capable of outputting a 12V, 70mA switching signal. The socket is designed for mono 3.5mm jacks: tip is the trigger output, sleeve is ground.

is designed for mono 3.5mm jacks: tip is the trigger output, sleeve is ground.

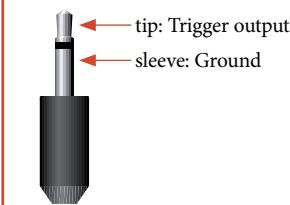

TRIG Z1

Use for remotely turning on and off power amps or source equipment for Zone 1. On = 12V, Off = 0V.

TRIG Z2

Use for remotely turning on and off power amps or source equipment for Zone 2. On = 12V, Off = 0V.

TRIG Z3

Use for remotely turning on and off power amps or source equipment for Zone 3. On = 12V, Off = 0V.



NOTE

Sockets with the prefix 'Z2' or 'Z3' refer to connections used in multi-room installation. For more information on these connectors, see page 54.

Infra-red (IR) connectors

The infra-red inputs (**Z1 IR**, **Z2 IR** and **Z3 IR**) allow the connection of external IR receivers, either when the unit's front panel IR receiver is fully or partially obstructed or to allow the use of a remote control in Zone 2 or Zone 3.

There are three IR inputs on the unit, each designed for stereo or mono 3.5mm jacks. Tip is the modulated signal, sleeve is ground.

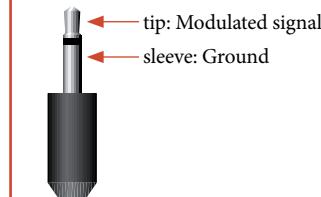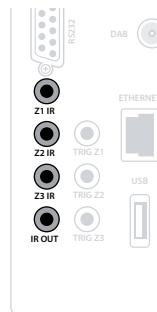

Z1 IR

This input is intended for use with a local IR receiver when the front panel of the unit is blocked.

Connecting an IR receiver to **Z1 IR** will disable the front panel IR receiver to prevent problems with multiple commands if the front panel IR receiver is only partially obstructed.

Z2 IR

This input is intended for use with an IR receiver in Zone 2 to allow remote control of the unit from a second room.

Z3 IR

This input is intended for use with an IR receiver in Zone 3 to allow remote control of the unit from a third room.

IR OUT

This output is an electrical combination of the **Z1** (or front panel) + **Z2** + **Z3** infra-red signals above. It can be used to drive external IR emitters or can be connected directly to other Arcam equipment which have an IR input. This function can be useful as an IR 'repeater' so that someone in any of the zones can control the functions of a CD player in the main zone, for example. Tip is the modulated electrical IR signal, sleeve is ground.

A supplier of infra-red receivers and emitter accessories and systems is Xantech. See www.xantech.com for more information, or ask your Arcam dealer.

NOTE

The IR inputs on the unit are designed for modulated signals. If the external IR receiver demodulates the IR signal, it will not work. Also the unit does not provide power for external receivers on the IR jack, therefore an external power source will be required.

Connection guide - AVR600/AV888

AVR600

DVD player

The diagram shows how to make audio and video connections from a typical DVD player.

The preferred video hook-up, in order of preference is:

- use the HDMI connector (if HDMI output is provided by the player), otherwise connect the three Component or four RGB+Sync video connectors.
- use the S-Video connection if HDMI or Component /RGB+Sync outputs are not provided by your player.
- use the Composite connection if HDMI, Component/RGB+Sync or S-Video are not provided by your player.

In each case, connect the video inputs labelled **DVD** on the unit.

The preferred audio hook-up is using the coaxial digital connector (usually marked **DIGITAL AUDIO OUT**), in addition to the coaxial analogue outputs for left and right channels.

In each case, use the audio inputs labelled **DVD** on the unit.

Satellite receiver


A satellite receiver is connected in the same way as a DVD player, with the same order of preference according to the outputs provided by the satellite receiver.

In each case, use the inputs labelled **SAT** on the unit. Note that digital audio input from a satellite receiver sometimes requires a coaxial/TOSLINK (digital connector) interconnect cable, as some satellite receivers do not implement audio over HDMI properly or at all.

CD player

Connect the digital audio output (if provided by the CD player) to the digital **CD** input of the unit, using a high quality coaxial interconnect cable.

Connect the right and left analogue audio outputs of the CD player to the analogue **CD** inputs of the unit, using a pair of high quality coaxial interconnect cables.

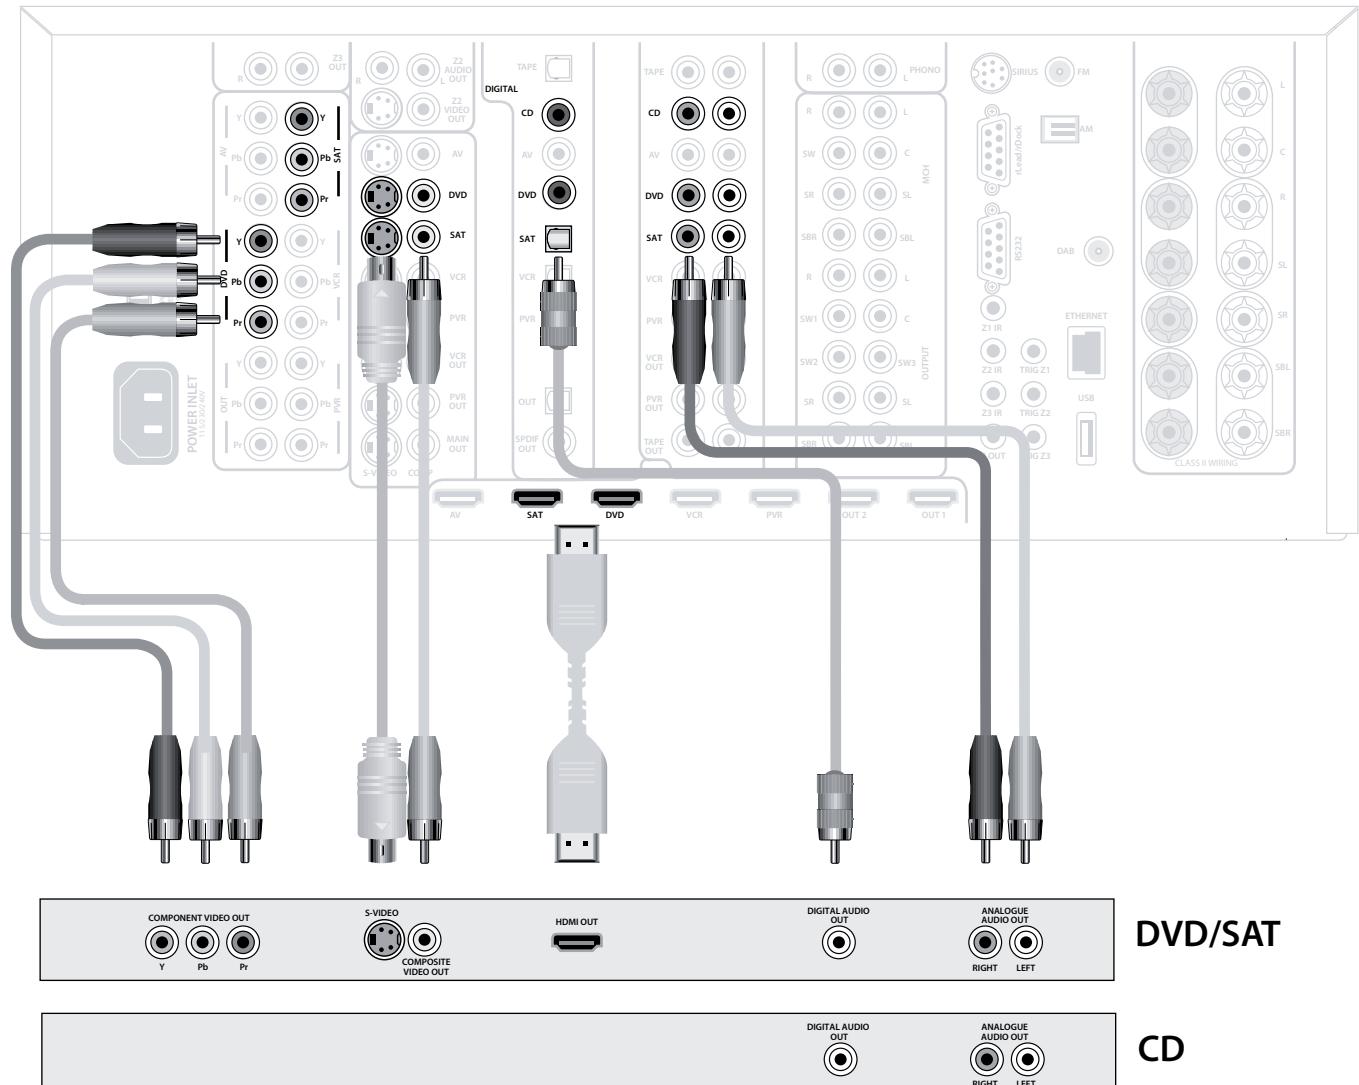


Connecting an iPod using the Arcam rDock

The combination of the AVR600/AV888 and Arcam's optional rDock or rLead accessory provides a great platform for your iPod.

Connect the rDock as shown, power on the rDock, slot in your iPod and select **IPOD** as the source. Set the **Audio In iPod** item in the 'General Setup' menu to the audio input that you have used to connect the rDock. For video connections, select the video source you have used for the iPod input in the 'Video Inputs' menu.

Navigating through music and podcasts on your iPod is simple using the CR102 remote, with text appearing on the front panel display.

More information is given in the **rDock quick start guide** (or **rLead quick start guide**) supplied with these accessory units.

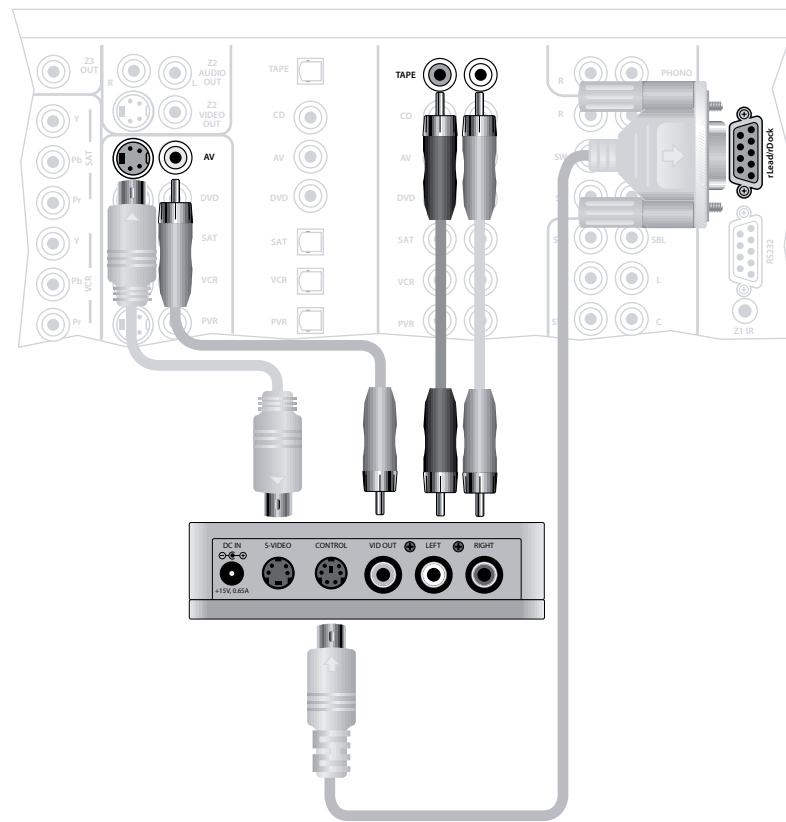

AVR500 rear panel connectors

Voltage select

Ensure the voltage selected matches your local power supply

Power inlet

Connect the correct mains cable here

Video connectors

Component, S-Video and Composite connectors, see page 15.

Zone 2 connectors, see page 15.

Digital connectors

Optical and electrical digital audio connectors, see page 16.


Audio connectors

Two-channel and multichannel, see page 16.

Aerials, control and communication

FM/AM radio, DAB radio (optional), rLead/rDock, RS232, Network/USB (optional), IR and trigger connectors, see page 20.

AVR500

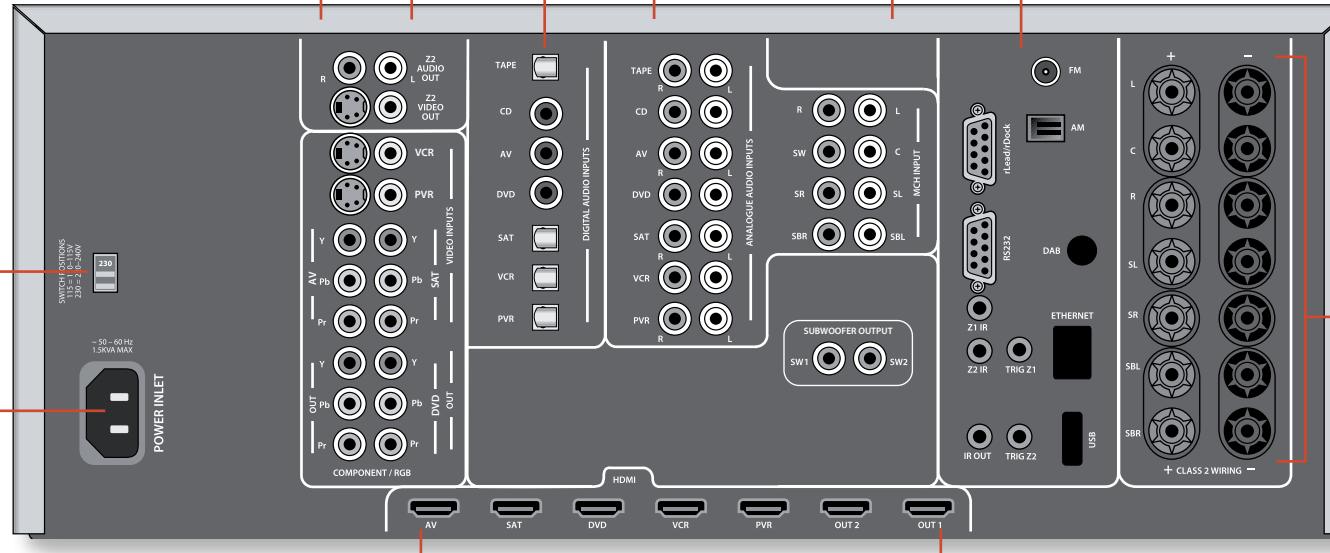


HDMI

For information, see page 15.

NOTE

Please read the 'Placing the unit', 'Power' and 'Interconnect cables' sections on page 5 before connecting up your AVR500!



HDMI connectors

AV, SAT, DVD, VCR, PVR

Connect the HDMI video outputs of your source equipment to these corresponding HDMI inputs.

OUT 1


Connect this output to the HDMI video input of your main zone display device.

OUT 2

Connect this output to the HDMI video input of your second display device or to another HDMI display device in a second living space. As the unit has only one processed video path, this signal will be a copy of the signal on OUT 1.

NOTE

All Zone 1 analogue video outputs will be disabled if an HDMI digital video source is selected.

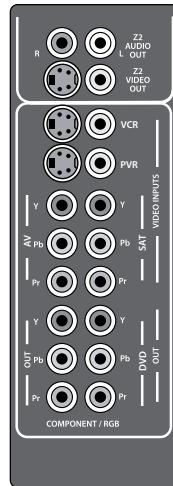

Zone 2 connectors

Z2 AUDIO OUT, Z2 VIDEO OUT

Connect these analogue audio and video outputs to your Zone 2 equipment. See 'Multi-room Setup' on page 50 for information.

S-Video and Composite connectors

VCR, PVR

Connect these inputs to the S-Video and Composite outputs of your available source equipment.

Component/RGB video connectors

These inputs are suitable for connection to source devices which output Component (YUV or YPbPr) or RGB high quality analogue video signals. These signals are usually available from DVD players, set-top boxes or games consoles.

If you are connecting up to an RGB source you will also need to connect the source's Composite output to the unit's Composite input to act as a video sync. The Composite signal should be on the same named input as the RGB signals.

RGB video outputs on source equipment are often on SCART connectors. You will need to use a SCART to 'RGB+Sync on phono' breakout cable, available from your Arcam dealer.

AV, SAT, DVD

Connect the Component video outputs of your source equipment to these inputs.

OUT

Connect this output to the Component video input of your display device.

NOTE

Analogue RGB video output is not available from the AVR500. The analogue three-wire high quality video output is always configured as Component video.

NOTE


When setting up the menus (later in this manual), you will need to select whether the three-wire high quality video input is Component or RGB for each input. This is done on the 'HQ Video In' line in the Input Config menu. Failure to do this can result in a green looking picture or a picture that is unstable.



Digital audio connectors

TAPE, CD, AV, DVD, SAT, VCR, PVR


Connect these inputs to the digital outputs of your available source equipment.

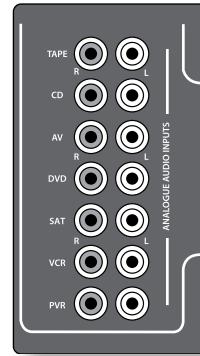

Analogue audio inputs

TAPE, CD, AV, DVD, SAT, VCR, PVR

Connect the left and right inputs to the left and right outputs of your source equipment.

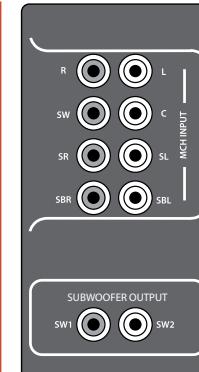

MCH input

This multichannel analogue audio input can be connected to a source device which outputs surround sound on its analogue outputs. Such devices typically include DVD-Audio and SACD players. This input does not pass through any of the audio processing in the unit, therefore functions such as speaker size and distance from the listening position should be copied from the Setup menus into the Setup

menus of your multichannel source. Note however that speaker level trims *are* applied to the MCH input on the unit. Therefore speaker level trim settings on multichannel source equipment should be left unset at zero.

Subwoofer outputs

Connect each of these outputs to the LFE input(s) on your subwoofer(s). The Subwoofer outputs are buffered, have a low output impedance, are at line level and follow the Zone 1 volume control setting. They are able to drive long cables or several inputs in parallel if required.

For more information on connecting speakers, see page 23.

Front panel AUX input

The front panel AUX input can be used as an analogue or optical digital input.

For analogue sources, use a stereo 3.5mm lead; for digital sources use a 3.5mm optical lead. The front input is also used for the auto-setup microphone input.

Front panel PHONES socket

This socket accepts headphones with an impedance rating between 32Ω and 600Ω , fitted with a 3.5mm stereo jack plug. The headphone socket is always active, except when AVR500 is muted.

When the headphone jack is inserted, the speaker outputs and analogue pre-amplifier outputs are automatically muted.




Trigger connectors

The trigger connectors (**TRIG Z1** & **TRIG Z2**) provide an electrical signal whenever the amplifier is switched on and the relevant zone enabled.



The trigger signal can be used to switch on and off compatible pieces of home entertainment equipment, for example, you could set up a trigger to turn on your television and DVD player whenever the unit was switched on.

There are two trigger output sockets on the unit, each capable of outputting a 12V, 70mA switching signal. The socket is designed for mono 3.5mm jacks: tip is the trigger output, sleeve is ground.

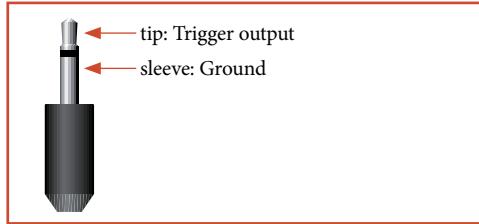

TRIG Z1

Use for remotely turning on and off power amps or source equipment for Zone 1. On = 12V, Off = 0V.

TRIG Z2

Use for remotely turning on and off power amps or source equipment for Zone 2. On = 12V, Off = 0V.


NOTE

Sockets with the prefix 'Z2' refer to connections used in multi-room installation. For more information on these connectors, see page 54.

Infra-red (IR) connectors

The infra-red inputs (**Z1 IR** and **Z2 IR**) allow the connection of external IR receivers, either when the unit's front panel IR receiver is fully or partially obstructed or to allow the use of a remote control in Zone 2.

There are two IR inputs on the unit, each designed for stereo or mono 3.5mm jacks. Tip is the modulated signal, sleeve is ground.

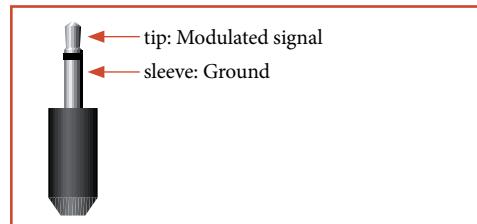

Z1 IR

This input is intended for use with a local IR receiver when the front panel of the unit is blocked.


Connecting an IR receiver to **Z1 IR** will disable the front panel IR receiver to prevent problems with multiple commands if the front panel IR receiver is only partially obstructed.

Z2 IR

This input is intended for use with an IR receiver in Zone 2 to allow remote control of the unit from a second room.

IR OUT

This output is an electrical combination of the Z1 (or front panel) + Z2 infra-red signals above. It can be used to drive external IR emitters or can be connected directly to other Arcam equipment which have an IR input. This function can be useful as an IR 'repeater' so that someone in any of the zones can control the functions of a CD player in the main zone, for example. Tip is the modulated electrical IR signal, sleeve is ground.

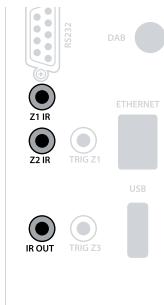

NOTE

The IR inputs on the unit are designed for modulated signals. If the external IR receiver demodulates the IR signal, it will not work. Also the unit does not provide power for external receivers on the IR jack, therefore an external power source will be required.

Connection guide – AVR500

AVR600

DVD player

The diagram shows how to make audio and video connections from a typical DVD player.

The preferred video hook-up, in order of preference is:

- use the HDMI connector (if HDMI output is provided by the player), otherwise connect the three Component or four RGB+Sync video connectors.

In each case, connect the video inputs labelled **DVD** on the unit.

The preferred audio hook-up is using the coaxial digital connector (usually marked **DIGITAL AUDIO OUT**), in addition to the coaxial analogue outputs for left and right channels.

In each case, use the audio inputs labelled **DVD** on the unit.

Satellite receiver

A satellite receiver is connected in the same way as a DVD player, with the same order of preference according to the outputs provided by the satellite receiver.

In each case, use the inputs labelled **SAT** on the unit.

Note that digital audio input from a satellite receiver sometimes requires a coaxial/TOSLINK (digital connector) interconnect cable, as some satellite receivers do not implement audio over HDMI properly or at all.


CD player

Connect the digital audio output (if provided by the CD player) to the digital **CD** input of the unit, using a high quality coaxial interconnect cable.

Connect the right and left analogue audio outputs of the CD player to the analogue **CD** inputs of the unit, using a pair of high quality coaxial interconnect cables.

VCR, Camcorder, Games Console etc.

Connect other video equipment with S-Video or Composite Video outputs to the S-Video or Composite Video inputs **VCR** or **PVR**. S-Video provides the best picture quality. Connect the right and left analogue audio outputs of the device to the equivalent analogue audio inputs.

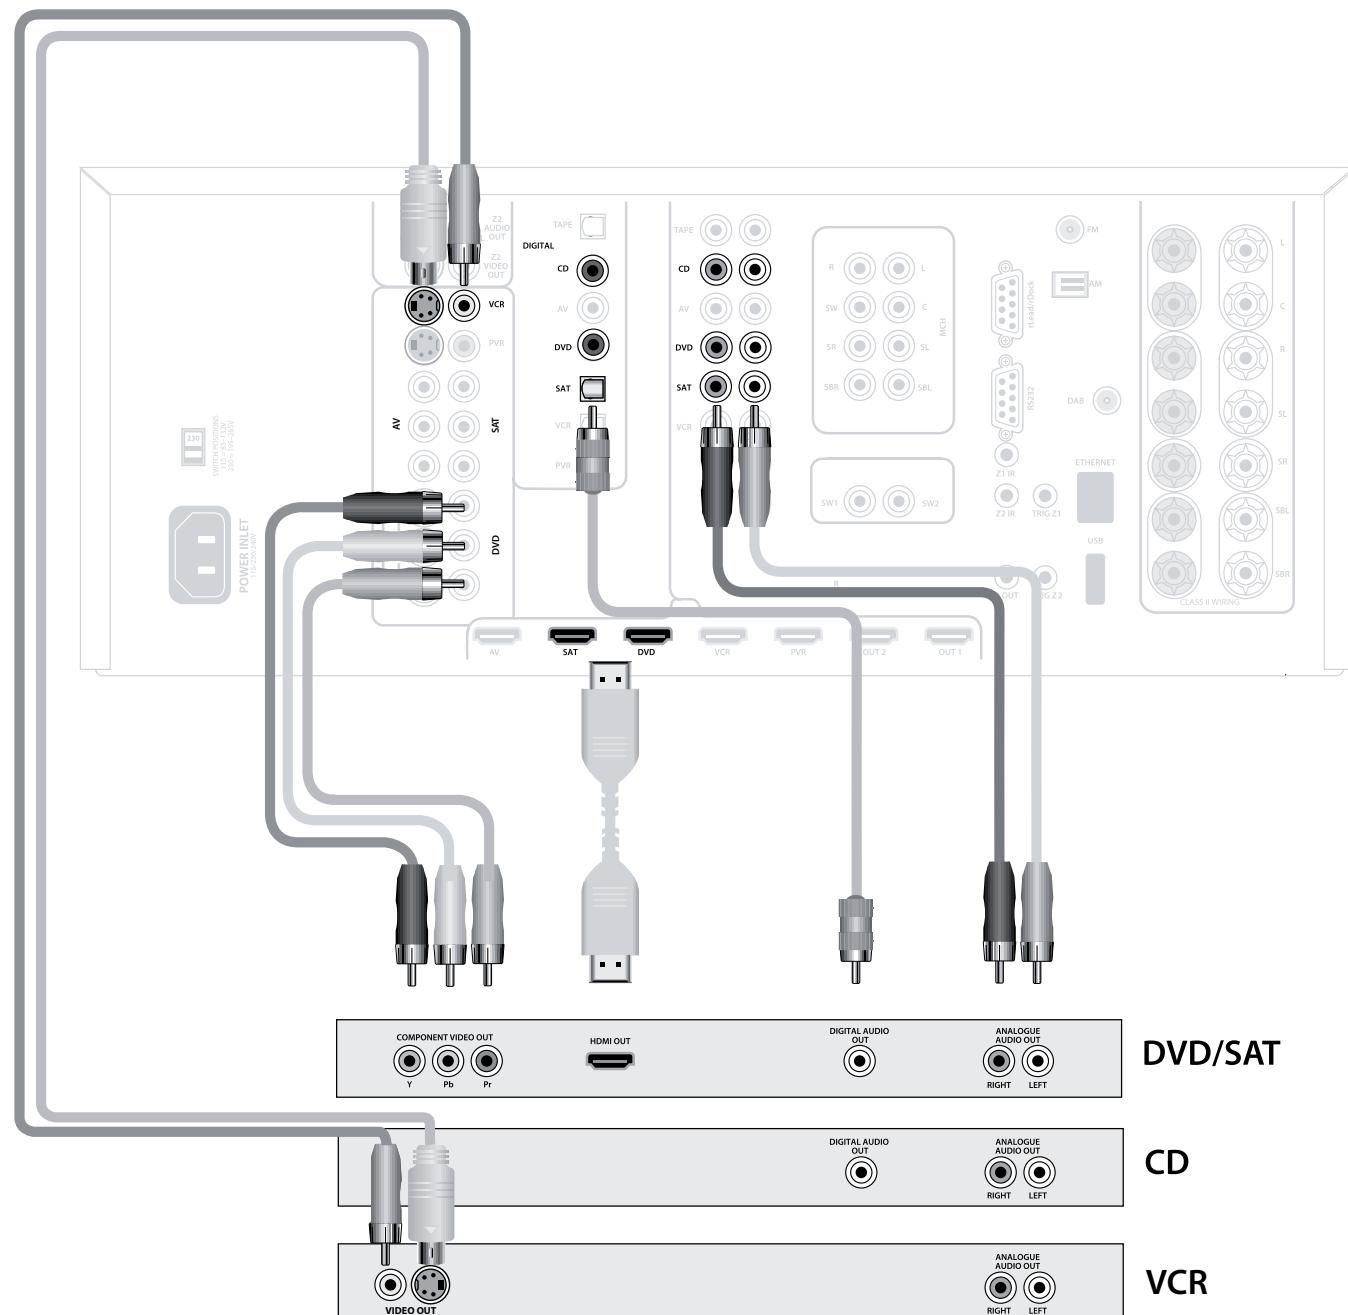


Connecting an iPod using the Arcam rDock

The combination of the AVR500 and Arcam's optional rDock or rLead accessory provides a great platform for your iPod.

Connect the rDock as shown, power on the rDock, slot in your iPod and select **IPOD** as the source. Set the **Audio In iPod** item in the 'General Setup' menu to the audio input that you have used to connect the rDock. For video connections, select the video source you have used for the iPod input in the 'Video Inputs' menu.

Navigating through music and podcasts on your iPod is simple using the CR102 remote, with text appearing on the front panel display.

More information is given in the **rDock quick start guide** (or **rLead quick start guide**) supplied with these accessory units.

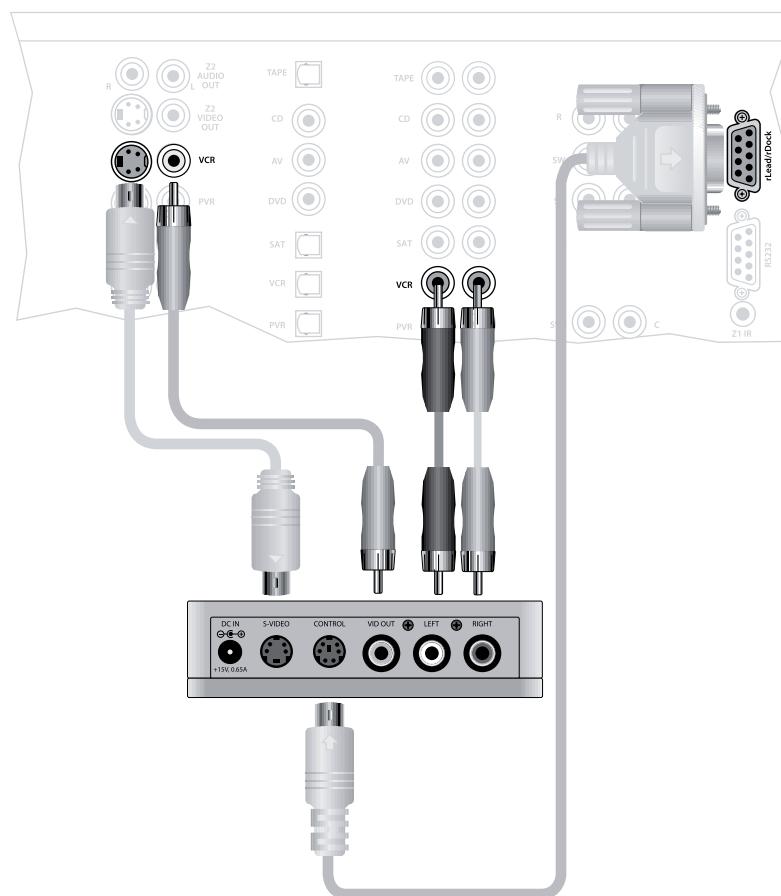



radio connectors

Aerial connectors – AVR500/AVR600 only

The AVR500/AVR600 is fitted with an AM/FM receiver module and Sirius connector or a DAB/FM receiver, depending on the region where it was sold. The type of aerial you need depends on your listening preferences and the local conditions.

Your AVR500/AVR600 is capable of superb radio reception, but only if it is receiving a good quality transmission signal.

Try the aerials supplied with your unit. If you are in a medium to strong signal area, these should be adequate for good reception. In areas with poor signal strength, you may require a roof or loft mounted aerial.

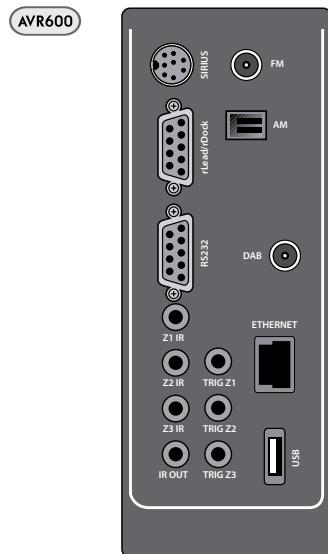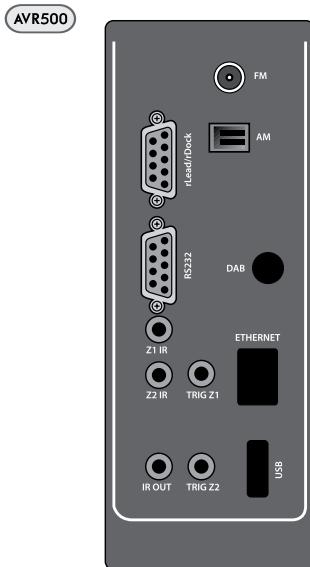

Contact your local Arcam dealer or aerial installation experts for advice about local reception conditions.

DAB option

(where fitted)

In strong signal areas, the DAB 'T' ribbon aerial supplied can be used with reasonable results. Mount the aerial as high up as possible on a wall.

In the UK the 'T'-elements need to be positioned vertically for DAB reception since broadcasts are vertically polarised. In other localities, check with your Arcam dealer or try both horizontal and vertical positions for best reception.


Try each usable wall of the room to see which gives best reception and use tacks or adhesive tape to secure the aerial in a 'T' shape, but note that no tacks should come into contact with the internal wire of the aerial.

When installed and receiving DAB, check the signal strength by pressing the front panel or remote control's **INFO** button until the signal quality indicator is displayed.

In weak signal areas, a high-gain, externally-mounted or roof-mounted aerial is desirable in order to receive the highest number of services.

In Band III transmission areas (such as the UK), use a multi-element Yagi aerial with the elements mounted vertically, as the transmissions are vertically polarised. If you are close to more than one transmitter, use an omnidirectional or folded dipole aerial.

If the DAB services in your area are transmitted on

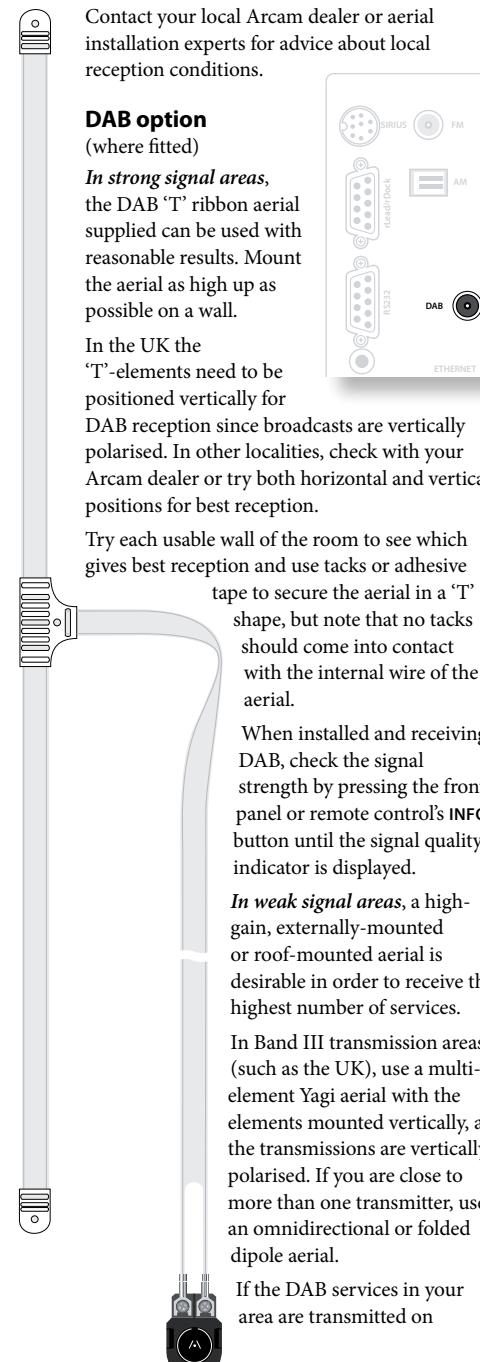

L-band, then ask your dealer for advice for the best aerial to use.

Sirius

(where fitted)

The AVR600 is designed for use with the 'SiriusConnect™ Home Tuner' package which should be connected via the cable supplied in that package to the Sirius socket.



Listening to Satellite Radio

To listen to Satellite Radio, you'll need to connect either a SIRIUS or XM Satellite Radio tuner (sold separately) to your satellite-ready receiver. Satellite Radio is available to residents of the US (except Alaska and Hawaii) and Canada.

Satellite Radio delivers a variety of commercial-free music from categories ranging from Pop, Rock, Country, R&B, Dance, Jazz, Classical and many more plus coverage of all the top professional and college sports including play by play games from select leagues and teams. Additional programming includes expert sports talk, uncensored entertainment, comedy, family programming, local traffic and weather and news from your most trusted sources.

Whether you purchase a SIRIUS or XM tuner, you'll need to activate and subscribe to begin enjoying the service. Easy to follow installation and setup instructions are provided with the satellite tuners. Whichever service you choose, there are a variety of programming packages available, including the option of adding "The Best of SIRIUS" programming to your XM tuner or "The Best of XM" programming to your SIRIUS tuner, enabling you to enjoy the most popular programming among both services. The "Best of" packages are not available to SIRIUS or XM Canada subscribers at this time.


Family friendly packages are also available to restrict channels featuring content that may be inappropriate for children.

To subscribe to XM, U.S. customers should visit www.xmradio.com or call 1-800-XMRADIO (1-800-967-2346); Canadian customers should visit www.xmradio.ca or call XM Listener Care at 1-877-GETXMSR (1-877-438-9677).

To subscribe to SIRIUS, U.S. and Canadian customers can call 1-888-539-SIRI (1-888-539-7474) or visit www.sirius.com (US) or www.siriuscanada.ca (Canada).

NOTE

The AVR600 provides power for the Sirius receiver, so an external power supply is not needed.

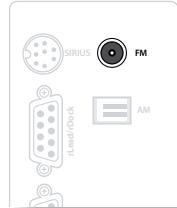FM*Connecting an aerial*

A suitable FM aerial must be connected to the AVR500/AVR600 before FM radio can be received.


In strong signal areas, the FM ribbon aerial supplied can be used with reasonable results. Mount this as high up as possible on a wall with the top of the

'T'-elements positioned vertically or horizontally, depending on the reception in your area. Try each usable wall of the room to see which gives best reception and use tacks or adhesive tape to secure the aerial, but note that no tacks should come into contact with the internal wire of the aerial.

When installed and receiving FM radio, check the signal strength by pressing the front panel or remote control's **INFO** button until the signal indicator is displayed.

In weak signal areas, or for optimal FM radio reception, a roof- or loft-mounted aerial is advised as this will give superior reception.


In some areas, cable radio may be available or, in an apartment building, a distributed aerial system may be installed. In either of these cases you should have sockets in your home marked **FM** or **VHF** (do not use those marked **TV**); these should be connected to the **FM** coaxial connector on the rear of the AVR500/AVR600.

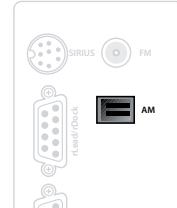AM*Connecting an aerial*

An AM aerial is required to receive AM/medium wave radio signals, so a simple loop aerial is supplied with the AVR500/AVR600. Follow the assembly instructions in the diagram below.

Make sure that the aerial is positioned well away from the AVR500/AVR600 itself, TVs,

computers and other sources of RF 'interference'. Rotate the aerial to discover which position gives the best reception.

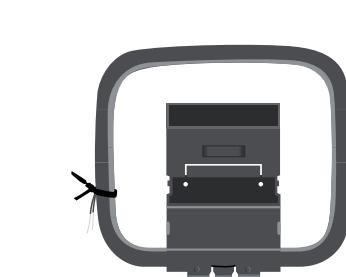

- Release the tie-wrap and unwind the twisted lead. Fold the plastic stand forward through the loop frame.




- Push the tab into the open slot in the base of the stand. Press until the tab clicks home.



- Connect the lead wires to the AM socket at the rear of the AVR600 (the wires are not polarised). Rotate the aerial's stand until you obtain the best reception.

other connectors

Data connectors

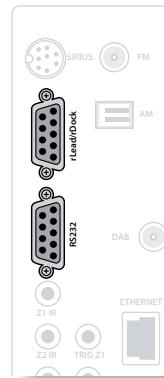

rLead/rDock

For use with an Arcam rLead or rDock accessory. See page 13 and the accessory documentation for details.

RS232 serial connector

Use with control devices having an RS232 serial port (for example, Crestron and AMX touch screen controllers). This connection is also used for upgrading the AVR500, AVR600 or AV888's internal software.

Network connectors


This section deals with installation of the unit into an existing home network. For information on how to use the units network features, the USB socket, and for a list of supported file types, refer to page 52.

Networking is a large subject and only the briefest guidelines are presented in this handbook. Please contact your Arcam dealer or specialist installer for more information about introducing the AVR500, AVR600 or AV888 into your computer network.

Ethernet

If an Ethernet cable is connected, the unit will automatically attempt to connect to your network.

You should use CAT5 cable plugged into the RJ45 socket labelled **ETHERNET** on the rear panel.

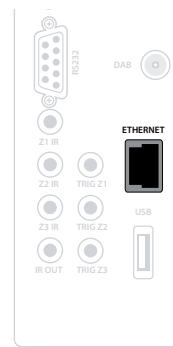




If your network uses static IP addressing rather than DHCP, you will need to provide any gateway, DNS and proxy information. See page 44 for information on setting up the network.

USB connector

The AVR600 and AV888 (and the AVR500 with the network option fitted) can play files stored on a USB mass storage device, typically a pen drive, but any USB device that complies with the 'mass storage device' class is compatible.

The unit only supports the direct connection of USB devices and will not support devices connected through a hub. If regular access to the **USB** socket is required, you may find it convenient to use a USB extension lead.

See page 46 for details of supported file types.

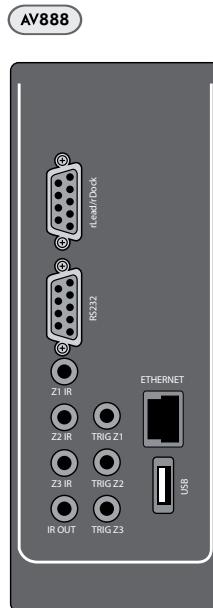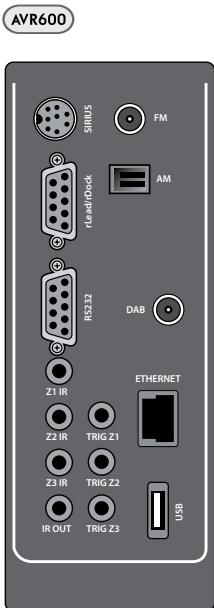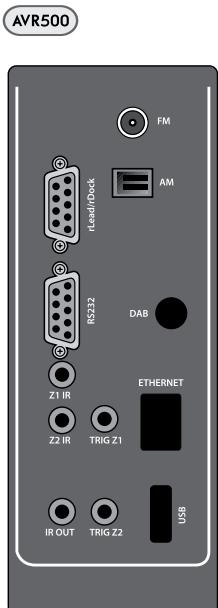


speakers

English

Connecting speakers – AVR500 & AVR600

The AVR500/AVR600 allows you to connect up to seven speakers and three active subwoofers in the main system. The output channels correspond to speakers installed in the front left, centre, front right, surround left, surround right, surround back left, surround back right and an active subwoofer.

The configuration and placement of your speakers is very important. All speakers, with the exception of the subwoofer, should be arranged around your normal viewing/listening position. The subwoofer should be placed in a position which gives an even frequency response in all listening positions. Incorrect placement leads to bass boom in some areas. Often the only way to find a good position for your subwoofer is by experimentation. A good place to start experimenting is close to a wall but at least 1m away from any corners. You can also consult your subwoofer handbook for placement suggestions.

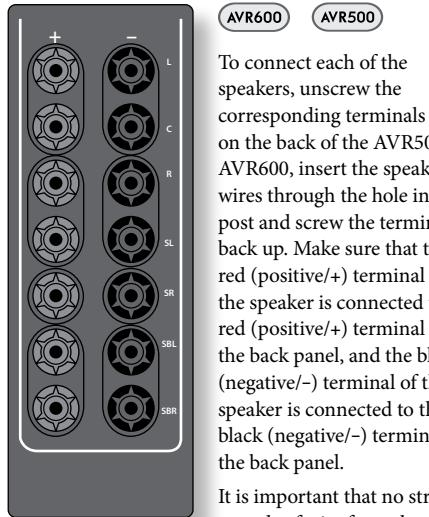


Speaker cables

The speakers should be connected to the amplifier using good-quality, high-purity, low impedance copper cables. Cheap speaker cables should be avoided – they are a false economy and can significantly degrade the sound quality.

The cable runs to the speakers should be as short as practicable. Connections to the speaker terminals should always be finger tight, whether using bare wires or spade connectors.

It is important that no stray strands of wire from these connections are allowed to touch another cable or the product casing. Failure to ensure this can cause a short circuit and damage your AVR500/AVR600.


Do not over-tighten the loudspeaker terminals, or use a wrench, pliers, etc., as this could damage the terminals and this would not be covered under the product's warranty.

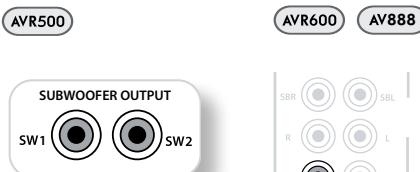

Connecting subwoofers

The AVR600 and the AV888 allow up to three active subwoofers to be connected to the SW1, SW2 or SW3 outputs. The AVR500 has two subwoofer connections.

See your subwoofer handbook for the correct setting up and connection for your particular subwoofer.

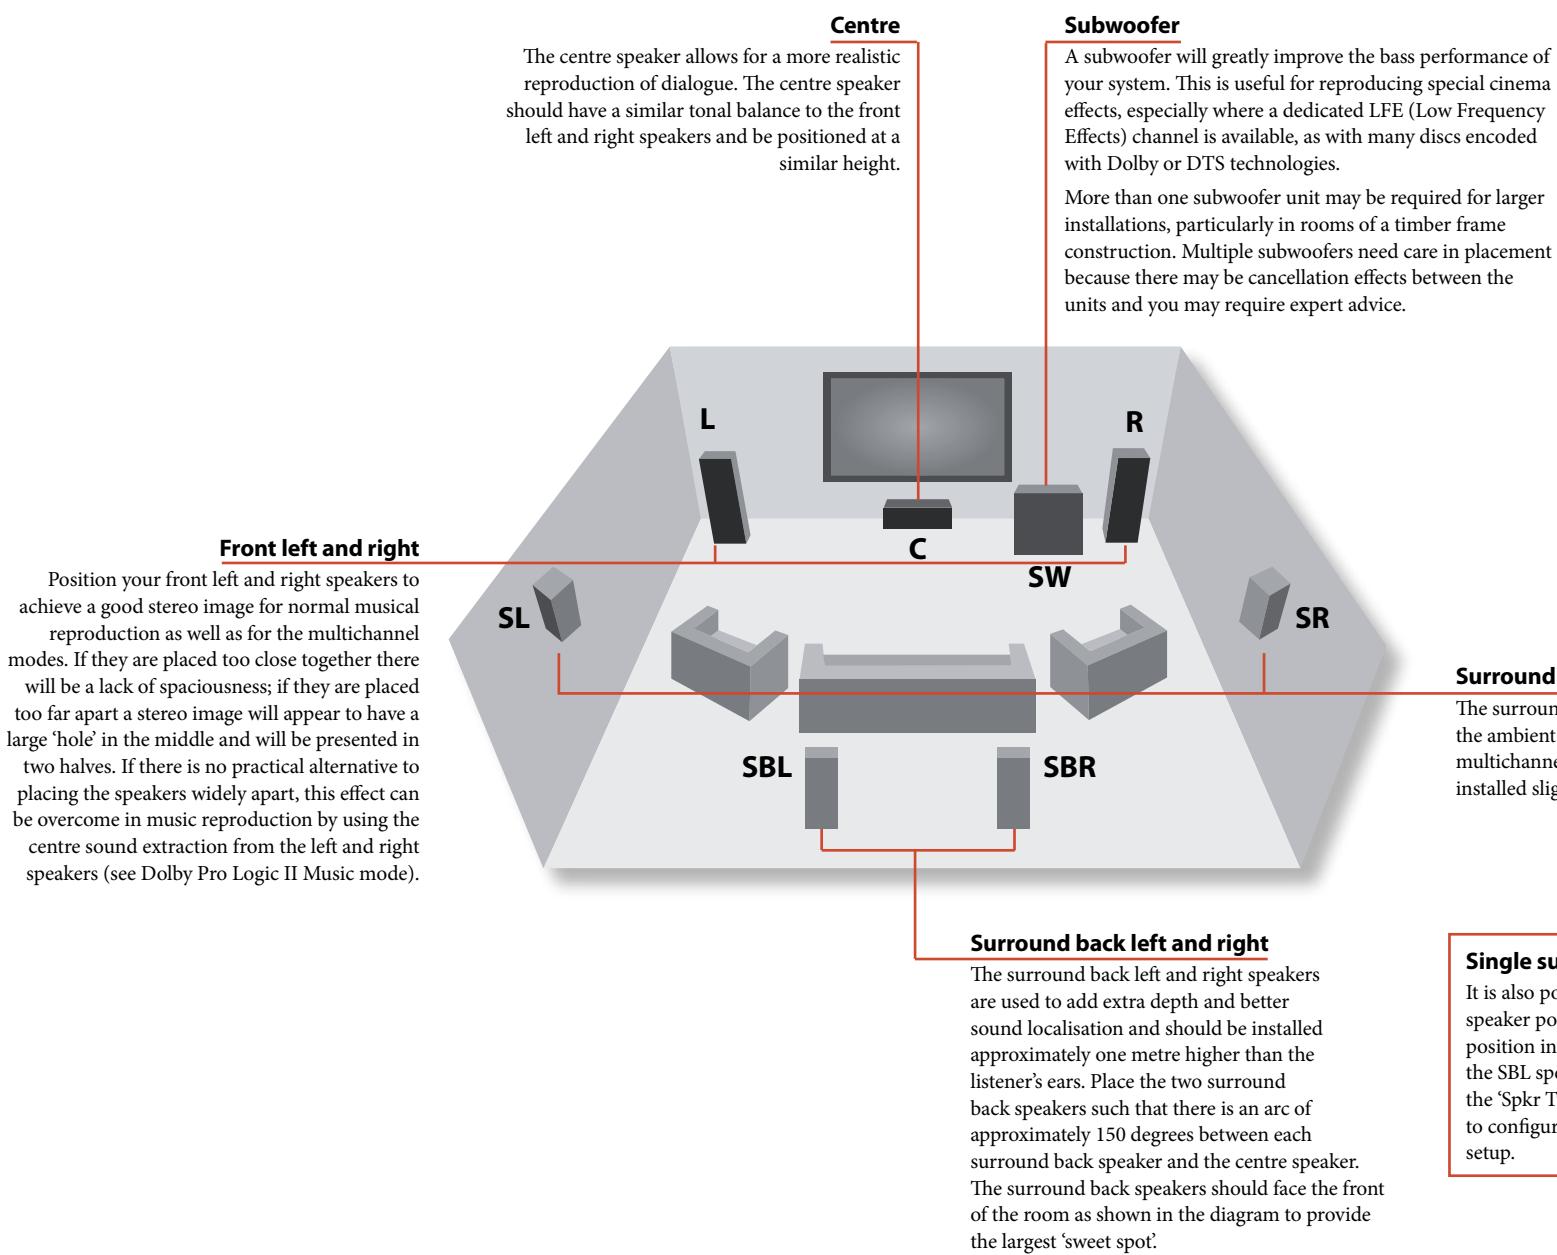

Operating your AVR500 /AVR600 / AV888

For information display we recommend you use the OSD (On-Screen Display) on your display device whenever possible.

Switching on

Press the front panel power button in. The power LED will glow orange, the front display shows the word 'ARCAM', followed by the volume setting and the name of the selected input. After initialization is complete, the power LED changes colour to green.

Please wait until the unit has finished initialising before operating the unit. It is recommended that if the unit is switched off, you should wait at least 10 seconds before switching the unit back on.

Standby

The unit has a standby mode which can be entered by pressing **STANDBY** on the remote control. When in standby mode, the display is blank and the **POWER** LED glows red.

While in Standby mode, it may be possible to hear a slight residual hum coming from the mains transformer inside the amplifier. This is perfectly normal. However, if the unit is to be left unused for an extended period, we recommend that you disconnect it from the mains supply to save power.

To switch on from standby

Press the **STANDBY** button on the remote control or any key on the front panel (other than the power button).

Front panel display

The unit is ready for use after about four seconds.



The display window shows the currently selected source and the last selected information view setting (this information line can be changed using the **INFO** button).

The active zones (Z1, Z2 or Z3) are highlighted – the example screen above shows that only Z1 (i.e. Zone1) is active. The current volume setting (70.0dB in the above example) is also displayed.

Selecting a source

To select a particular source, press the **-INPUT** or **INPUT +** buttons until that source is shown on the front panel display, or (if available) press the corresponding source button on the remote. The following sources are available:

CD	Compact Disc player input
AV	Audio-Visual input
DVD	DVD player input
SAT	Satellite receiver input
VCR	Video Cassette Recorder input
PVR	Personal Video Recorder input
PHONO¹	Phono (MM cartridge) input
MCH	Selects MCH (multichannel) analogue input
TAPE	Audio only tape deck input
AUX	Auxiliary (front panel) input
NET²	Internal (Ethernet) and external USB solid-state device (e.g. pen drive) input.
IPOD	Requires an iPod® and Arcam rDock or rLead .

The following sources are only available on the AVR500/AVR600:

AM/FM	Internal tuner input
DAB³	Internal tuner input
SIRIUS³	Requires an external receiver – see www.sirius.com for more information

¹This source is not available on the AVR500.

²This source is optional on the AVR500. Contact your dealer for upgrade information.

³These sources are market dependent and may not be available on your unit.

Upon selecting a source, the unit will normally select an active digital input in preference to an analogue input. If you want to override the digital input and select the analogue input, set the **Audio Source to Analogue** in the **Input Config.** menu (see page **ANS/FME** inputs). **ANS/FME** inputs (PHONO, MCH, SIRIUS, IPOD) do not have a digital input.

The processing mode and Stereo Direct functions are remembered and recalled for each individual input.

The **MCH** input is intended for direct analogue pass-through of DVD Audio or SACD sources. Apart from volume control and level trim, no processing modes are possible on this input, including bass management and delays. Please set bass management, speaker size and speaker delays in the source player. You can copy the distances and relative speaker levels from the Setup menus in the AVR500, AVR600 or AV888.

Tape operation (AVR600/AV888 only)

Three analogue audio outputs are provided for recording, VCR, PVR and **TAPE OUT**. The selected analogue input are routed to each of these outputs.

If the **VCR** input is selected, the **VCR OUT** output is muted to prevent feedback loops in recording equipment. Similarly the **PVR OUT** and **TAPE OUT** outputs are muted when their respective inputs are selected to prevent feedback.

VCR operation (AVR600/AV888 only)

Two outputs are provided for recording (Composite and S-Video only), **VCR** and **PVR OUT**. The selected video input is routed to each of these outputs.

Stereo Direct

To listen to a pure analogue stereo input, press the **DIRECT** button. The Stereo Direct mode automatically bypasses all processing and any surround functions. In direct mode, digital processing is shut down to improve the sound quality and reduces digital noise with the unit to an absolute minimum.

Note: when Stereo Direct mode is selected, no digital output is available and no bass management is performed, meaning that bass signals will not be redirected to a subwoofer.

Volume control

It is important to realise that the level of the volume indicator is not an accurate indication of the power delivered to your loudspeakers. The amplifier often delivers its full output power long before the volume control reaches its maximum position, particularly when listening to heavily recorded music. In comparison, some movie sound tracks can appear very quiet, as many directors like to keep maximum levels in reserve for special effect sequences.

Headphones

To use headphones with the unit, plug the headphones into the **PHONES** socket in the centre of the front panel.

When headphones are plugged into the front panel **PHONES** socket, the outputs for Zone 1 are muted and the audio will be down-mixed to two channels (2.0). The two-channel down-mix is required so that the centre channel and surround information can be heard via the headphones.

Using Zone 2 and 3

Zone 2 provides the option for the occupants of the master bedroom, conservatory, kitchen, etc. to view or listen to a different source at a different volume level from the main zone (Zone 1).

Zone 3 (AVR600/AV888 only) provides for a third living space to have a copy of the audio signal in Zone 2 at a different volume level.

Extended front panel menu

Pressing the **MENU** key and holding it for longer than four seconds will bring up the Extended Menu, allowing you to perform the following:

Restore to factory defaults

This option allows you to restore all settings on your AVR500/AVR600/AV888 to the defaults that it left the factory with. Note that this also erases any secure backups stored on the unit.

Restore secure backup

Store secure backup

This option allows you to restore from and store to a PIN-protected copy of your settings. The default PIN is 1234.

Change remote code

The default RC5 system code the unit responds to is 16. If required, for example due to another device in your system also using this RC5 system code, it can be changed to 19.

Software versions


Information on the software version of the unit can be found [here](#).

Updating firmware using a PC

Using a PC application (available on request from Arcam), you can update the firmware in your AVR500/AVR600/AV888 using the back panel RS232 port connected to your PC.

front panel operation

English

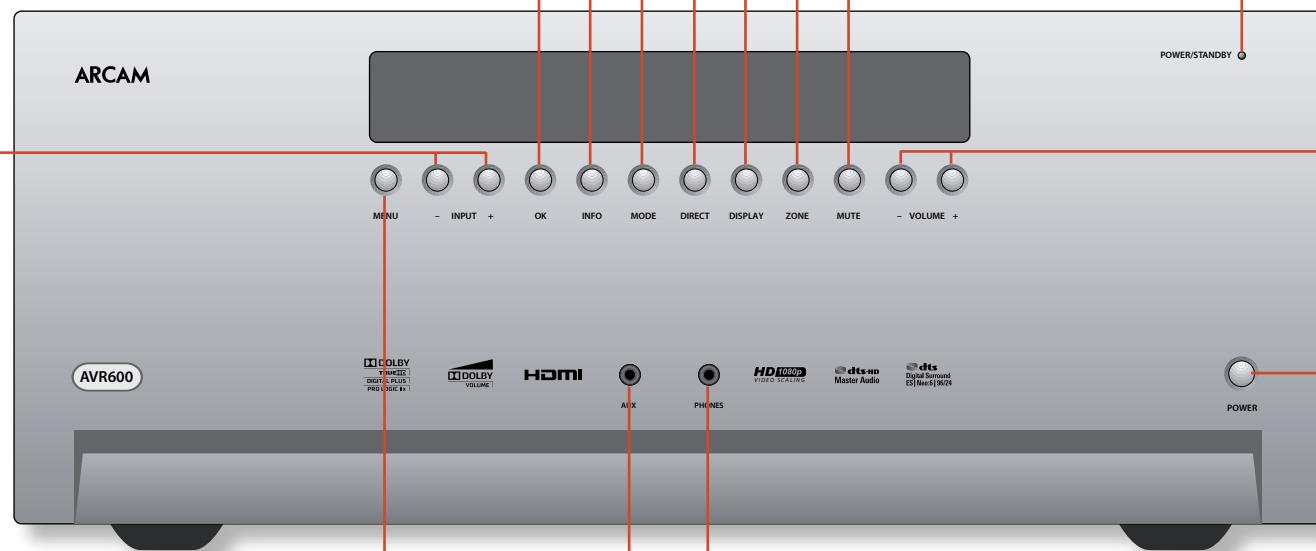

Input

These buttons select the source connected to the corresponding input (or internal input)

Unused sources can be prevented from being selected in the setup menu.

Menu

Selects the Setup menus on the on-screen display (OSD).

Mode

Selects between Stereo and the available surround modes for the current source.

Info

Selects the information displayed on the lower left portion of the front panel.

OK

Used to enter selections made in the Setup menu. Also forces the analogue and digital video outputs to the default resolution: 480i (525-line NTSC) when pressed for more than 2 seconds.

Aux

Multi purpose auxiliary line level input, calibration microphone input and 3.5mm optical digital (SPDIF) input.

Direct

Stereo Direct on/off. Provides a direct analogue path from the analogue inputs to the left and right front outputs. Switches off any surround processing modes and shuts down the DSP circuits for best stereo sound quality.

Display

This switches the display brightness between off/dim/bright.

Zone

Selects between Zone 1, Zone 2 and Zone 3 control.

Mute

Mutes all analogue audio outputs in the currently selected zone.

Power / Standby LED

This indicates the status of the AVR500/AVR600/AV888. When first turned on, the LED is orange, to indicate that the unit is 'initialising'; this changes to green when fully powered and ready. Red indicates that the unit is in Standby mode.

Volume

Adjusts the analogue output volume in the selected zone (line out, speakers and headphones).

Power

Switches the main power to the AVR500/AVR600/AV888 on and off.

Once the unit is switched off, it should be left for at least ten seconds before switching on again.

Remote control receiver. This is positioned behind the display window, above the MENU button on the front panel. Ensure the receiver is in a clear line of sight from the remote control for operation. If this is not possible, use a separate sensor connected to the Z1 IR input on the rear panel.

remote control

The CR102 universal remote controller

The CR102 is a sophisticated ‘universal’ backlit remote control that can control up to eight devices. It is pre-programmed for use with the AVR500, AVR600, AV888 and many other Arcam products (FM/DAB tuners, CD players and DVD players).

With its extensive built-in library of codes, it can also be used with thousands of third party audio-visual components – TVs, satellite and set-top boxes, PVRs, CD players, etc. See the list of codes at the back of this handbook, beginning on page 64.

The CR102 is a ‘learning’ remote, so you can teach it almost any function from an old single-device remote. You can also program the CR102 to issue a sequence of commands (“macros”) from a single button press.


Using the remote control

Please keep in mind the following when using the remote control:


- Ensure there are no obstacles between the remote control and the remote sensor on the front panel. The remote has a range of about 7 metres. (If the remote sensor is obscured, the Z1 IR remote control input jack on the rear panel is available. Please consult your dealer for further information.)
- Remote operation may become unreliable if strong sunlight or fluorescent light is shining on the remote sensor of the unit.
- Replace the batteries when you notice a reduction in the operating range of the remote control.



Inserting batteries into the remote control

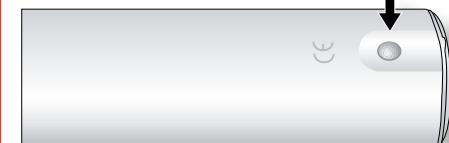

1. Open the battery compartment by pressing the button on the back of the handset.

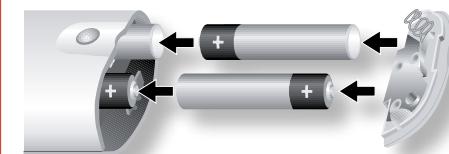

2. Insert four ‘AAA’ batteries into the battery compartment – two facing the top of the unit, and two facing the end, as in the diagram.
3. Lower the end cap onto the plastic locating plate in the handset. This acts as a hinge, and you can now push the end cap firmly into its locked position with a click.

Notes on batteries:

- Incorrect use of batteries can result in hazards such as leakage and bursting.
- Do not mix old and new batteries together.
- Do not use non-identical batteries together – although they may look similar, different batteries may have different voltages.
- Ensure the plus (+) and minus (-) ends of each battery match the indications in the battery compartment.
- Remove batteries from equipment that is not going to be used for a month or more.
- When disposing of used batteries, please comply with governmental or local regulations that apply in your country or area.

Useful information

Backlight

A blue backlight comes on for five seconds whenever a key is pressed. This helps you use the handset in subdued lighting conditions. It may be possible to hear a quiet tone being emitted from the remote control when the backlight is on. This is perfectly normal.

Power LED blinks

Short blinks indicate a valid key press.

Multiple short blinks convey information (such as a device code) or signal the beginning and successful completion of a programming sequence.

Long blinks indicate an invalid key press or entry.

The symbol  is used in the manual to indicate a power LED blink.

Timeouts and unassigned keys

Time out – After 10 seconds the CR102 exits the programming state and returns to normal operation.

Stuck key timeout – After any key is pressed continuously for 30 seconds, the CR102 stops sending IR transmission to conserve battery life. The CR102 remains off until all keys are released.

Unassigned keys – The CR102 ignores any unassigned key presses for a particular Device Mode and does not transmit IR.

Low voltage indicator

When the batteries are running down, the IR transmit indicator on the CD102 (the LED under the Power button) flashes five times whenever you press a button:



If this happens, please fit four new AAA alkaline batteries as soon as possible.

Device Mode / Source keys

As the CR102 can control your AVR500, AVR600 or AV888 as well as a range of other equipment, many of the buttons have more than one function depending on the 'device mode' selected on the remote control.

The Device Mode keys (shown below) select the source on the AVR500/AVR600/AV888. If one of these keys is pressed briefly, a command is transmitted to change the source on the unit. Also the functionality of the remote control changes to operate the selected source device. It's like having eight different remotes in your hand!



DVD	DVD player
SAT	Satellite set-top box
AV	Audio-visual sound input (use with TV)
TUN	DAB, Sirius, FM or AM tuner
AMP	Controls the amplifier and setup features of the AVR500/AVR600 and AV888
AUX	Auxiliary input, or an iPod® via an Arcam rDock or rLead
PVR	Personal Video Recorder (or Digital Video Recorder)
CD	Compact Disc player

If you press and hold a Device Mode key for about four seconds, you change the Device Mode of the CR102 *without* changing the signal source on the AVR500/AVR600/AV888. This can also be done by pressing  followed by a Device Mode key (within two seconds). These two methods allow you to change which device the CR102 controls without also changing the AVR500/AVR600/AV888 source, allowing uninterrupted listening.

Each Device Mode changes the behaviour of many of the CR102 keys to control the source device appropriately. For example:

In **CD** mode  plays the previous CD track.

In **AV** mode  issues the TV 'channel down' command.

The CR102 remains in the last selected Device Mode so it is not necessary to press a Device Mode key before every command key if all you are doing is playing or skipping tracks on a CD, for example.

Navigation keys

The Navigation keys steer the cursor in Setup menus or on-screen menus. They also replicate the navigation functions of original remotes supplied with other home entertainment devices in your system.

 confirms a setting.

Volume control

By default, the CR102 is set up so that the volume control buttons always control the volume of the AVR500/AVR600/AV888, regardless of which Device Mode the remote is currently set for. This is known as volume 'punch through'.

For example, if you are listening to a CD, you will probably have the CR102 in **CD** Device Mode to control the CD player. You can use the volume controls on the remote directly to adjust the volume of the AVR500/AVR600/AV888 without first having to press  to put the remote into **AMP** Device Mode. The volume buttons 'punch through' the **CD** Device Mode on the remote to the **AMP** Device Mode. Volume 'punch through' can be disabled individually for any Device Mode if desired.

The CR102 complies with Part 15 of the FCC rules

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide a reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.


Connect the equipment into an outlet or a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Controlling other devices

Method 1 (Direct code setup)

This section describes the simplest (preferred) way to program the CR102's Device Mode keys to control the non-Arcam devices in your system.

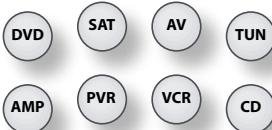

- Some of the modes are locked to Arcam operation but can be unlocked if required (see page 52).
- **(AMP)** mode only controls Arcam equipment.

DVD mode	Locked
SAT mode	Unlocked
AV mode	Unlocked
TUN mode	Locked
AUX mode	Locked
VCR mode	Unlocked
CD mode	Locked

Here is a specific example of how to program the **(AV)** key to control an Addison television. The principles for controlling other devices are exactly the same.

1. Make sure your device is switched on (not just on standby).
2. Find the correct Device Code table (e.g. TV) for the type of device you want to control from the CR102.
3. Find the row containing the codes for the manufacturer of your device (e.g. Addison) (page 58). The most popular code is listed first.
4. Press the appropriate Device Mode key (e.g. **(AV)**) on the CR102.
5. Press and hold **SHIFT** until the red Power LED blinks twice:
6. Enter the first four-digit device code using the number keys. The power key blinks twice:
7. Aim the CR102 at the device and press **(○)**. If the device switches off, the setup is complete.
8. Turn your device back on and test all the CR102's functions to ensure they are working properly.
9. **Important!** Write your device code down on the right hand side of the page so you can remember it if you ever reset the CR102.

What if I still can't control my device?

- If your device doesn't respond, repeat the above steps until one of the device codes listed for your brand works.
- If none of the codes listed for your brand operates your device, or if your brand is not listed at all, try the Library Search Method described in the next section.

Notes:

- Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.
- If your device's original remote control does not have a **(○)** (POWER) key, press **(●)** instead of **(○)** when setting up your device.
- Remember to press the corresponding device key before operating your device.
- Many TVs do not switch on pressing **(○)**. Please try pressing a number key ('channel select') to switch your TV back on.
- To search for the code for another device follow the instructions above, but press the appropriate device key instead of **(AV)** during step 2.

Method 2 (Library search)

This section describes another way to program the CR102 to control third-party equipment.

Library Search allows you to scan through all the codes contained in the CR102's memory. It can take a lot longer than the previous method, so only use this method if:

- Your device does not respond to the CR102 after you have tried all the codes listed for your brand.
- Your brand is not listed at all in the Device Code tables.

Example: To search for a TV code

1. Switch your TV on (not standby) and aim the CR102 at it.
2. Press **(AV)** on your CR102.
3. Press and hold **SHIFT** until the power LED blinks twice.
4. Press **(9)** **(9)** **(1)**. The power LED key blinks twice:
5. Press **(○)**.

6. Aim the CR102 at your Television and press **(●)** repeatedly until your Television turns off.

Every time you press **(●)** the CR102 sends out a POWER signal from the next code contained in its memory. In the worst case, you may have to press this key up to 150 times, so patience is required! If you skip past a code, step back by pressing **(●)**. Remember to keep pointing the CR102 at your Television while pressing this key.

7. As soon as your television turns off, press **SHIFT** to store the code.

Notes:

- Many TVs do not switch on by pressing **(○)**. Try pressing a number key ('channel select') to switch your TV back on.
- If you cannot control your Television properly, please continue the Search Method: you may be using the wrong code.
- To search for the code for another device follow the instructions above, but press the appropriate Device Mode key instead of **(AV)** during step 2.
- If your device's original remote control does not have a **(○)** (STANDBY) key, press **(●)** instead during step 5.

Code blink-back

Once you have set up your CR102, you can blink back your device set-up codes for future reference.

Example: To blink back your Television code

1. Press the appropriate Device Mode key (e.g. **(AV)**) once.
2. Press and hold **SHIFT** until the red Power LED blinks twice:
3. Press **(9)** **(9)** **(0)**. The **(○)** key blinks twice.
4. For the first digit of your four-digit code, press **1** and count all the red blinks. If there are no blinks, the digit is '0'.
5. For the second, third and fourth digits, repeat the previous step, pressing **(2)**, **(3)**, or **(4)** in order.

Now you have the four-digit code.

Make a note of the codes

Write down the codes for your devices in the boxes below for future reference.

Device	Code
1	
2	
3	
4	
5	
6	
7	
8	

AMP Device Mode

The  Device Mode button configures the CR102 to control the AVR500/AVR600/AV888. Pressing this button does not affect the currently selected input on the AVR500/AVR600/AV888.

IMPORTANT: The CR102 must also be in **AMP** Device Mode to control the following sources: **PHONO**, **MCH** (multichannel analogue), **AUX**, **NET** (optional network audio), **USB**, **IPOD** (for use with the optional Arcam rLead or rDock).

However to control the internal Tuner in the AVR500/AVR600 (AM/FM/DAB or Sirius if fitted), the CR102 must first be in **TUN** Device Mode (see later).

The functionality of the CR102 is context sensitive for the internal sources and is described in the following table.

	Single press – Toggles AVR500/AVR600/AV888 power between standby and on in the current zone (zone in which the command is received). Press and hold – Forces all AVR500/AVR600/AV888 zones into standby, regardless of which zone the command was received in.
	The number keys can be used for source selection (without changing the CR102 Device Mode). Alternatively the Device Mode buttons can also be used with the SHIFT key. ① SAT (satellite) input ② PHONO input ③ AV input ④ TUNER input ⑤ DVD input ⑥ TAPE input ⑦ VCR input ⑧ CD input ⑨ AUX (front panel) input ⑩ MCH (multichannel) input
 	Selects Tape input on the AVR500/AVR600/AV888 SHIFT +  selects PHONO input on the AVR600/AV888
	(for IPOD and NET sources)

	Modifies many keys (see individual key descriptions below).
	Selects MCH (multichannel) input on the AVR500/AVR600/AV888 SHIFT +  selects AUX input on the AVR500/AVR600/AV888
	Navigate menus OK confirms a setting (equivalent to 'Enter' or 'Select' on some remote controls) Press and hold OK to force the analogue and digital video outputs to the default resolution: 480i (525-line NTSC). SHIFT +  decreases the picture resolution. SHIFT +  increases the picture resolution. SHIFT +  turns current zone (in which command is received) on SHIFT +  turns current zone (in which command is received) off.
	Selects IPOD input on the AVR500/AVR600/AV888 SHIFT +  selects network (NET) internal input on the AVR500/AVR600/AV888 (where fitted).
	Cycles through the available surround and downmix modes.
	Displays the AVR500/AVR600/AV888 setup menu on the On Screen Display (see page 34).
	Cycles through the front panel display's brightness options
	Toggles the mute function of the AVR500/AVR600/AV888
	(track control for IPOD and NET sources) SHIFT +  Follow Zone1 source. When the command is received in Zone2 or Zone3, the source for that zone follows whatever input source is selected in Zone1
	Decrease (-) and increase (+) AVR500/AVR600/AV888 volume
	Stereo direct on/off. Provides a direct analogue path from the analogue inputs to the left and right front outputs. Switches off any surround processing modes and shuts down the DSP circuits for the best stereo sound quality.
	Displays the room EQ settings menu
	(for IPOD and NET sources)
	Calls up a pop-up (and front screen) to adjust the bass setting for a particular input.
	Brings up the speaker trim menu. Use the  ,  ,  and  navigation buttons. Press TRIM again to exit the speaker trim menu. As this is a temporary adjustment, these additional trim levels are reset to zero when the unit is turned off or put into standby, but are retained if the selected input is changed. These temporary trim levels are independent of the speaker levels found in the setup menu.
	Delays may be introduced into the video signal by video processing which causes a mismatch between the audio and video timing. You will notice this by speech sound being out of synchronization with the lip movements in the video. To compensate for this, you can adjust the lip sync delay. Press the SYNC button and use the  and  navigation buttons. Press again to exit the lip sync trim menu.
	Brings up the subwoofer trim menu. Use the  and  navigation buttons. Press SUB again to exit the sub trim menu
	Calls up a pop-up (and front screen) to adjust the treble setting for a particular input.
	(for IPOD and NET sources)
	(for IPOD and NET sources)
	(for IPOD and NET sources)
	Cycles through the information displayed on the lower left portion of the front panel display.

iPod commands

The iPod interface is selected by pressing  in **AMP** Device Mode on the CR102. When connected to an iPod via an optional rLead/rDock, the keys below are used to navigate music files in **AMP** Device Mode.

	Navigate the files on screen. OK selects/play the highlighted file.
	Toggles random (shuffle) play of the playlist on and off. SHIFT +  cycles through the repeat options
	Selects the previous/next track in the current playlist
	Begins or resumes playback at the currently highlighted track
	Toggles pause and playback of the current track
	Stops playback

Network commands

The AVR500 (optional)/AVR600/AV888 Network client is selected by pressing + in AMP Device Mode on the CR102.

When using the network client, the keys below are used to navigate music files in AMP Device Mode.

	Navigate the files and menus on the screen. selects the highlighted file or enters the highlighted menu on the screen
 	Toggles random ('shuffle') play of the playlist on and off + cycles through the repeat options
	Selects the previous/next track in the current playlist
 	Begins or resumes playback at the currently highlighted track
	Toggles pause and playback of current track
	Stops playback
 	Adds the currently displayed file or radio station to favourites list when using the network client
 	Removes the currently displayed file or radio station from favourites list when using the network client
 	Returns navigation to the top level of the music files structure ('Home')
 	Cycles through the information displayed on the lower left portion of the front panel display



TUN Device Mode

The Device Mode button configures the CR102 to control the tuner functions of the AVR500/AVR600 (the AV888 is not equipped with tuner modules). Pressing this button also selects TUNER as the source.

When switching to TUNER from a different source, the AVR500/AVR600 enters the last used tuner band, be it AM / FM / DAB (if fitted) / Sirius (if fitted). Further presses of the TUN Device Mode button cycle through the available tuner bands.

Further information on the tuner can be found in the 'Tuner Operation' section on page 50.

	(not used)
	Number keypad used to store and recall presets
	Allows selection of previously stored Tuner presets.
	AM/FM Tuner: allows frequency tuning. DAB/Sirius Tuner (where fitted): scrolls through the channel list.
	Selects (tunes to) the currently displayed preset, or selects the currently displayed DAB or Sirius channel (or category) when scrolling through the channel (or genre) list.
	Page up to the previous 10 presets on screen
	Page down to the next 10 tuner presets on screen
	Delete the currently highlighted preset.



DVD Device Mode

The Device Mode button configures the CR102 to control the DVD functions of Arcam DVD players, although this can be changed (see page 30). Pressing this button also selects DVD as the AVR500/AVR600/AV888 source.

	Toggles power between standby and on
	Searches for and plays the track corresponding to the key pressed
 	Selects Tape input on the AVR500/AVR600/AV888. + selects PHONO input on the AVR600/AV888.
 	Toggles random ('shuffle') play on and off. + cycles through the repeat options (track, disc, etc)
	Modifies many keys (see individual key descriptions, below)
 	Selects multichannel (MCH) input on the AVR500/AVR600/AV888. + selects AUX input on the AVR500/AVR600/AV888.
 	Selects IPOD input on the AVR500/AVR600/AV888. + selects network (NET) internal input on the AVR500/AVR600/AV888.
	Navigate setup and DVD programme selection menus. OK confirms a setting ('Enter' or 'Select' on some remotes). + to switch on from standby + to switch to standby from on.
	Cycles through available surround sound modes. + MODE changes the HDMI setting.
	Activates DVD player menu, if available.
	Cycles through the front panel display's brightness options. + enables RPT A-B functionality
	Toggles the mute function. By default this key operates the AVR500/AVR600/AV888 Mute



Press and release to skip back to the beginning of the current/previous track.



Press and release to skip forwards to the beginning of the next track.



Decrease (-) and increase (+) AVR500/AVR600/AV888 volume



Fast rewind.
 + cycles through slow play backwards speeds



Starts the playback of a DVD.
 + cycles through the Angle options on an Arcam DVD player.



Pauses DVD play-back. Press to restart playback.
 + cycles through Zoom options.



Fast forward.
 + cycles through slow forward speeds



Ejects disc.
 + displays speaker Trim menu on Arcam DVD players.



Stop playback of a DVD



Start recording (on products that have this feature).



Displays Search menu with Title, Track and Time options.



Displays Setup menu.
 + displays programming screen on Arcam DVD players



Displays Title menu.
 + clears bookmark, search and program display entries on Arcam DVD players



Changes Audio decode format (Dolby Digital, DTS, etc.).



+ displays the 'Memory' function (Bookmarks)



Cycles through DVD subtitle language options, if available.
 + displays STATUS INFO on Arcam DVD players

SAT Device Mode

The  Device Mode button configures the CR102 to control the functions of a satellite receiver. You will need to configure this Device Mode to work with your equipment. Pressing this button also selects SAT as the AVR500/AVR600/AV888 source.

	Toggles power between standby and on
	Functions as original remote number key.
	Selects TAPE input on the AVR500/AVR600/AV888. SHIFT +  selects PHONO input on the AVR500/AVR600/AV888.
	Toggles between the available inputs on your satellite receiver
	Modifies many keys (see individual key descriptions, below)
	Selects multichannel (MCH) input on the AVR500/AVR600/AV888. SHIFT +  selects AUX input on the AVR500/AVR600/AV888.
	Selects IPOD input on the AVR500/AVR600/AV888 SHIFT +  selects network (NET) internal input on the AVR500/AVR600/AV888
	Navigate menus. OK confirms a setting (equivalent to 'Enter' or 'Select' on some remotes).
	Controls Backup function, if available.
	Performs same function as on original remote, if available.
	On some Satellite and Cable set top boxes this key functions as the Guide key to open the EPG (Electronic Program Guide).
	Toggles the mute function. By default this key operates the AVR500/AVR600/AV888 Mute
	Channel down
	Channel up
	Decrease (-) and increase (+) AVR500/AVR600/AV888 volume
	Fast rewind

AV Device Mode

The  Device Mode button configures the CR102 to control the functions of a television or other display device. You will need to configure this Device Mode to work with your equipment. Pressing this button also selects AV as the AVR500/AVR600/AV888 source.

	Toggles power between standby and on. (Some TVs require you to use a number key to turn them on.)
	Functions as original remote number key – usually for channel selection.
	Selects Tape input on the AVR500/AVR600/AV888. SHIFT +  selects PHONO input on the AVR600/AV888.
	Toggles between the available inputs on your display device (e.g. TV/AV)
	Modifies many keys (see individual key descriptions, below)
	Selects multichannel (MCH) input on the AVR500/AVR600/AV888. SHIFT +  selects AUX input on the AVR500/AVR600/AV888.
	Navigate setup and programme selection menus. OK confirms a selection (equivalent to 'Enter' or 'Select' on some remotes).
	EXIT function on some models.
	Functions as original remote key, if available.
	Display INFO or OSD (On Screen Display) function, if available.
	Toggles the mute function. By default this key operates the AVR500/AVR600/AV888 Mute
	Channel down
	Channel up
	Decrease (-) and increase (+) AVR500/AVR600/AV888 volume.
	Toggles TEXT page on/off
	TEXT page off



PVR Device Mode

The Device Mode button configures the CR102 to control the functions of a video recorder or similar device. You will need to configure this Device Mode to work with your equipment. Pressing this button also selects PVR as the AVR500/AVR600/AV888 source.

	Toggles power between standby and on.
	Functions as original remote number key.
	Selects Tape input on AVR500/AVR600/AV888. selects PHONO input on the AVR600/AV888.
	Toggles between available inputs (e.g. AV1, AV2)
	Modifies many keys (see individual key descriptions, below)
	Selects multichannel (MCH) input on AVR500/AVR600/AV888. selects AUX input on the AVR500/AVR600/AV888.
	Selects IPOD input on AVR500/AVR600/AV888. selects network (NET) internal input on the AVR500/AVR600/AV888.
	Navigate setup and programme selection menus. OK is equivalent to 'Enter' or 'Select' on some remotes.
	Operates the Exit function if the PVR uses this feature
	Turns on the Menu function if the PVR uses this feature
	Toggles display between TV and PVR
	Toggles the mute function. By default this key operates the AMP Mute
	Channel down
	Channel up
	Decrease (-) and increase (+) AVR500/AVR600/AV888 volume
	Fast rewind



VCR Device Mode

The Device Mode button configures the CR102 to control the functions of a video recorder or similar device. You will need to configure this Device Mode to work with your equipment. Pressing this button also selects VCR as the AVR500/AVR600/AV888 source.

	Toggles power between standby and on.
	Functions as original remote number key.
	Selects Tape input on AVR500/AVR600/AV888. selects PHONO input on the AVR600/AV888.
	Toggles between available inputs (e.g. AV1, AV2)
	Modifies many keys (see individual key descriptions, below)
	Selects multichannel (MCH) input on AVR500/AVR600/AV888. selects AUX input on the AVR500/AVR600/AV888.
	Selects IPOD input on AVR500/AVR600/AV888. selects network (NET) internal input on the AVR500/AVR600/AV888.
	Navigate setup and programme selection menus. OK is equivalent to 'Enter' or 'Select' on some remotes.
	Operates the Exit function if the VCR uses this feature
	Turns on the Menu function if the VCR uses this feature
	Toggles display between TV and VCR
	Toggles the mute function, if available. By default this key operates the AMP Mute
	Channel down
	Channel up
	Decrease (-) and increase (+) AVR500/AVR600/AV888 volume
	Fast rewind



CD Device Mode

The Device Mode button configures the CR102 to control the CD functions of Arcam CD players, although this can be changed (see page 25). Pressing this button also selects **CD** as the AVR500/AVR600/AV888 source.

	Toggles power between standby and on.
	Functions as original remote number key.
	Selects TAPE input on the AVR500/AVR600/AV888.
	SHIFT + selects PHONO input on the AVR600/AV888.
	Toggles random ('shuffle') play on and off. SHIFT + cycles through the repeat options (track, disc, etc.).
	Modifies many keys (see individual key descriptions, below)
	Selects multichannel (MCH) input on AVR500/AVR600/AV888. SHIFT + selects AUX input on the AVR500/AVR600/AV888.
	Selects IPOD input on AVR500/AVR600/AV888. SHIFT + selects network (NET) internal input on the AVR500/AVR600/AV888.
	Navigates track listings if supported by the player. OK selects the currently highlighted track if supported by the player
	Changes the time display modes on Arcam CD player
	(not used)
	Cycles through the front panel display's brightness options. SHIFT + enables RPT A-B functionality if supported by the player.
	Toggles the mute function. By default this key operates the AVR500/AVR600/AV888 Mute.

	Press and release to skip back to the beginning of the current/previous track.
	Press and release to skip forwards to the beginning of the next track.
	Decrease (-) and increase (+) AVR500/AVR600/AV888 volume.
	Fast rewind
	Play
	Toggles pause of playback
	Fast forward
	Open/close disc tray
	Stop playback
	Start recording (on products that have this feature)
	Scans first 10 seconds of each track on CD, if supported by the player (Audio search)
	Starts Program mode
	Clears programmed item
	(not used)
	(not used)

essential setup

Before you use your AVR500, AVR600 or AV888 it is essential that you enter some information about your system configuration into the Setup menus.

Many of the inputs have several different connection types available, for example, HDMI or component video; HDMI, digital or analogue audio. It is necessary to set the connection type used for each input by setting the **Video Source** and **Audio Source** options in the **Input Config.** menu (see page 41). These options must be set for each input.

The default for both audio and video sources is HDMI. If another connection type is used, there will be no sound or picture from the source until the **Video Source** and **Audio Source** menu items are correctly set.

It is essential that you enter some information into the Setup menus about your speaker configuration. This allows the unit to process any surround sound digital source to exactly match your system and give you the ultimate surround sound experience.

There are three pieces of vital information which are outlined in the sections: 'Speaker Types', 'Speaker Distances' and 'Speaker Levels'.

The way you enter this information manually into the unit is given later in the 'Setup Menus' section on page 38. The settings can also be established automatically using the Arcam Auto Speaker Setup function. However it is important to understand why these speaker settings must be entered, which is why this section is presented first.

Speaker types

You need to set the type of speakers that you have connected to your AVR500/AVR600 (or connected indirectly to your AV888):

Large	capable of full frequency range reproduction
Small	not capable of full frequency range reproduction at the low frequency end
None	speaker not present in your configuration

The terms 'Large' and 'Small' do not necessarily relate to the physical size of your speakers. As a rule of thumb, if a speaker cannot reproduce a flat frequency response down to about 40Hz (and very few can!) it is often better to consider them as 'Small' for setup purposes of home cinema.

When a speaker is set to 'Small', very low frequency sounds are redirected away from that speaker to a 'Large' speaker or a subwoofer, which are far better suited to reproducing these low frequency sounds.

Note that it is not possible to set all speakers to 'Small' unless there is a subwoofer in your speaker configuration. If you do not have a subwoofer, you will be forced to set your front speakers to 'Large'.

(Advanced users may wish to automatically override the 'Small' speaker setting for purely stereo music listening when not watching movies. This can be achieved in the 'Input Config.' menu – see page 40.)

Single Surround Back speaker

If you have just one Surround Back speaker in your configuration instead of two, ensure it is connected to the SBL speaker connector and set Surr. Back L/R in the Spkr Types menu to either '1 Small' or '1 Large' as appropriate.

Crossover frequency

If you have set any speakers as being Small, then you will be required to set a value for the crossover frequency. This is the frequency below which signals are filtered away from these Small speakers and redirected to Large speakers or the subwoofer (if present). A frequency of 80Hz is often a good starting point, however you will probably have to experiment with different values to find the best value for your system or consult your speaker handbook.

MCH sub level

If a subwoofer is present, this setting allows for a 10dB compensation on the subwoofer output when using the MCH input as required by many DVD-A players with audio outputs.

Use Surround Back channels

If not used in the main zone, it is possible to assign the Surround Back channels to bi-amp the Front Left/Right channels or to provide an amplified output to Zone 2.

Speaker Distances

It is essential for the distance from each speaker to the listening position to be accurately measured and entered into the 'Setup' menu. This ensures that the sounds from the various speakers arrive at the listening position at the correct time to recreate a realistic surround effect. The distance can be entered in centimetres or inches.

Speaker Levels

Finally the levels of all the speakers in the system need to be adjusted to match each other at the listening position, again to create a proper surround effect. To help with this the AVR500, AVR600 or AV888 can generate a test noise for each speaker which should be measured with a sound pressure level (SPL) meter. The meter should be set to 'C' weighting and slow response. The level of noise measured at the listening position from each speaker should be adjusted on the Speaker Trims page of the Setup menu so that the meter reads 75dB SPL. It does not matter what the system volume setting of the AVR500, AVR600 or AV888 is before turning the test noise on as the volume setting is overridden for the duration of the speaker noise test.

There are several basic SPL meters on the market at reasonable prices aimed at home cinema enthusiasts. Check your local technology store, search online or ask your dealer.

If you do not have an SPL meter, you can try to adjust the noise level of each speaker by ear. In this case it is not possible to adjust the speakers to the absolute 75dB SPL volume level, but you should aim for all speakers sounding equally loud. Setting speaker test noise levels by ear is not recommended as it is very difficult to do accurately, but is often better than doing nothing at all!

auto speaker setup

Auto speaker setup

There is a proprietary automatic loudspeaker setup function built into your AVR500, AVR600 or AV888. The Arcam Auto Speaker Setup function attempts to set all the essential speaker settings for all the speakers in your system. It also calculates room equalisation (Room EQ) filter values to remove some of the worst effects of resonant frequencies in the listening room.

Your AVR500/AVR600/AV888 package is supplied with a calibration microphone, which should be inserted into the **AUX** jack socket on the front panel and positioned at the main listening position. This microphone picks up the special calibration tones generated by the speakers when Auto Speaker Setup is run. The AVR500/AVR600/AV888 then analyses the signal and computes:

- which speakers are present,
- speaker type,
- speaker distance,
- speaker level,
- crossover frequency to the subwoofer (or large front speakers if no subwoofer is present),
- problem resonant frequencies in the room which need control by filtering.

It also warns if any of the speakers are too close to the microphone or if the measured tone is clipped.

To help the system be as accurate as possible when performing Auto Speaker Setup, there are a few guidance rules that should be followed:

- Minimise any background sounds in the listening room and other nearby rooms.
- Close all windows and doors in the listening room.
- Turn off all fans including air-conditioning systems.
- If holding the microphone in the hand rather than mounting on a tripod or similar, keep your hand and fingers still to avoid generating 'handling noise'.
- Position the set up microphone pointing upwards at roughly head height in the normal listening position. It is not necessary to point the microphone directly at the speaker generating the test tone. (It helps if you are able to position the microphone exactly where your head would normally be for listening, with the microphone in direct unobstructed view of all speakers.)
- If your system includes an active subwoofer, start by setting its output level/gain control to a value halfway between maximum and minimum.

When activated, a calibration tone is played through each channel in turn, including the subwoofer channel. The calibration tone cycles round each of the speakers twice. If you do not have a full 7.1 speaker configuration there will be periods of silence between some speaker channels. Follow the 'progress' information on-screen.

After all the channels have been measured, a summary of the speaker configuration will be displayed on-screen. You can then choose to accept the settings, re-measure your system again or cancel Auto Speaker Setup without storing the settings.

The Auto Speaker Setup function is found within the Setup menus, see page 37. **By default, Room EQ is not applied to any of the source inputs.** You should enable Room EQ on inputs you think benefit from this feature, as required, by listening when playing typical source material through each input. This is enabled from within the Input Config menu.

While room equalisation can help to reduce problems with listening room acoustics, it is usually far better to try to solve these problems with the room directly. Proper loudspeaker positioning, acoustic wall treatments and moving the listening position away from walls should produce far better results overall. However it may be difficult to do this in a home environment, so Room EQ is your next best choice.

Problems

We advise you to look over the reported measurements on the screen following Auto Speaker Setup for any obviously incorrect results, in particular to ensure the reported speakers match your configuration and that the speaker distances to the listening position appear look roughly correct. If the results are not what you expected re-run Auto Speaker Setup.

The Auto Speaker Setup function is normally quite accurate but occasionally false results can be generated. Problems may be as a result of:

- external sounds or rumbling / handling noises picked up by the microphone
- sound reflections off hard surfaces (e.g. windows or walls) close to the listening position,
- very strong acoustic resonances within the room.

If you are still experiencing difficulties or you wish to have the most accurate results for ultimate surround performance, we recommend using the manual method of establishing speaker distances and levels.

Using a subwoofer

If your system includes an active subwoofer you may need to re-run Auto Speaker Setup with the subwoofer output level / gain control set to a higher or lower value, if the summary screen reports problems setting the subwoofer up.

Auto Speaker Setup will attempt to choose a crossover frequency that allows the smoothest low frequency transition from the main speakers to the subwoofer. However if this does not produce pleasing results we recommend manually trying other crossover frequencies to find something more to your preference.

See the next sections for information of how to enter or change speaker settings manually.

setup menus

The Setup menus allow you to configure all aspects of your AVR500, AVR600 or AV888. The next few pages will go through the menu items and explain their function. The Setup menus will probably look quite daunting if you are new to setting up home cinema, but the majority of them need only be configured once when you first install the system (or if your system changes or you move house!).

The only way to view the Setup menus is on your display device (TV or projector) using the on-screen display (OSD) capability of the unit. To view the OSD for the initial setting up, connect any of the video outputs to your display device. You do not need to have a video source connected to the video inputs.


Entering Setup mode

To enter the setup menu, press the **MENU** button on the remote control or front panel. The front panel display shows **MENU** and the setup menu (pictured right) is displayed.

Unstable OSD menu or picture display?

The default AVR500/AVR600/AV888 output video resolution when first powered up out of the box is 525-line/60Hz NTSC for analogue video and 480i/60 for digital video. This has been chosen as most display devices can synchronise to this automatically. This can be changed in the Video Outputs section of the Setup Menus.

If the output resolution and frame rate is forced to a setting your display device does not support, the picture may become unstable or may not display at all. To reset the output video resolution and frame rate to the default values to restore the display, press and hold the **OK** button for three seconds.

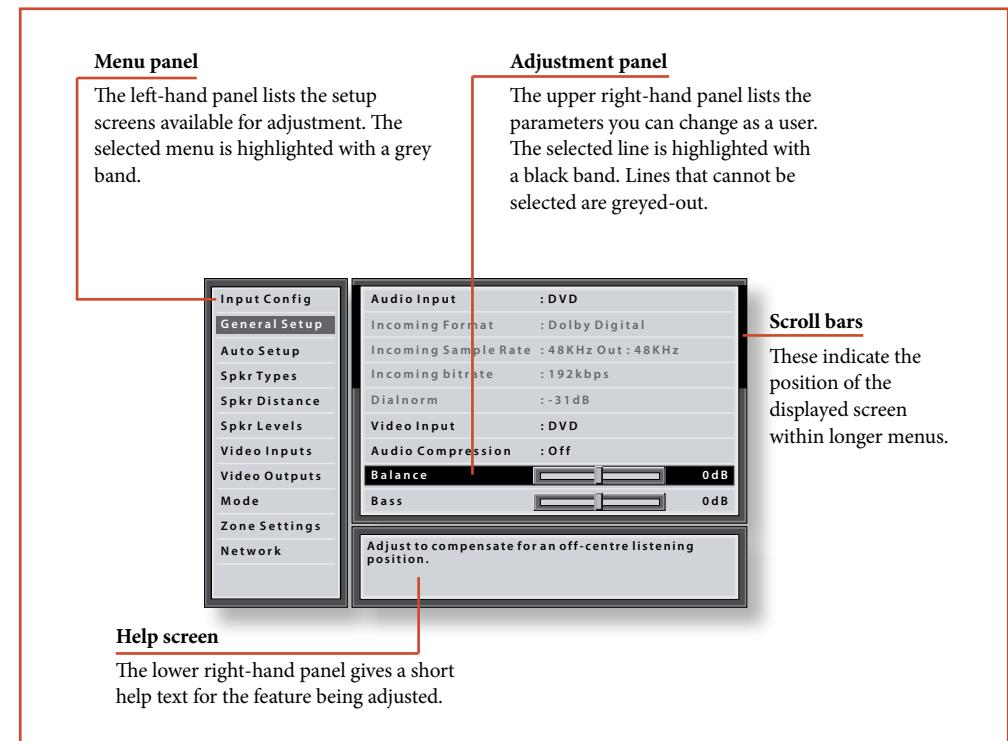

Navigating the setup menu

... using the remote control

The setup menu can be navigated by using the cursor (arrow) keys on the remote control. This is by far the easiest method.

1. To enter the setup menu, press the **MENU** button (which is located immediately under the navigation buttons).
2. Use the **▲** and **▼** keys to navigate up and down the main section headings in the left-hand panel.
3. Once you have the main section that you require highlighted, use the **▶** key to enter the section.
4. Use the **▲** and **▼** keys to navigate up and down the section settings in the left-hand panel. Some settings may be greyed out. These are either for information only (e.g. incoming sampling frequency) or are not currently selectable (e.g. network IP address when DHCP is used). Scroll bars on the sides of the right hand panel indicate your position in the settings list where there are more items than can be displayed at once.
5. Pressing **OK** selects a setting to change it, pressing **OK** again de-selects the setting.
6. At any time, press the **MENU** button to exit the menu. Any changes to settings are saved.

... using the keys on the front panel

The front panel controls can be used to configure the unit. Follow the instructions for using the remote control, in this case using **INPUT-** for down, **INPUT+** for up, **INFO** for left and **MODE** for right.

video & audio connection settings

Each input on the AVR500/AVR600/AV888 has multiple connection possibilities for both audio and video, including HDMI, Component Video, digital audio and analogue audio. When an input is selected, by default the AVR500/AVR600/AV888 will select HDMI for both video and audio connections.

Set the **Audio Source** and **Video Source** to the connection type you are using: HDMI, Component, S-Video or Composite for video and HDMI, Digital or Analogue for audio.

Entering Setup mode

Before entering the menu, select the input that you wish to change (e.g. **DVD**). To enter the setup menu, press the **AMP** button followed by the **MENU** button on the remote control. The front panel display shows **'MENU'** and the setup menu (pictured right) is displayed. Press the remote control **OK** key to enter the **Input Config** menu then use the **OK** key to navigate down to the **Video Source** option.

Selecting the video source



Once the **Video Source** option is highlighted as shown, press the **OK** key to select it for modification. Use the **▲** and **▼** keys to select from the list the video type you are using on this source.

- **HDMI:** the unit is forced to use the HDMI video input for this source.
- **Component:** the unit is forced to use the Component/RGB video input for this source.
- **S-Video:** the unit is forced to use the S-Video input for this source.
- **Composite:** the unit is forced to use the Composite video input for this source.

Selecting the audio source

Highlight the **Audio Source** as shown and press the **OK** key to select it for modification. Use the **▲** and **▼** keys to select from the list the audio type you are using on this source. **NOTE:** you may experience some audio transients when changing this setting. As a precaution, we recommend that you reduce the volume level first.

- **HDMI:** the unit is forced to use the HDMI audio input for this source.
- **Digital:** the unit is forced to use the optical (**TOSLINK**) or coaxial (**S/PDIF**) digital audio input for this source
- **Analogue:** the unit is forced to use the analogue audio input for this source.

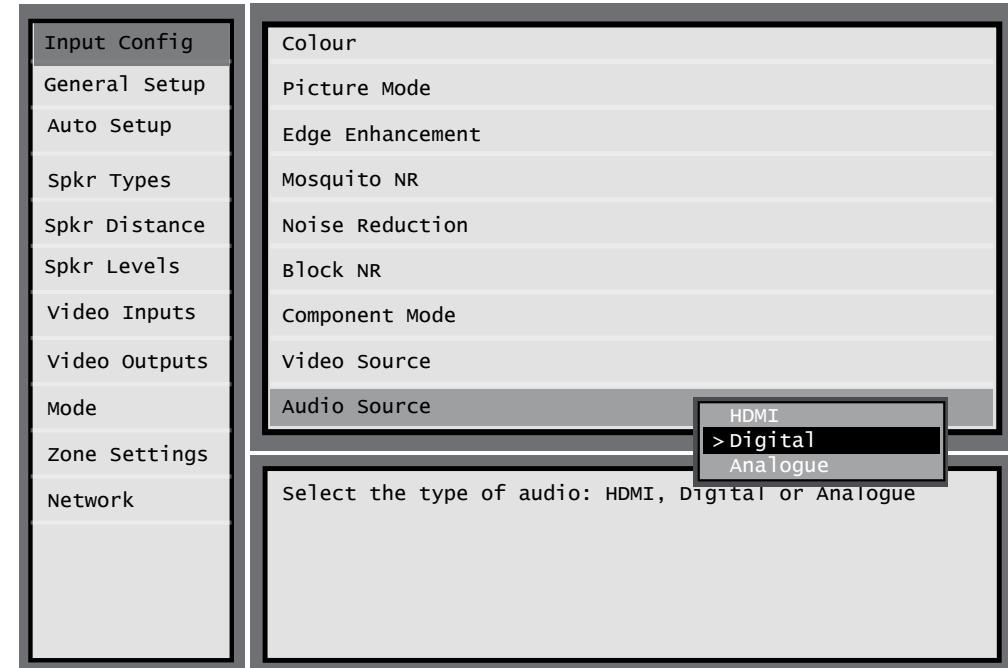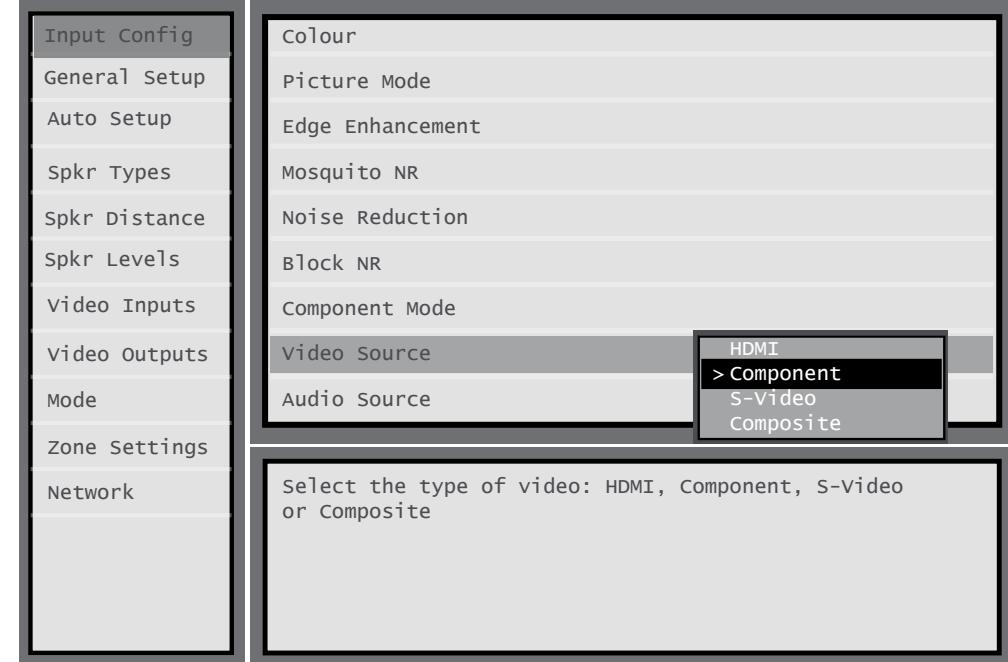

Input Config.

The audio and video settings on this page of the Setup menu can be tailored *specifically and independently to the currently selected input*.

When a different input is selected on the Input line, all the input-specific settings for that input are displayed below it. These settings are applied to the named Input only and are stored in memory and recalled each time the unit is powered up and whenever that input is selected.

Input – The currently selected input connectors to which the settings below relate.

Name – The display name of the input. You can change the name of any input to more closely match your setup. For example, if you had two satellite receivers, you could connect the main receiver to the Sat audio and video input connectors and change the Name to 'SAT 1'. You could then connect the second satellite receiver to the VCR audio and video input connectors, but change the VCR Name to 'SAT 2'. It is then clearer to users of your AVR500/AVR600/AV888 which inputs they wish to select when scrolling though.

Lip Sync – Each input can have its own setting to add a time delay between the audio and video signals to compensate for the sound and picture not being synchronised. This is normally required when video processing is used in the system for scaling or de-interlacing video. The range of lip sync delay is -5 to +220 milliseconds.

The lip sync adjustment can only correct for delayed video. If the audio is late set lip sync to its minimum.

Mode – Sets the initial audio decode mode for stereo sources on this input.

■ Last Mode recalls the last used setting for this input when a stereo source was applied. See section 'Multichannel source modes' on page 41 for more information.

Ext. Mode – Sets the initial audio decode mode for multichannel digital sources on this input.

■ Last Mode recalls the last used setting for this input when a stereo source was applied. See section 'Multichannel source modes' on page 41 for more information.

Treble –

Bass –

These allow you to alter the bass and treble tone controls for all currently active speakers for each individual

input. For example, if your PVR source sounds a little bass light, you can always correct for this by selecting PVR on the Input line at the top of this menu and add 2 or 3dB to the Bass control. Then, whenever the PVR input is selected, the bass is automatically boosted for as long as that input is selected.

Room EQ – When the Auto Speaker Setup function is run it also calculates Room Equalisation coefficients to remove some of the worst effects of resonant frequencies of the room at the listening position. By default Room EQ is not applied to any of the source inputs, however you can enable them on a per-input basis as you wish.

- **Not Calculated:** (Information only) Auto Speaker Setup has not been run or has errors so cannot be selected.
- **On:** Room EQ is applied to the current source.
- **Off:** Room EQ is not applied to the current source.

Input Trim – Sets the maximum analogue input signal level (sensitivity) on this input before the ADC (Analogue-to-Digital converter) signal path clips. Options are 0.5, 1, 2 and 4 volts RMS maximum input. The default is 2VRms maximum.

For example, analogue sources with low output levels may benefit by choosing the 1V maximum setting, or the 0.5V maximum setting if the source has a very low output. This helps maximise signal-to-noise performance of the unit and also helps keep the various analogue sources sounding about the same level for any given volume control setting.

Dolby Volume – Dolby Volume is an intelligent system that improves the perceived audio frequency response at lower listening levels and corrects for volume inconsistencies between sources (e.g. a rock radio station and a DVD) and between programming (e.g. a TV show and advertisement breaks).

- **Off:** (default) Dolby Volume is not applied to this input.
- **Cinema:** enables Dolby Volume for this source and configures the input for audio which comes mostly from movie soundtracks.
- **Music:** enables Dolby Volume for this source and configures the input for audio which comes from other sources (CD, TV, Satellite, Tuner, etc.).

Dolby Leveller – This setting of Dolby Volume controls how closely quiet and loud sources and programme content are matched to each other, based on the ear's perception of loudness. The range of values is 0 (minimal levelling) to 10 (maximum levelling). The default setting is 9, however we recommend

experimenting with lower values if all your source material is more closely matched in level. If the Volume Leveller function is set off, no level matching between sources and programme material is performed. Note however that turning the Dolby Leveller setting of Dolby Volume to 'Off' is not the same as turning the entire function of Dolby Volume to 'Off', as volume related frequency response processing is still active. See Dolby Volume on page 48 for more information.

DV Calib. Offset – The Calibration Offset parameter of Dolby Volume allows you to compensate for speaker efficiencies and listening position. The default value is 0 and this should normally produce a good result when the speaker levels of the AVR600 (or AV888 and amplifier combination) are set using a sound pressure level meter.

See the Dolby Volume section on page 48 for further information on Calibration Offset.

Surround EX – Sets how the unit should configure its decode mode when a Dolby Digital EX bitstream is received. Note that this setting only applies if you have Surround Back loudspeakers. You may wish to experiment with these two decode modes to see which you prefer with Dolby Digital EX encoded material. Options are Auto DD EX, Auto PLIIx and Manual.

- **Auto DD EX:** When a Dolby Digital EX-flagged bitstream is detected, the decode mode automatically changes to Dolby Digital EX. This can be temporarily overridden by pressing the MODE button on the remote or front panel.
- **Auto PLIIx:** When a Dolby Digital EX-flagged bitstream is detected, the decode mode automatically changes to Pro Logic IIx Movie. This can be temporarily overridden by pressing the MODE button on the remote or front panel.
- **Manual:** The received Dolby Digital EX is treated as if it is an ordinary Dolby Digital stream in that it does not automatically select the EX or PLIIx decode modes. Instead, the previously used decode mode for a multichannel digital source on this input is applied. However, either of the EX or PLIIx decode modes can be applied manually by pressing the MODE button.

Stereo Mode – If you have configured your system to have a subwoofer, then you have the flexibility to choose how bass information is distributed between the front left/right speakers and the subwoofer when listening to stereo (two channel only) analogue and digital sources. Choose the option which gives you the most solid, even sounding bass. If you are using

a subwoofer for stereo, please also see Sub Stereo below to set the level of the subwoofer. For best results test with a set-up disc or live programme material. This setting can be used to override your normal speaker settings in the Spkr Types menu whenever the unit plays stereo material. It is quite common to find that two channel stereo music listening is best done with a slightly different sub/speaker setting than for surround movies.

■ **As Spkr Types:** When an analogue or digital stereo source is played, your normal speaker configuration (as in Spkr Types menu) is used to reproduce the signal.

■ **Left/Right:** Full frequency stereo information. All audio is sent to the front left and right speakers only without any bass redirection. You can use this setting if you consider your front left/right speakers to be able to handle the full frequency range of music. If you have set your front left/right speaker size as Small in the Spkr Types setup page, you may wish to use this option to override the setting to Large for stereo music listening, if you have full frequency range left/right speakers.

It can often be beneficial to set full frequency range speakers to Small in the Spkr Types setup page for use with movies, if you have a subwoofer in your system. Doing so may deliver more impact on movie soundtracks as subwoofers are designed to handle reproduction of high bass content. However you may find that for stereo music a better overall result is obtained by not using the subwoofer and effectively treating the front left/right speakers as Large.

■ **Left/Right+Sub:** Full frequency range stereo is fed to the front left and right speakers and extracted bass is sent to the subwoofer. In this case the low frequency information is effectively duplicated.

■ **Sat+Sub:** Use this setting if you really do have Small satellite front left and right speakers, or if you prefer the overall sound of bass being handled by the subwoofer. Full bass management is used so that analogue and digital stereo sources are fed to the DSP where the bass is filtered off front left and right and redirected to the subwoofer.

NOTE

The Stereo Mode function is not available when using an analogue source in Stereo Direct mode.

Sub Stereo – If Left/Right+Sub or Sat+Sub is selected in Stereo Mode above, this setting adjusts the level of the subwoofer when the source is two channel stereo.

Brightness – Sets the video brightness for this input. This setting can be used to compensate for an overly dark or bright source picture on this input when compared with other video sources.

Contrast – Sets the video contrast for this input. This setting can be used to compensate for too much or too little contrast in the source picture on this input when compared with other video sources.

Colour – Sets the video colour saturation for this input. This setting can be used to compensate for too much or too little colour in the source picture on this input when compared with other video sources.

Picture Mode – Sets how the video processor in the AVR500/AVR600/AV888 interprets the video on this input. Normally the video processor automatically detects the original source type and correctly sets either Video mode or Film mode processing. In the unlikely event that the video processor misinterprets the video type, resulting in subtle picture artefacts, the video processor can be manually forced into Video mode or Film mode. This function should normally be set to Auto.

Edge Enhancement – Sharpens the picture from a source on this input.

Mosquito N.R. – Removes haziness that sometimes appears around objects in a picture from a source on this input.

Noise Reduction – Removes random noise within the picture from a source on this input.

Block N.R. – Removes block artefacts in overly compressed digital video from a source on this input.

Component Mode – Configures the current three-wire high quality analogue video input for component (YUV) video signals or RGB video signals. It is important to match the setting to the incoming video format otherwise the colours will be incorrect and the picture may be unstable.

Options are Normal, RGsB and RGB+Sync.

- **Normal:** (default) the three-wire input is configured for normal Component (YUV / YPbPr) analogue video.
- **RGsB:** the three-wire input is configured for RGB analogue video with video 'sync-on-green'.
- **RGB+Sync:** the three wire input is configured for RGB analogue video, with the video sync signal on the composite input for the current named source.

You should typically select RGB+Sync if you are using a standard SCART to 4-wire phono breakout cable to connect an RGB SCART source.

Note that if RGB+Sync is selected, the S-Video and Composite inputs cannot be selected as video inputs for the current source.

Audio Source – Selects the particular connection type for each input. The default is HDMI; this setting must be changed if another connection is used.

Select from the list the audio type you are using on this source.

NOTE: you may experience some audio transients when changing this setting. As a precaution, we recommend that you reduce the volume level first.

- **HDMI:** the unit is forced to use the HDMI audio input for this source.
- **Digital:** the unit is forced to use the optical (**TOSLINK**) or coaxial (**S/PDIF**) digital audio input for this source
- **Analogue:** the unit is forced to use the analogue audio input for this source.

Video Source – Selects the video signal connection for this source. The default is HDMI; this setting must be changed if another connection is used.

- **HDMI:** the unit is forced to use the **HDMI** video input for this source.
- **Component:** the unit is forced to use the **COMPONENT/RGB** video input for this source.
- **S-Video:** the unit is forced to use the **S-VIDEO** input for this source.
- **Composite:** the unit is forced to use the **COMPOSITE** video input for this source.

General Setup

General information and system controls.

Source Input – (Information only) The currently selected input to which the settings below relate.

Incoming Format – (Information only) The format of the digital audio stream connected to this input, if present.

Incoming Sample Rate – (Information only) The sample rate of the digital audio stream connected to this input, if present.

Incoming Bit Rate – (Information only) The bit rate of the digital audio stream connected to this input, if present.

Dialnorm – (Information only) If a Dolby Digital audio stream is connected to this input, this is the Dialogue Normalisation setting requested by the stream.

Video Input – The currently selected video input. For inputs that have video connections (e.g. SAT, PVR etc), audio and video inputs normally switch over together. However, here you can temporarily select a different video source for the current audio source. This feature may be useful, for example, if you are watching a sports game on satellite but on this occasion wish to listen to the commentary on the radio instead. This temporary override is reset when the input source is changed so that the Video Input follows the Audio Input setting (or the setting in the Video Inputs menu, if applicable).

Audio Compression – Allows selection of compression which is ideal for late night listening. The compression effect increases the volume of the quiet passages and decreases the volume of the louder passages. Compression only applies to some Dolby Digital and DTS soundtracks that support this function.

- **Off:** (default) no audio compression is applied.
- **On:** Audio compression is applied whenever a soundtrack supporting compression is received.
- **On / Auto:** As for On above, except for Dolby TrueHD soundtracks which support an additional Auto on/off setting

This setting applies to all inputs when a relevant digital audio stream is detected. It is stored in memory and recalled each time the unit is powered up.

Balance – To alter the sound balance temporarily between front left and right speakers. You can alter the sound stage to either the left or the right by up to 6dB. Note that it is not possible to shift the audio signal completely over to one channel. This function resets to equal left/right balance when the input is changed.

PLII Dimension –

PLII Centre Width –

PLII Panorama –

These allow the adjustment of the sound field for Dolby Pro Logic II Music mode decoding of two-channel sources. These setting apply to all inputs when PLII or PLIIx Music decoding is selected. The settings are stored in memory and recalled each time PLII or PLIIx Music mode is selected.

- **Dimension:** Allows the user gradually to adjust the sound field either towards the front or towards the rear. Settings range from -3 to +3. We recommend Dimension is set to 0 for normal use.

■ **Centre Width:** Controls the centre image width. With Pro Logic decoding, dominant centre signals come only from the centre speaker. If no centre speaker is present, the decoder splits the centre signal equally to the left and right speakers to create a 'phantom' centre image. The Centre Width control allows variable adjustment of the centre image so it may be heard only from the centre speaker; only from the left/right speakers as a phantom image; or from all three front speakers to varying degrees. We recommend Centre Width is set to 3 for normal use.

■ **Panorama:** Extends the front centre image to include the surround speakers for an exciting 'wrap-around' effect with side-wall imaging.

Digital Output Freq. – Sets the sampling frequency of the audio Analogue-to-Digital converter. This setting applies to all inputs when analogue audio is being processed (i.e. not Stereo Direct mode). It is stored in memory and recalled each time the unit is powered up.

Volume Adjustment – Sets the step size of the volume control.

- **Normal:** (default) volume control is in 1dB steps
- **Fine:** volume control is in 0.5dB steps

Maximum Volume – Limits the maximum volume setting the system can be turned up to in the main zone. This is a useful feature to prevent accidental overdriving of low power-handling speakers (for example). It is stored in memory and recalled each time the unit is powered up.

Max On Volume – Limits the maximum volume the system operates in the main zone when it is switched on or comes out of Standby. The system comes on at this stored volume setting if the last used (possibly very loud) volume exceeds this value. It is stored in memory and recalled each time the unit is powered up.

Audio In iPod – If you have an iPod connected to the AVR500/AVR600/AV888 using an Arcam rDock or rLead, this control allows you to set which audio input is used.

Auto Setup

Auto Speaker Setup of your loudspeakers and subwoofer (if present) is controlled by this menu. A full description of how Auto Speaker Setup works is given on page 37. Remember to insert the calibration microphone into the AUX input on the front panel and position the microphone at the listening position before running Auto Setup.

Run Auto Setup – Press **OK** (or **OK** on the remote) to start Auto Speaker Setup. The process will generate test tones from the speakers and will typically take less than two minutes. The test tone generator will cycle round each speaker twice.

Accept Setup – When Auto Speaker Setup has completed without errors you can choose to accept or reject the settings

- **No:** The settings are not stored in memory.
- **Yes:** All the speaker settings (speakers present, type, distance, level and crossover frequency) are stored in the relevant sections of the Setup Menu and overwrite any previous settings.

Auto Setup Progress – Gives a summary of what Auto Speaker Setup is doing as it progresses, starting with which speaker is being tested.

- **Calculating EQ:** Data gathered from each of the speakers is being processed.
- **Completed Error:** A problem was detected with the speaker setup. See the descriptions for each of the individual speakers, below. Alternatively an invalid speaker configuration was detected.

Front Left –

Centre –

Front Right –

Surr. Right –

Surr. Back Right –

Surr. Back Left –

Surr. Left –

Subwoofer –

If the above speakers are correctly detected as present in your speaker configuration, their size (Small or Large), distance from the listening position and trim level (dB) will be displayed. Note that size does not apply to the subwoofer. Otherwise one of the following messages will be displayed:

- **Not Present:** A speaker was not detected on this channel.

■ **Clipped:** The test tone detected by the microphone was distorted or clipped. This could be because you have very sensitive speakers and they are very close to the listening position. However it is more likely that the detected signal was corrupted by microphone handling noise or other external sounds. Try running Auto Speaker Setup again.

■ **Mic too close:** The speaker is too close to the listening position to be able to calculate its distance. If possible, try moving the speaker slightly further away from the listening position and run Auto Speaker Setup again.

Crossover Freq. – The frequency at which Auto Speaker Setup determined is the best point to filter low frequency sounds away from Small speakers and into the subwoofer (or Large speakers if a subwoofer is not present).

Spkr Types

Settings for the types of loudspeaker you have connected to your AVR500, AVR600 or AV888 and power amplifier (e.g. the Arcam P777). These settings are applied to all audio inputs and are stored in memory and recalled each time the unit is powered up.

Front Left / Right –

Centre –

Surr. Left / Right –

Surr. Back L / R –

Here you set the type of speakers that you have connected to your AVR500/AVR600/AV888:

- **Large:** capable of full frequency range reproduction
- **Small:** not capable of full frequency range reproduction at the low frequency end
- **None:** speaker not present in your configuration
- **Subwoofer:** Set whether a subwoofer is present or not.

For Surr. Back L/R, the number before Large and Small in the dropdown options list is the number of Surround Back speakers in your configuration. If you only have one Surround Back speaker connect it to the **SBL** output.

NOTE

It is not possible to set all speakers to Small unless there is a subwoofer in your speaker configuration. If you do not have a subwoofer, you will be forced to set your front speakers to Large.

Crossover Freq – This is the frequency at which loudspeakers set as Small start to redirect bass signals to the Subwoofer or Large speakers in your system. Small

speakers redirect bass to the subwoofer, if present. The exception is the Centre speaker which, if Small, redirects its bass to front left/right provided that they themselves are Large. This is done to help keep Centre bass directly in front of the listening position.

MCH Sub Levels – This setting controls the subwoofer level from an externally decoded multichannel source (DVD-A, SACD, etc). Most DVD players require a +10dB compensation on the subwoofer channel to maintain the correct balance with the main channels.

■ **+10dB comp.:** for normal DVD players which output the analogue subwoofer channel at the low 0dBr level. Gain compensation of +10dB is added to the subwoofer channel of the **MCH INPUT** in the AVR500, AVR600 or AV888.

■ **No comp.:** for DVD players which output the analogue subwoofer channel at the correct +10dBr level. No subwoofer gain compensation is needed on the subwoofer channel of the **MCH INPUT** in the AVR500, AVR600 or AV888.

Use Channels 6+7 for – If your main zone speaker set up does not include Surround Back Left and Right speakers, you can choose to use the Surround Back amplifier channels to bi-amp the Front Left and Right pair, or as a stereo power amplifier for Zone 2 (but note that powered Zone 2 is not available on the AV888).

Spkr Distance

Calibration settings for the distances between the loudspeakers and the listening position.

NOTE

Speakers that are not present in your configuration will be greyed out.

These settings are applied to all audio inputs and are stored in memory and recalled each time the unit is powered up.

Units – Select whether you wish to measure distances in centimetres or inches.

Front Left –

Centre –

Front Right –

Surr. Right –

Surr. Back Right –

Surr. Back Left –

Surr. Left –

Subwoofer –

As described in 'essential setup' on page 36, measure the distance from each loudspeaker in your system to your ear in the main listening position and enter the values. This allows the AVR500/AVR600/AV888 to calculate the correct relative delay for each loudspeaker.

Spkr Levels

Calibration settings for the test noise signal level through the loudspeakers and measured at the listening position.

NOTE

Speakers that are not present in your configuration will be greyed out.

These settings are applied to all audio inputs and are stored in memory and recalled each time the unit is powered up.

Use the  and  navigation buttons on the remote control to select the relevant speaker. Press **OK** to enable/disable the calibration noise and the  and  navigation buttons to adjust the noise level from each speaker.

Front Left –

Centre –

Front Right –

Surr. Right –

Surr. Back Right –

Surr. Back Left –

Surr. Left –

Subwoofer –

As described in 'essential setup' on page 36, adjust the level of the test noise from each speaker so that an SPL meter at the listening position measures 75dB SPL.

Video Inputs

Settings to optionally assign a video source to each of the normally audio-only inputs.

These settings are stored in memory and recalled each time the unit is powered up.

Video Input Tape –

Video Input CD –

Video Input Aux –

Video Input AM / FM –

Video Input Phono –

Video Input MCH –

Video Input iPod –

Video Input Net –

Video In Digital Radio –

The default for each of the audio inputs is 'None', however for example you could associate the satellite 'Sat' video with AM, FM and Digital Radio audio if you wished. This way you could listen to the FM or AM or Digital Radio commentary of a sports game but have the pictures from the satellite coverage.

Video Outputs

The settings in this menu control the output resolution from the video processor in the unit as well as the operation of the two HDMI outputs.

These settings are applied to all video inputs and are stored in memory and recalled each time the unit is powered up.

Progressive scan playback

HD 24p 1080p The AVR500, AVR600 and AV888 can support 1080p, 24 frames per second source materials. To enjoy

24p playback both the source device (e.g., a Blu-ray disc player) and the display device (e.g. a TV or projector) must be capable of supporting 24p.

To enjoy 24p playback, set the **Video Source** to **HDMI** in the **Input Config.** menu, and set the **Output resolution** to **1080p** (i.e. not to **Preferred**) in the **Video Outputs** menu. Also, ensure that the **Frame Rate** is set to **Auto**.

NOTE

Important points to remember:

For analogue outputs

The analogue output resolution should be chosen carefully; Composite and S-Video connections can only carry 480i (525-line NTSC) or 576i (625-line PAL) signals. If an output resolution higher than this is chosen in Out 1 Resolution, the Composite and S-Video main zone outputs will be disabled.

You should also set the frame rate (50Hz Interlaced for PAL, 60Hz Interlaced for NTSC) and the aspect ratio (4:3 standard or 16:9 widescreen) to match your display device. Note that S-Video and Composite can only carry Interlaced video. If you select Progressive analogue video, Zone 1 S-Video and Composite outputs will be disabled.

For HDMI outputs

The output resolution, frame rate and display aspect ratio can be automatically determined by the unit. Alternatively these settings can be manually selected. If you have two HDMI display devices connected, you can also configure which of the two HDMI outputs takes priority.

Zone 1 OSD – Selects whether the main zone pop-up OSD messages are On or Off. It is stored in memory and recalled each time the unit is powered up.

- When **On**, all user adjustments that are made during the general use of the unit are displayed on screen as well as the front panel display. This includes the adjustment of volume, subwoofer level, lip sync, tone controls, etc. It is stored in memory and recalled each time the unit is powered up.
- When **Off**, the above user adjustments will not appear on screen, only on the front panel display. This leaves the picture on your display device clear of pop-up text. However, regardless of this setting the Setup menus are always displayed on screen.

Analogue Output – This setting controls the output resolution of the analogue video outputs of Zone 1. This applies to all Zone 1 analogue video outputs: Component, S-Video and Composite. This setting is only valid if neither of the HDMI outputs **OUT 1** or **OUT 2** are being used at the time. See 'Important points to remember' above regarding analogue resolutions.

The dropdown list shows all the resolutions that the unit's video processor can output.

Analogue Frame Rate – This setting controls the output frame rate of the analogue video outputs of Zone 1. This applies to all Zone 1 analogue video outputs:

Component, S-Video and Composite. This setting is only valid if neither of the HDMI outputs **OUT 1** or **OUT 2** are being used at the time. See the Note 'Important points to remember' regarding analogue frame rates.

Display Type – Set the aspect ratio of your display device; 4:3 standard or 16:9 widescreen.

Output Switching – This setting controls the operation of the two HDMI outputs.

- **Auto-Priority Out 1/Out 2** senses which display device is turned on and gives priority to the named output (**OUT 1** or **OUT 2**) if both display devices are on at the same time. When both display devices are on at the same time, the output with the highest priority is used to configure the settings of the unit's video processor.
- **Output 1 or Output 2**: forces only the named HDMI output to be enabled.
- **Output 1 & 2**: enables both HDMI outputs simultaneously. In order to do this however, the settings of the unit's video processor are reduced down to the highest common set that can be supported by both display devices.

Out 1 Resolution – This setting controls the output resolution of HDMI output **OUT 1**. This setting is only valid if HDMI output **OUT 1** is the only active HDMI output at the time.

- The dropdown list shows all the resolutions that the video processor can output. Resolutions that are not supported by the connected display device are greyed out and cannot be selected.
- **Preferred**: sets the **OUT 1** resolution to be the preferred resolution that is requested by the display device. This is often the highest resolution the display device can receive.

Out 1 Frame Rate – This setting controls the output frame rate of HDMI output **OUT 1**. This setting is only valid if HDMI output **OUT 1** is the only active HDMI output at the time.

- The dropdown list shows all the frame rates that the video processor can output. Frame rates that are not supported by the connected display device at the above resolution are greyed out and cannot be selected.

the above resolution are greyed out and cannot be selected.

■ **Auto** sets the **OUT 1** frame rate to be the preferred frame rate that is requested by the display device for the currently used resolution.

■ **Follow Input** forces the **OUT 1** frame rate to the same as the input frame rate, regardless of the reported capabilities of the display device.

Lipsync 1 – (Information only) Displays how much lip sync is automatically applied to HDMI output **OUT 1** to compensate for video processing delays in the attached display device. Not all display devices support this function.

Out 2 Resolution – This setting controls the output resolution of HDMI output **OUT 2**. This setting is only valid if HDMI output **OUT 2** is the only active HDMI output at the time.

■ The dropdown list shows all the resolutions that the AVR500, AVR600 or AV888 video processor can output. Resolutions that are not supported by the connected display device are greyed out and cannot be selected.

■ **Preferred**: sets the **OUT 2** resolution to be the preferred resolution that is requested by the display device. This is often the highest resolution the display device can receive.

Out 2 Frame Rate – This setting controls the output frame rate of HDMI output **OUT 2**. This setting is only valid if HDMI output **OUT 2** is the only active HDMI output at the time.

■ The dropdown list shows all the frame rates that the video processor can output. Frame rates that are not supported by the connected display device at the above resolution are greyed out and cannot be selected.

■ **Auto**: sets the **OUT 2** frame rate to be the preferred frame rate that is requested by the display device for the currently used resolution.

■ **Follow Input** forces the **OUT 2** frame rate to the same as the input frame rate, regardless of the reported capabilities of the display device.

Lipsync 2 – (Information only) Displays how much lip sync is automatically applied to HDMI output **OUT 2** to compensate for video processing delays in the attached display device. Not all display devices support this function.

Out 1 & 2 Resolution – This setting controls the output resolution when both HDMI outputs are used simultaneously. This setting is only valid if Output Switching is set to Output 1 & 2.

- The dropdown list shows all the resolutions that the video processor can output. Resolutions that are not supported by the connected display devices are greyed out and cannot be selected.
- **Best:** sets the HDMI output to be the highest common resolution that is supported by both display devices.

Out 1 & 2 Frame Rate – This setting controls the output frame rate when both HDMI outputs are used simultaneously. This setting is only valid if Output Switching is set to Output 1 & 2.

- The dropdown list shows all the frame rates that the video processor can output. Frame rates that are not supported by the connected display devices at the above resolution are greyed out and cannot be selected.
- **Auto:** sets the HDMI output to be the highest preferred common frame rate that is supported by both display devices for the above resolution.
- **Follow Input** forces the OUT 1 & 2 frame rate to the same as the input frame rate, regardless of the reported capabilities of the display device.

Lipsync 1 & 2 – (Information only) Displays how much lip sync is automatically applied to HDMI outputs OUT 1 and OUT 2 simultaneously to compensate for video processing delays in the attached display devices. Not all display devices support this function.

Mode

Lists the decode and downmix options you wish to include when cycling through the options on the **MODE** button. Settings are Yes or No. The list is divided into two sections depending on the source audio type. See section ‘Multichannel source modes’ on page 47 for more information on each processing a decoding mode. These settings are applied to all audio inputs and are stored in memory and recalled each time the unit is powered up.

For Stereo sources:

*Dolby ProLogic –
Dolby PLIix Movie –
Dolby PLIix Music –
Dolby PLIix Matrix –
Dolby PLIix Game –
Neo:6 Cinema –
Neo:6 Music –*

The first section, ‘Stereo sources’ is the list of processing modes you wish to make available for stereo signals (analogue stereo, digital PCM stereo, Dolby 2.0, DTS 2.0, etc). When a stereo signal is applied, each press of the **MODE** button cycles through the processing modes you have enabled in the ‘Stereo sources’ section. The unprocessed Stereo option is always available for stereo signals therefore it is not shown in the list.

For Multichannel sources:

*Stereo Downmix –
Dolby Digital EX –
Dolby PLIix Movie –
Dolby PLIix Music –*

The second section, ‘Multichannel sources’ is the list of processing modes you wish to make available for multichannel digital signals (any Dolby or DTS digital stream that has more channels than stereo 2.0). When a multichannel digital signal is applied, each press of the **MODE** button cycles through the processing modes you have enabled in the ‘Multichannel sources’ section.

Zone Settings

Lists the volume and control settings for Zone 2 and Zone 3 (Zone 3 available with AVR600/AV888 only). These settings are applied to all audio inputs and are stored in memory and recalled each time the unit is powered up.

Z2 Audio Input – Selects the analogue audio to be routed to Zone 2.

Z2 Video Output – Selects the analogue video to be routed to Zone 2 for the current audio input.

Zone 2 Volume – The current volume in Zone 2.

Zone 2 Max. Vol – Limits the maximum volume setting the system can be turned up to in the Zone 2. This is a useful feature to prevent accidental overdriving of low power-handling speakers, for example.

Zone 2 Fixed Vol – The Zone 2 volume control can be locked at the current value for use with an external amplifier with its own volume control in Zone 2.

Zone 2 Max On Vol – Limits the maximum volume the system operates in the Zone 2 when it is switched on or comes out of Standby. The system comes on at this volume if the last used (possibly very loud) volume exceeds this value.

Zone 3 Volume – The current volume in Zone 3.

Zone 3 Max. Vol – Limits the maximum volume setting the system can be turned up to in the Zone 3. This is a useful feature to prevent accidental overdriving of low power-handling speakers (for example).

Zone 3 Fixed Vol – The Zone 3 volume control can be locked at the current value for use with an external amplifier with its own volume control in Zone 3.

Zone 3 Max On Vol – Limits the maximum volume the system operates in the Zone 3 when it is switched on or comes out of Standby. The system comes on at this volume if the last used (possibly very loud) volume exceeds this value.

Standby – When a Standby command is received by an infra-red eye in Zone 2, this setting controls which parts of the AVR500, AVR600 or AV888 to turn on and off:

When **Local Only**, the Standby IR command only affects the zone it was received in (Zone2 or Zone3).

When **All Off**, the Standby IR command affects the entire system in all zones.

Network

The AVR600 and AV888 are fitted with a network audio client (optional for the AVR500) which is capable of playing internet radio stations as well as stored music on a network storage device such as a PC, or on a USB flash drive.

Use DHCP – Select if your network uses DHCP

- **No:** To assign a fixed IP address manually.
- **Yes:** To use network parameters given by the DHCP server.

MAC address – (Information only) The unique address of the network card in your AVR500/AVR600/AV888.

IP Address – If not using DHCP, enter the IP address you have assigned to the AVR500/AVR600/AV888 for your network.

Subnet Mask – If not using DHCP, enter the subnet mask for the AVR500/AVR600/AV888 on your network.

Gateway – If not using DHCP, enter the IP address of the router the AVR500/AVR600/AV888 is connected to.

Primary DNS – If not using DHCP, enter the Primary DNS IP address of your internet service provider.

Alternate DNS – If not using DHCP, enter the Secondary DNS IP address of your internet service provider.

Use Proxy – Select if you connect to the network via a Proxy Server.

- **No:** If you connect directly onto the network.
- **Yes:** If you connect to the network via a Proxy Server.

Proxy Address – If connecting via a Proxy Server, enter its IP address.

Proxy Port – If connecting via a Proxy Server, enter the port number to which the Proxy responds.

English

E-45

decoding modes

Introduction

Your AVR500/AVR600 receiver or AV888 pre-amp provides all the key decoding and processing modes for analogue and digital signals, including the latest high definition audio formats over HDMI.

Modes for digital sources

Digital recordings are usually encoded to include information about their format type. The unit detects automatically the relevant format in a digital signal – such as Dolby TrueHD, Dolby Digital Plus, DTS-HD Master Audio, Dolby Digital, or DTS – and switches in the appropriate decoding.

Modes for analogue sources

Analogue recordings do not contain information about their encoding formats, so the desired mode – such as Dolby Pro Logic – needs to be selected manually.

Mode memory

Dolby Digital or DTS audio (including the high definition formats) can be output in two mix modes, selected using the **MODE** button:

- Surround (e.g., five main channels plus a subwoofer for a 5.1 source)
- Stereo downmix.

Two-channel audio, regardless of whether it is analogue or digital can also be output in two mix modes, selected using the mode button:

- Surround (e.g., Dolby Pro Logic II Movie, Neo:6 Music, etc.)
- Stereo.

The AVR500/AVR600/AV888 stores the settings for each source (except MCH). Thus the decoding mode for the following groups of source material can be stored independently:

- Dolby Digital (multichannel) and DTS source material
- Two channel Dolby, PCM or Analogue source material

Two-channel source modes

The following decoding and surround modes are available for standard and high definition Dolby Digital 2.0, DTS 2.0, PCM or analogue sources:

Stereo

Pro Logic II Movie

Pro Logic II Music

Pro Logic II Game

Pro Logic IIx Movie

Pro Logic IIx Music

Pro Logic IIx Game

Pro Logic

Neo:6 Cinema

Neo:6 Music

NOTE

Pro Logic IIx modes are only selectable when Surround Back speakers are present.

Stereo

In this mode the unit works as a conventional high quality audio amplifier. Note that if the subwoofer is enabled in stereo mode, then some processing of the signal will be carried out. To achieve ultimate sound quality with analogue sources, select the Stereo Direct function if an analogue connection is present.

Dolby Pro Logic II

Dolby Pro Logic II decoding is designed to produce five-channel output from two-channel source material.

There are three different modes available in Pro Logic II: 'Movie', 'Music' and 'Game' modes, which are intended for use as their names suggest. Due to the different recording methods used for movies, music and video games, it is recommended that the correct decoding mode for your source material is used to obtain best results.

■ **Movie mode**: This is intended for use with 'cinematic' material, which is mixed and monitored in a calibrated multichannel environment. Movie mode is a 'fixed' mode that is designed to give a similar sound when listening using a home cinema system to that obtained in a cinema.

■ **Music mode** : Stereo music is not designed for surround processing, although good surround effects can be obtained through careful production. As the optimum decoding method varies according

to the recording, Music mode allows the user adjustment of the processing characteristics.

- **Game mode**: Video games today are extremely sophisticated, with dramatic 5.1 surround audio tracks. Game mode gives augmented bass management to capture the full effect of game sounds panned to the surrounds, ensuring the bass impact from purer surround effects are fully delivered to the subwoofer.

Dolby Pro Logic IIx

Dolby Pro Logic IIx is an extension of the Dolby Pro Logic matrix-decoding method. The decoder allows the processor to derive seven outputs from a two or multichannel (up to 5.1 with EX) source to take better advantage of all amplifiers and speakers in a 7.1 setup. As with Pro Logic, there are three different modes available: Movie, Music and Game. Due to different recording methods used for movies and music, you should select the correct mode for your source material.

Dolby Pro Logic

Dolby Pro Logic is a legacy mode that is designed to produce a five-channel output from two-channel source material. It should be used only when the source material is encoded as Dolby Pro Logic; otherwise, we recommend the use of Dolby Pro Logic II. This is because Pro Logic processing on straight stereo sources can sound muffled and compressed.

DTS Neo:6

DTS Neo:6 provides up to six full-band channels of decoding from stereo material. The AVR500, AVR600 or AV888 will derive separate channels corresponding to the standard home theatre layout.

- **Cinema** : A movie mode designed to reproduce a movie theatre environment. Neo:6 technology allows various sound elements within a channel or channels to be steered separately, and in a way which follows the original presentation naturally.
- **Music** : A music mode designed to produce a lively, high-integrity surround-effect from most two-channel music sources from all available speakers. Neo:6 music mode expands stereo recordings into the five or six-channel layout without diminishing the subtlety and integrity of the original stereo recording.

Multichannel source modes

Digital multichannel source material is normally provided as '5.1 audio'. The '5.1 channels' comprise of: left, centre and right front speakers, two surround speakers and a low frequency effects (LFE) channel. Since the LFE channel is not a full range channel, it is referred to as '1'.

Surround systems decode and reproduce the 5.1 channels directly. Dolby Digital EX and DTS-ES matrix enhanced decoding systems create one extra rear channel from information buried in the two surround signals of the 5.1 source. These EX and ES enhanced systems are sometimes referred to as '6.1' systems. This extra surround back channel is normally reproduced through two separate loudspeakers, creating a '7.1' system.

DTS-ES discrete is a true '6.1' source, with six discretely encoded channels, plus the '1' LFE channel.

Dolby Digital Plus, Dolby True-HD and DTS-HD are high-resolution surround formats found on Blu-ray and HD-DVD discs

Decoding modes

The modes given in the following table are available for multichannel digital sources.

Special modes such as DTS-ES 6.1 discrete, Dolby Digital Plus, Dolby Tru-HD and DTS-HD are only available from the correct source material.

<i>High resolution audio sources</i>	
Dolby True-HD	Provides up to 7.1 full channel at 96kHz, 24bit resolution, with potentially no losses in the compression process. Data rates can be up to 18Mbps.
Dolby Digital Plus	Provides up to 7.1 discrete channels of audio with less compression than traditional Dolby Digital encoding. Data rates can be up to 6Mbps.
DTS-HD Master Audio	Provides up to 7.1 full channel at 96kHz, 24bit resolution, with potentially no losses in the compression process. Data rates can be up to 24.5Mbps.
<i>For Dolby Digital sources</i>	
Dolby Digital 5.1	The most commonly used sound format for DVD video, and is also the standard for US television. Dolby Digital 5.1 sources deliver sound with five discrete full-range channels; left, centre, right, surround left, surround right, plus a low frequency effects (LFE) channel.
Dolby Digital 5.1 Stereo Downmix	Provides a stereo downmix of the source material for use with headphones.
<i>For DTS sources</i>	
DTS 5.1	Less common than the Dolby Digital format, but generally recognised within the audio industry as being of superior sound quality. DTS 5.1 delivers surround sound with five full range channels plus an LFE channel.
DTS 5.1 Stereo Downmix	Provides a stereo downmix of the source material for use with headphones.
DTS-ES 6.1 Matrix	This is a 6.1 channel format based on DTS 5.1. It has the sixth channel matrix encoded into the surround left and surround right channels. The sixth channel is a surround centre channel and is directed to the surround back left and surround back right speakers.
DTS-ES 6.1 Discrete	This is a true discrete 6.1 channel sound format (unlike DTS-ES Matrix). DTS-ES discrete mode operates only on sources with DTS-ES 6.1 discrete audio encoding.
DTS96/24	Provides up to 5.1 channels of audio at 96kHz, 24bit resolution for superior sound quality compared to standard DTS 5.1
<i>Post-processing</i>	
Dolby Digital EX	This is an extension to Dolby Digital decoding that provides a 6-channel output from a 5-channel input. The extra channel is the centre-surround channel (for which the two surround back speakers are used), and is derived from the left and right surround channel information. This decode mode should be used only when the source material is 'Surround EX' encoded (which is normally indicated on the disc packaging and should be detected automatically by the AVR500/AVR600/AV888), but may be used at other times if desired.
Pro Logic IIx Movie	This mode is used to derive information for the individual surround back channels from the surround channels, using the Pro Logic IIx decoder.
Pro Logic IIx Music	This mode is used to derive information for the individual surround back channels from the surround channels, using the Pro Logic IIx Music decoder. The controls for adjusting Pro Logic IIx Music in 'General Setup' can be used in this mode.

Dolby volume



Dolby Volume is a sophisticated new technology that resolves the problem of different volume levels between programme content (e.g. a TV show and advert breaks) and between sources (e.g. a rock radio station and DVD, or between two TV stations). It lets the listener enjoy everything at the same preferred listening level without having to reach for the volume control to compensate for the different recording/output levels. This is the Volume Leveller function of Dolby Volume.

Dolby Volume also works in conjunction with the AVR500, AVR600 or AV888 volume control setting to compensate for the ear's changing sensitivity at different frequencies depending on how loud the audio is. It is based on a model of how human hearing works. It properly balances low, mid and high frequencies to maintain all the nuances and impact of the original audio regardless of the actual selected playback volume level. This is the Volume Modeller function of Dolby Volume.

Dolby Volume measures, analyses and maintains volume levels based on how people perceive sound. A variety of audio parameters are monitored including spectral- and time-based loudness to ensure that perceived dynamics, timbre and bass performance remain consistent at all volume levels.

Dolby Volume also lets the listener control a programme's dynamic range – the range between loud and quiet sounds. For example, with the volume turned down for late-night viewing, dynamic range can be adjusted so that speech remains clear and loud effects or music passages retain their impact without waking up the family.

Settings

Dolby Volume can be applied to any analogue or digital stereo source or any digital multichannel source. *It is not available in Stereo Direct or on the analogue multichannel input.* Dolby Volume can even be applied to processing of stereo signals (e.g. PLII Music) or when down-mixing a digital multichannel source (e.g. Dolby Digital 5.1 down to stereo).

Dolby Volume can be enabled and configured separately for each audio input in the Input Config menu. The default is Off for 'audiophile' listening to analogue or digital stereo sources, however you may wish to enable

Dolby Volume on some or all inputs to maintain the same perceived overall listening level between sources and frequency response regardless of the volume setting. There are two modes for Dolby Volume: 'Cinema' and 'Music', which calibrate the system to match the type of audio material generally played on each input. Movie should be selected for sources which typically play movie soundtracks. Music should be selected for all other sources (CD, TV, Satellite, Tuner, etc.). Most of the controlling parameters of Dolby Volume are automatic as they are dependent on analysis of the audio signal and the volume setting of the AVR500, AVR600 or AV888. However, the Volume Leveller and Calibration Offset controls (see below) can be adjusted to your preference.

Volume Leveller

The Volume Leveller function of Dolby Volume controls how closely quiet and loud sources and programme content are matched to each other, based on the ear's perception of loudness. The range of values is 0 (minimal levelling) to 10 (maximum levelling). The default setting is 9. If the Volume Leveller function is turned off, no level matching between sources and programme material is performed. This is not the same as turning Dolby Volume off as volume related frequency response processing is still active.

When Dolby Volume is being applied to the current input, a Dolby Volume processing mode indicator is shown on the OSD and the front panel display.

Calibration Offset

The Calibration Offset parameter of Dolby Volume allows you to compensate for speaker efficiencies and listening position – effectively moving the reference listening level up or down the volume scale. The default value is 0 and this should normally produce a good result when the speaker levels are set using a sound pressure level meter at the listening position (75dB SPL, 'C' weighting, slow response).

English

tuner operation

Tuner – AVR500/AVR600 only

The AVR500/AVR600 is fitted with an internal AM/FM tuner. Depending on your location and installed options, it may also be fitted with a DAB tuner (Europe) or Sirius satellite radio connection (Americas; AVR600 only). Sirius requires the purchase of the 'SiriusConnect™ Home Tuner' kit and Sirius subscription – please visit www.sirius.com for details.

This section deals with tuner operation, for information on setting up the tuner and installing aerials, see page 14.

When a tuner input is selected, the OSD shows a list of radio presets plus an information panel giving all available information about the current frequency (for AM and FM) or channel (for DAB or Sirius).

The front panel will also give the same information, pressing the **INFO** key will cycle through the various items of information:

AM

- Processing mode (default)
- Frequency
- Signal strength

FM

- Processing mode (default)
- Radiotext (if available; shows 'No radiotext' if none present)
- Programme type (if available)
- Signal strength

DAB

- Processing mode (default)
- Radiotext (if available; shows 'No radiotext' if none present)
- Programme type
- Signal quality
- Bit-rate of transmission

Sirius

- Processing mode (default)
- Artist Name: Song Title
- Composer (if available)
- Category Name
- Signal quality

Tuning/Channel Selection

When switching to the internal **TUNER** source, the AVR500/AVR600 enters the last used tuner band, be it AM / FM / DAB (if fitted) / Sirius (if fitted). Repeatedly pressing **TUN** cycles through the available tuner bands on your AVR600.

FM/AM analogue radio

Frequency tuning on FM and AM radio is done using the **◀** and **▶** buttons on the CR102 remote control in **TUN** device mode. Individual presses move the frequency down and up one step. If you press and hold either of the tuning buttons for two seconds, the tuner scans to the next strong signal. You can stop a scan at any time by pressing one of the tuning buttons again.

In Europe, the internal FM radio is capable of receiving RDS (Radio Data System) radiotext signals that are transmitted on some stations. The RDS information typically includes the radio station name, the music or speech genre as well as additional information related to the current programme. On music stations this is often information on the currently playing track.

DAB digital radio

If your AVR500/AVR600 is fitted with the optional DAB tuner you will need to scan for available stations before being able to listen to them.

To scan for DAB stations, first select the DAB tuner then press and hold **OK** until the display indicates scanning has started. The AVR500/AVR600 will then scan all the DAB radio frequencies and compile a list of the stations that are available.

When the scan is complete, you can scroll through the station list using the **◀** and **▶** buttons on the CR102 remote control. To listen to the currently displayed station press the **OK**. If you do not press **OK** within two seconds, the display will revert to displaying the currently playing station.

Internet radio

Please see the Network/USB Operation section on page 52 for details of internet radio operation.

Saving and selecting Presets

Preset selection uses the **◀** and **▶** keys on the remote to browse and **OK** to select the preset when the CR102 is in **TUN** device mode.

Up to 99 presets can be stored and these can be from any band, for example Preset 1 could be an AM station, preset two a DAB station, etc. Pressing the **OK** key causes the next available preset number to be displayed, then pressing the **OK** key again stores the current frequency/channel in that preset. If a different preset number is required, press the **◀** or **▶** keys until the desired number is displayed before pressing the **OK** key for a second time.

Deleting Presets

When in tuner browse mode (using **◀** and **▶** to scroll through the presets), the yellow button on the CR102 remote is used to delete the currently highlighted (but not playing) station or frequency.

Sirius satellite radio (AVR600, US & Canada only)

In this section it is assumed that you already have a 'SiriusConnect™ Home Tuner' kit and a Sirius subscription, and that the antenna is already correctly placed to receive Sirius broadcasts. Please visit www.sirius.com for more information.

Add to your subscription

Before being able to receive satellite radio broadcasts you will need to update your Sirius subscription to add the ID number of the Sirius receiver module in your AVR600. The Sirius ID can be found by switching to the Sirius source and selecting channel 0. The AVR600 displays the 12-digit number on the OSD and on the front panel display. You should make a note of this ID number, then select Sirius channel 184 while you apply this ID number to your account at www.sirius.com or by calling 1.888.539.SIRIUS (7474).

Once your subscription is updated, a code is sent over Sirius channel 184. When this code is received the AVR600 displays 'SUBSCRIPTION UPDATED'. This display remains until cleared by pressing any button. The Sirius radio module is now fully operational.

Please note that, depending on your subscription, some channels may not be available. If a channel is not part of your subscription package, you are invited to subscribe to the channel - 'CALL 888-539-SIRIUS To Subscribe' is displayed and audio is muted. If you have any queries about your subscription, please contact Sirius.

Operation

In addition to the channel and preset selection, previously mentioned, you can also cycle through the channel categories (Rock, Pop, Country, etc.) using the and keys. The first channel in each category is displayed. You can then scroll through other channels in that particular category using the or buttons on the CR102 remote. On the OSD a star ('*') is shown before the category name to show you are scrolling through channels only in the current category. Press to select the currently displayed channel to listen to it otherwise the display times out and returns to the currently playing channel information.

Locking Channels

The Sirius module in the AVR600 has a parental lockout feature which allows you to assign a 4-digit code to any channels you do not wish to be generally available to users.

Channels can be locked out individually by pressing and holding the **MODE** key. 'Lock?' also appears on the lower line of the On Screen Display. Pressing confirms and applies the parental lock to the channel and the display returns to the channel name.

If a locked channel is selected, the audio will be muted and the user prompted on the display to enter the unlocking code. 'Unlock code :____' is displayed.

The default unlock code is 0000.

If the code is entered correctly the audio for this channel unmutes. If the code is not entered correctly, the previously played channel is re-selected.

To remove the parental lock from one of the locked channels (so that the unlocking code is no longer required to listen to them), navigate to the channel, select it and enter the unlocking code to unmute the channel. Press and hold the **MODE** key until the display shows 'Unlock ?'. Press to remove the lock from the channel.

To change your locking code, in **TUN** device mode on the remote, press and hold the .

NOTE

The locking code is reset to 0000 if a factory reset of the AVR600 is performed.

Sirius errors

If an invalid channel is selected, the AVR600 displays 'INVALID CHANNEL' and the channel reverts to the previous valid channel.

If there is a loss of signal, the AVR600 displays 'ACQUIRING SIGNAL'.

If the antenna is disconnected, the AVR600 displays 'ANTENNA ERROR'.

During the channel map update, the message 'Updating channels - xx%' is displayed. Note that audio is muted until the update is complete. When complete, the AVR600 retunes to the original channel and restores the audio.

network/usb operation



The AVR600 and AV888 are fitted with a network audio client which is capable of playing internet radio stations as well as stored music on a network storage device such as a PC, or from a USB flash drive. The network audio client is an optional extra for the AVR500, please contact your dealer for upgrade information.

For information on installing the AVR500, AVR600 or AV888 on your network, see page 22.

The unit supports the following file formats:

- MP3
- WMA (Windows Media Audio)
- WAV
- FLAC (Free Lossless Audio CODEC)
- MPEG-4 AAC (iTunes) with DRM10 support
- Ogg Vorbis

Favourites

You can store tracks or radio stations in your 'favourites' folder for easy access later. Once playing, pressing the **FAV+** key adds the track to the 'favourites' folder. Pressing **FAV-** removes the track from the 'favourites' folder (this key only has an effect if the track is in the favourites folder).

Selecting the playback source

Selecting the network client will allow playback of internet radio stations and stored music on a networked storage device or USB memory device.

To select the network source the CR102 remote must first be in **AMP** device mode (press **AMP**). Then press **SHIFT** + **iPOD** on the remote to select the Network source. You can also cycle to it using the **-INPUT / INPUT+** keys on the front panel.

The 'home' page will display all available storage devices, as well as your 'favourites' folder. Navigate through these devices using the **◀**, **▶**, **▲** and **▼** keys. Folders that may contain playable files have a **[]** symbol, playable files have a **[♪]** symbol. Once you reach the track you wish to play, press **OK**.

Once playing, pressing **OK** again or **II** will pause the track.

Pressing the **▶** key skips forward one track. If the last track is reached the key is ignored.

Pressing the **◀** key skips back one track. If the first track is reached, the key is ignored.

Pressing and holding the **OK** or **■** key for two seconds stops playback.

The **▶** key exits any navigation pages and shows the "Now Playing" screen.

Pressing the **RND** key on the remote plays the tracks in the current folder in a random order.

Pressing the **RPT** key on the remote repeats the current track, pressing it again repeats all the files in the current folder, pressing it again cancels the repeat function.

NOTE

For playback from a network device, the network device needs to run a universal plug and play (uPnP) service, such as Windows Media Player 11. This can be downloaded free of charge from www.microsoft.com or installed via the Windows update installer. Windows Vista™ has this functionality built in.

Other free and paid-for uPnP services are available for other computer operating systems. Some network attached storage (NAS) systems include a built-in version of a uPnP service.

USB playback

Insert a USB device into the socket on the rear panel and select select the network client input. The USB device appears in the list of folders that can be navigated. Navigate to the music file and press the **OK** key.

Internet radio stations

Although you can manually enter the URL of an internet radio station, the unit uses the vTuner service to allow easy browsing of internet radio stations and podcasts. To set up this service for your AVR500, AVR600 or AV888, please visit www.arcamradio.co.uk

There, you will be asked to enter the Media Access Controller (MAC) address which is the unique ID of your AVR500/AVR600/AV888. This MAC address can be found in the network section of the setup menu.

Once you have entered the MAC address, you can then browse stations and podcasts and set up groups of favourite stations. When you next connect your unit to the internet, these groups will appear in the selection list.

Pressing the **INFO** key will cycle what is shown on the lower right portion of the front panel display between:


- Elapsed Time (default)
- Processing mode
- Album (if available)
- Artist (if available)
- File information (bitrate, type).

iPod

It is possible to connect an iPod to your AVR500, AVR600 or AV888 using either the Arcam rLead or rDock accessories (please contact your dealer).

Connect the 9-way plug into the socket marked 'rLead/rDock' and the audio leads to the AV input. If your iPod has video output and you are using the rDock, connect the composite and S-Video leads to the AV video inputs.

To select the iPod input, press the **iPOD** key on the remote while in **AMP** Device Mode, or cycle to it using the **-INPUT / INPUT +** keys on the front panel.

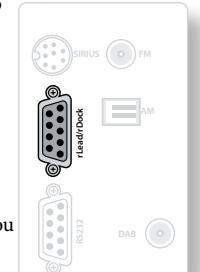


external amplifiers

English

Analogue pre-amplifier outputs (AVR600/AV888 only)

All pre-amplifier analogue outputs are buffered, have a low output impedance and are at line level. They are able to drive long cables or several inputs in parallel if required.

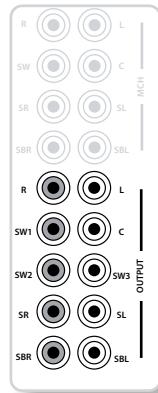

R, L, C

Connect these to the equivalent (Right, Left and Centre) front channels of your power amplifier.

SW1

Main subwoofer output. Connect this to the input of your active subwoofer, if present.

SW2, SW3

Subwoofer 2 and Subwoofer 3 auxiliary outputs. These are equivalent to SW1 but they allow the use of multiple subwoofers.

SR, SL


Surround Right and Surround Left outputs. Connect these to the Surround Right and Left power amplifier inputs.

SBR, SBL

Surround Back Right and Surround Back Left outputs (only used in 6.1 and 7.1 channel systems). Connect these to the Surround Back Right and Surround Back Left power amplifier inputs.

For 6.1 channel speaker configurations, connect the single Surround Back power amplifier to the SBL output.

AV888

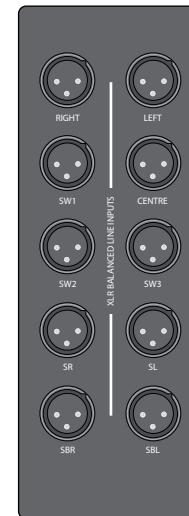

XLR balanced line outputs – AV888 only

The AV888 processor provides XLR connectors for each of seven channels, to an XLR-equipped amplifier (e.g. the Arcam P777). Three XLR subwoofer outputs are provided in addition.

RIGHT, LEFT, CENTRE

Connect these to the equivalent (Right, Left and Centre) front channels of your power amplifier.

SW1

Main subwoofer output. Connect this to the input of your active subwoofer, if present.

SW2, SW3

Subwoofer 2 and Subwoofer 3 auxiliary outputs. These are equivalent to SW1 but they allow the use of multiple subwoofers.

SR, SL

Surround Right and Surround Left outputs. Connect these to the Surround Right and Left power amplifier inputs.

SBR, SBL

Surround Back Right and Surround Back Left outputs (only used in 6.1 and 7.1 channel systems). Connect these to the Surround Back Right and Surround Back Left power amplifier inputs.

For 6.1 channel speaker configurations, connect the single Surround Back power amplifier to the SBL output.

multi-room set up

The AVR500, AVR600 and AV888 allow independent routing and control of analogue audio, Composite and S-Video to a separate set of equipment, typically used for a second living space, e.g., bedroom or lounge. The AVR600 and AV888 also allow a copy of the Zone 2 analogue audio to be routed to and controlled in a third living space, Zone 3.

The connection guide on the facing page shows how the AVR600 or AV888 is normally connected in a multi-room installation.

Zone 2

Zone 2 receives only signals obtained by the AVR500, AVR600 or AV888 from the analogue audio, Composite and S-Video inputs. The analogue inputs are required because there is no analogue-to-digital, digital-to-analogue or DSP processing available for Zone 2 signals – the unit only converts video formats for Zone 1.

For this reason, we recommend that in addition to any digital connections, the Composite and/or S-Video outputs from your source devices are connected to the AVR500, AVR600 or AV888.

Video outputs

The Z2 S-Video and/or Composite output connectors of the AVR500/AVR600/AV888 should be connected to the analogue video inputs (usually labelled S-VIDEO IN or COMPOSITE VIDEO IN) of the display device in Zone 2.

If you wish to make an HDMI connection to Zone 2, you must accept the limitations of the AVR500/AVR600/AV888 video processing system.

HDMI OUT 1 and **OUT 2** both carry the same signals (as there is only one video processing engine) and are primarily intended for use in Zone 1. Full HDMI video functionality in Zone 2 can only be achieved if Zone 1 is not being used at the same time.

If Zone 1 is being used at the same time as Zone 2, Zone 2 must follow the Zone 1 source selection if you wish to receive HDMI signals in Zone 2. Zone 2 must also be the same video resolution as Zone 1. If you wish to watch a different source in Zone 2 than is currently showing over HDMI in Zone 1, Zone 2 will be forced to use the analogue video connections into and out of the AVR500/AVR600/AV888.

Due to the complications of using HDMI in Zone 2 we recommend the use of analogue video connections instead, particularly as it is not possible to apply audio lip sync to Zone 2 audio to compensate for video processing delays.

Audio outputs

The **Z2 OUT**, R and L phono sockets should be connected to the analogue audio inputs (Usually labelled ANALOGUE AUDIO IN) of the Zone 2 display device, or to the inputs of an additional stereo power amplifier in Zone 2 (for example, the Arcam P38).

Zone 3 (AVR600/AV888 only)

A line-level signal from the stereo analogue audio is available for Zone 3. This is a copy of the Zone 2 audio signal, but has its own independent volume control.

Audio outputs

The **Z3 OUT**, R and L phono sockets should be connected to the inputs of an additional stereo power amplifier in Zone 3 (for example, the Arcam P38).

Zone 2 and 3 control outputs

The AVR500, AVR600 and AV888 also allow remote control from remote zones.

Z2 IR and Z3 IR


This allows the AVR500/AVR600/AV888 to be controlled remotely from Zone 2 (or Zone 3) via Infrared remote control. Connect a remote IR receiver in Zone 2 (or Zone 3) to allow control of the AVR500/AVR600/AV888 from these listening/viewing areas.

For more information on remote IR receivers, see 'Z1 IR' on page 17.

TRIG Z2 and TRIG Z3


This allows the AVR500/AVR600/AV888 to remotely switch on devices in Zone 2 (or 3) when the appropriate Zone is selected. For example you could set your television in Zone 2 to switch on when 'Zone 2' is selected on AVR500/AVR600/AV888.

For more information on triggers, see 'Trigger connectors' on page 17. Please note that not all AV devices have this feature, nor are triggers essential for listening and viewing in a separate zone.

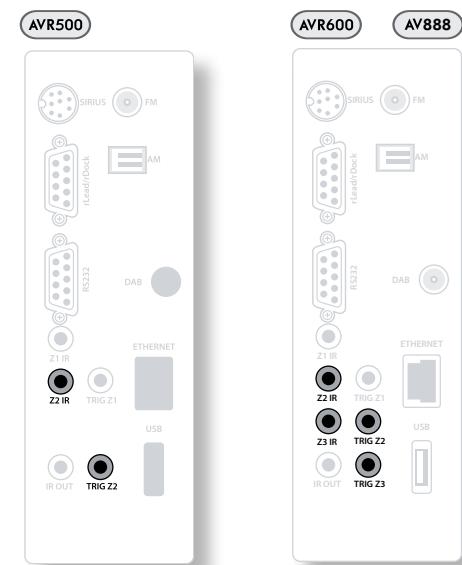

Multi-room connection guide

English

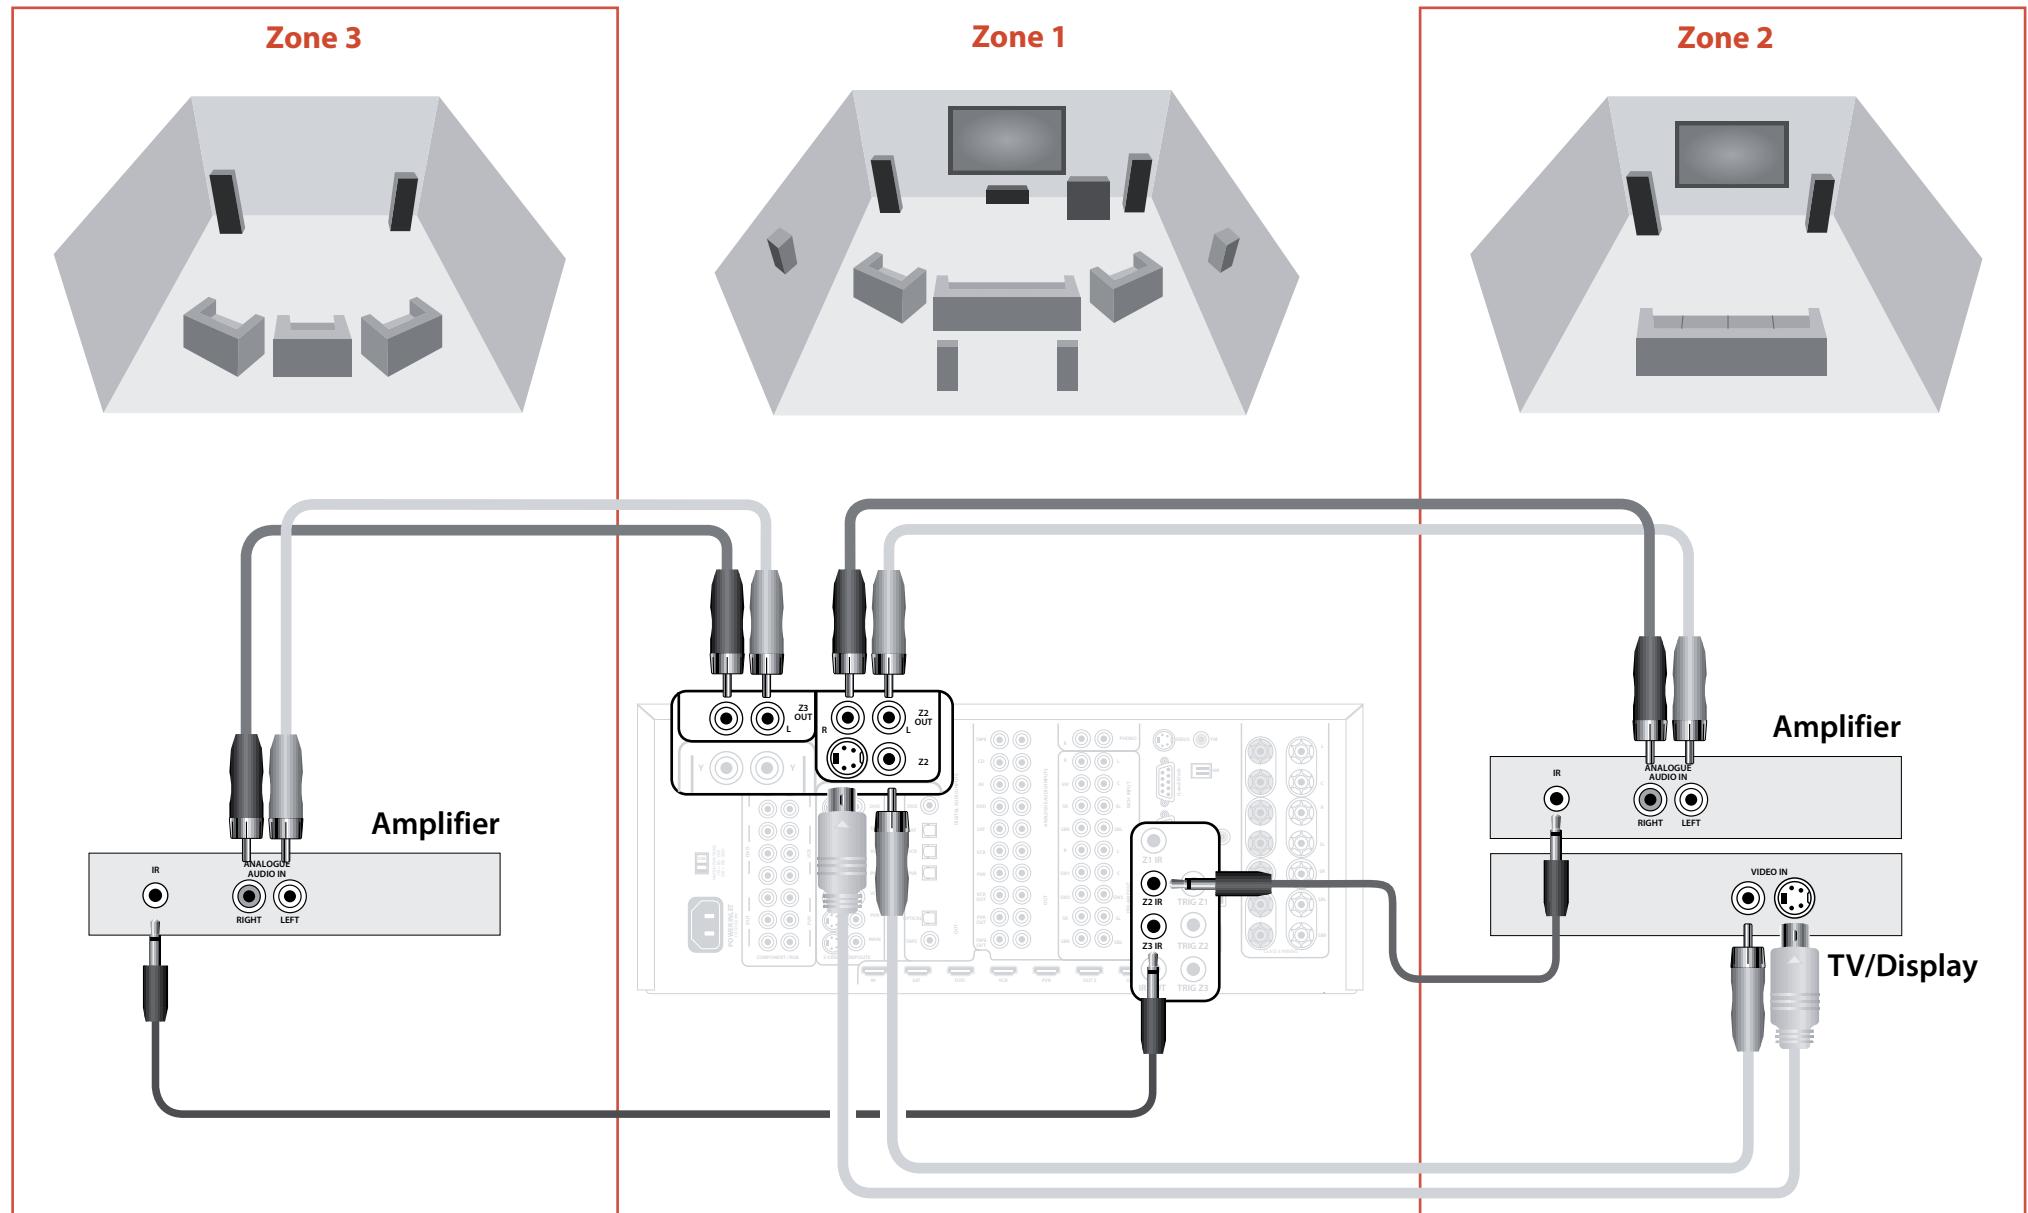

customising the CR102

Code Learning

The CR102 comes with a complete library of preprogrammed codes. After you have set up the CR102 for your device, you may find that there are one or more functions on your original remote which do not have a place on the CR102 keypad. For convenience, the CR102 offers a Code Learning feature that allows you to copy up to 16 functions from an original remote control onto the CR102 keypad.

Before you start, make sure that:

- The original remote control is working correctly.
- The remotes are not pointing at your device.
- The remotes have new batteries.
- The remotes are not in direct sunlight or under strong fluorescent lights.

Learned functions are mode-dependent: You could theoretically assign up to eight different functions to a single key (the CR102 can handle a total of 16 learned functions).

Example: To copy the 'text hold' function from a TV remote onto the key of your CR102

1. Place both remotes on a flat surface, 2 to 5cm apart, with the IR ports facing each other.
2. On the CR102, press and hold  until the power LED blinks twice:  .
3. Press    . The power LED blinks twice:  .
4. On the CR102, press the device key that matches the 'source' device (e.g. if you're learning a TV function, press ).
5. On the CR102, press the key to which you want to assign the learned function (e.g. ). The device key blinks rapidly.
6. On the original remote, press and hold the function key that you want to learn (e.g. TEXT HOLD) until the CR102 device key blinks twice:  .
7. If you want to learn other functions from the same source device, simply repeat steps 5 and 6 pressing the next key you want to learn.
8. To exit Code Learning mode, press and hold  until the device key blinks twice:  .

9. To use the learned function on the CR102, press the Device Mode key, followed by the function key. In this example, you'd press  followed by .

Shifted Learning

You can assign a learned function to a CR102 key without sacrificing its original function.

You can assign Shifted Learning functions to any key except for: Device Mode keys (e.g. , , or number keys  to ).

1. To assign a Shifted Learning function, simply follow Code Learning steps in the previous section. During step 5, press  once before you press the key to which you want to assign the learned function.
2. To access the shifted function, press  and then the target key.

Important notes

- Once you start a Code Learning session, you have approximately 10 seconds to conduct each step. Any longer, and a timeout means that you'll have to start the process again.
- The Learning feature is mode-specific – you can copy one feature *per mode* onto a key.
- The CR102 can learn approximately 16 functions in total.
- To replace a learned function, simply assign a new one to the same key.
- Learned functions *are* retained when you change batteries.
- If Code Learning fails, try altering the distance between the two remotes; make sure that the light in the area is not too bright.

To delete a learned function

1. Press and hold  until the power LED blinks twice:  .
2. Press    . The power LED blinks twice: .
3. Press a Device Mode key once. For example, if you want to delete one of your learned TV functions, press .
4. Press twice on the key you want to deassign. The handset blinks twice:   to confirm.

The original function of the CR102 is restored.

To delete a Shifted Learned function:

To delete a Shifted Learned function, press  before you press the key to be deassigned (during step 4 above).

To delete ALL learned functions within a given Device Mode

1. Press and hold  until the power LED blinks twice:  .
2. Press    – the power LED blinks twice:  .
3. Press the appropriate Device Mode key twice.

Creating Macros

You can program your CR102 to issue a sequence of commands when you press a single key. Any sequence of commands you regularly use can be reduced to a single key press for your convenience.

For example, you might want to turn off your TV, VCR and Satellite at the same time.

- A key programmed with a Macro is available in all modes; it will replace that key's different functions for all modes.
- A Macro can consist of up to eight key presses.

Example: To assign a Macro to the key

1. Press and hold  until the power LED blinks twice:

2. Press   .
3. Press .
4. Press a, , , , , . (These are the Macro steps you wish to record.)
5. To store the Macro, press and hold  until the power LED blinks twice:
.

Now, whenever you press , the CR102 will toggle the power to your TV, VCR and Satellite.

- The important word here is 'toggle'. For example, if the TV and Satellite devices are currently on, but the VCR is off, pressing  will switch off the TV and Satellite and switch on the VCR (rather than switching all three devices on or off).
- When using Macros, remember that you may need to change mode or use , and that each key press (including changing modes and pressing ) counts as one of the Macro steps. You cannot use a Macro key within another Macro.
- If the amount of memory storage for a particular Macro is exceeded, the power LED comes on for five seconds. You can, however, save the macro steps up to that point by pressing , or you can cancel the Macro recording by pressing any other key.
- The delay between key presses is recorded as part of the Macro. A delay of up to 30 seconds is permitted.

Example: To deassign the Macro associated with the key

1. Press and hold  until the power LED blinks twice:

2. Press   .
3. Press .
4. Press and hold  until the power LED blinks twice:
.

Volume punch-through

Volume punch-through means that, no matter which Device Mode is selected, the CR102 controls the AVR500, AVR600 or AV888 volume. You don't need to press  on your CR102; this feature is switched on by default.

There are times, however, when you might want to control a device's volume directly when in a specific Device Mode.

Example: To cancel volume punch-through for a TV (AV mode)

1. Press  once.
2. Press and hold  until the power LED blinks twice:

3. Press   .
4. Press . The power LED blinks four times.

Now, while in TV (AV) mode, you will be able to control the volume or mute functions of your TV directly.

To completely cancel all volume punch-through settings

1. Press and hold  until the power LED blinks twice:

2. Press   .
3. Press . The power LED blinks four times
.

Now, whichever mode you're in, you will have direct access to that device's volume or mute functions, assuming they are available. You would need to switch to AMP mode to alter the AVR500/AVR600/AV888 volume.

Example: To restore default volume punch-through settings to all Device Modes

1. Press and hold  until the power LED blinks twice:

2. Press   .
3. Press . The power key LED blinks twice:
.

Key Mover

Sometimes you might find that a key you use a lot for your system is in the 'wrong' place on the CR102 keypad for your comfort. It's quite easy to reassign a favourite function to a more accessible key. It is even possible to move a function from one Device Mode to another Device Mode.

Example: To assign the function to the key in SAT mode

1. Press .
2. Press and hold  until the power LED blinks twice:

3. Press   .
4. Press the key you want to move (e.g. ).
5. Press the key you want to move the key to (e.g. ).

Now, pressing either  or  while in SAT Device Mode makes the CR102 transmit the  function.

To completely swap over the functionality of the two keys to put the  functionality on the  key, repeat the above process again, but swap over the  and  key presses in the example.

Note that the function that is copied over to the new key is always the original function of the old key.

Restore a moved key

To restore a key to its previous function, repeat the example above, pressing the key to be restored twice (copy it back to itself).

Restore all moved keys for a Device Mode

To restore all keys in a Device Mode to their original functional positions, repeat the example above, but press the relevant Device Mode key (e.g.  at points 1,4 and 5 in the example).

Copy a key between Device Modes

It is possible to copy functions between Device Modes. However, remember that button functions are Device Mode specific and therefore effectively 'punch-through' to the original Device Mode when copied over.

The following example copies the AVR500/AVR600/AV888 DIRECT function from the CR102 AMP device mode to the shifted function of the  button on AV Device Mode.

1. Press and hold  until the power LED blinks twice:

2. Press   .
3. Press the Device Mode key of the function you want to move (e.g. ).
4. Press the function key you want to move (e.g. / DIRECT).
5. Press the key of the Device Mode you want to copy the function to (e.g. ).
6. Press the  button graphic.
7. Press the key you want to copy the function to (e.g. ).

If you prefer to copy the key to the main function of the  button instead of the 'shifted' function, omit point 6 in the above example.

Mode Mover

If your home entertainment setup contains devices of the same type (e.g. two TVs, perhaps from different manufacturers) you can still control both those devices with the CR102. You simply need to reassign an *unused* Device Mode key.

NOTE

Before using Mode Mover, make sure both the source and destination Device Mode keys are unlocked (see next section).

Example: To use the key to control a second TV

1. Press and hold  until the power LED blinks twice:

2. Press   .
3. Press the Device Mode key for the type of device you want to control (e.g. for a TV, press ).
4. Press the Device Mode key you want to use (e.g. ).
5. Don't forget to set up the CR102 to control the second device, using one of the methods on page 25.

Note that volume punch-through is not applied to a Device Mode that has been copied using Mode Mover. However, volume punch-through functionality can be restored when you have used Mode Mover, by copying ,  and  from the AMP Device Mode to the same physical buttons on the new moved Device Mode using the last example shown in Key Mover.

To restore a moved Device Mode key to its original state

1. Press and hold  until the power LED blinks twice:

2. Press   .
3. Press the Device Mode key you want to restore twice.

Locking/Unlocking a specific Device Mode

When you first unpack your CR102 and insert the batteries, for your convenience it is able to control certain Arcam components automatically (e.g. DVD players, Amplifiers, Tuners and CD Players). We achieve this by preprogramming specific Arcam device codes onto the relevant Device Mode keys, then locking the Device Modes so you don't reprogram them inadvertently.

If you want to override these locked default settings – to control a third-party DVD player, for example – you will first need to unlock DVD Mode before setting up the CR102 using one of the methods described at the start of this guide.

Here are the factory default settings:

Device Mode	Default status	Default Arcam codes
DVD	Locked	0762
SAT	Unlocked	1205
AV	Unlocked	0586
TUN	Locked	2009
AMP	Locked	1242
PVR	Unlocked	1930
VCR	Unlocked	0111
CD	Locked	2010

Alternative codes are available for multi-room solutions, or in the case of code clashes with other manufacturer's products.

For example:

DVD (system code 12) 1655
AMP (system code 19) 1954

You will need to change the system code on the product you wish to control, as well as the CR102.

NOTE

The AMP Device Mode can only be used to control Arcam amplifiers like the AVR500, AVR600 and AV888, either on its default or alternative IR system codes.

To toggle a Device Mode lock setting:

1. Press the Device Mode key you want to unlock (e.g. ).
 2. Press and hold  until the power LED blinks twice:

 3. Press   .
- The power LED blinks twice when being locked, and blinks four times when being unlocked.
- If you enter an invalid key sequence, the power LED gives one long blink and returns to normal operation.

While the Device Mode key is locked, the Direct Code Setup and Move Mode functions are not available.

Mode key IR punch-through

The Mode key IR punch-through default is 'on'.

Example: To set the Mode key IR punch-through to AMP

1. Press and hold until the power LED blinks twice:



2. Press . The power LED blinks twice:



3. Press to punch through IR from it.

Now, whenever you press and release a Mode key, the IR data assigned to AMP is transmitted, no matter what the current mode is (i.e. it 'punches through' any other device).

To cancel Mode key IR punch-through

1. Press and hold until the power LED blinks twice:



2. Press . The power LED blinks twice:



3. Press until the power LED blinks twice:



Resetting the CR102

Resetting the CR102 will erase all learned functions across all modes, as well as some other programmed functions like Macros. It will not reset the Device Mode keys; these will remain programmed to your choice of component.

1. Press and hold until the power LED blinks twice:



2. Press . The power LED blinks four times:




3. Press and hold until the power LED blinks twice:



4. Press .

5. Press . The power key LED blinks twice:



6. Press and hold until the power LED blinks twice:



7. Press . The power LED blinks twice:



8. Press . The power key LED blinks twice:



Command summary

Direct code setup

(e.g. AV mode, NNNN=code number)

NNNN

Library search

(e.g. AV mode)

until unit turns off
 to save

Code blink back

① count blinks for first N

② count blinks for second N

③ count blinks for third N

④ count blinks for fourth N

Code learning

(e.g. AV mode fast forward key)

(many rapid blinks)

(Press key on original remote that you wish to copy)

Delete a learned function

(e.g. AV mode fast forward key)

Delete all learned functions with a device

(e.g. AV mode)

Creating macros

(e.g. SRCH key)

Deassign macro

Key mover

(e.g. SAT mode, DISP key to MENU key)

Mode mover

(e.g. change SAT to TV(AV))

Restore device mode

(e.g. restore SAT)

Locking/unlocking a mode

(e.g. DVD mode)

(i.e. two blinks for lock)

(i.e. four blinks for unlock)

Cancel all volume punch-through

Restore volume punch-through

Mode key IR punch-through

Cancel mode key IR punch-through

Device codes

The tables that begin on page 64 (in the final section of this Handbook) list the four-figure codes for different manufacturers' devices.

Use these when setting your CR102 up to control your devices, as described in Method 1 (see page 30).

If more than one code number is listed, try the first number. If the results are unsatisfactory, continue trying the numbers for that manufacturer to get the best 'fit' with the functionality required.

If the manufacturer of your equipment is not listed, you can try Method 2, the Library Search (see page 30). This allows you to scan through every set of codes contained in the CR102's memory.

NOTE

As elsewhere in this Handbook, a single 'blink' of the red LED behind the power button is indicated by the symbol .

trouble-shooting

Problem	Check that...
There are no lights on the unit	<ul style="list-style-type: none"> ■ the power cord is plugged into the unit and the mains socket it is plugged into is switched on. ■ the power button is pressed in. <p>If a red LED is present, the unit is in standby mode. Press any button on the front panel or remote control.</p>
The unit responds erratically or not at all to the remote control	<ul style="list-style-type: none"> ■ there are fresh batteries in the remote control. ■ the front panel window is visible and you are pointing the remote control towards it.
The front panel display is blank	<ul style="list-style-type: none"> ■ the display hasn't been turned off. Press the DISPLAY button on the front panel or remote control.
No picture is being produced	<ul style="list-style-type: none"> ■ your viewing device is turned on and switched to display your AVR500/AVR600/AV888. Test by pressing the MENU button on the AVR500/AVR600/AV888 or on the remote and look for the main menu screen on your display device. ■ the correct video input is selected on the AVR500/AVR600/AV888. ■ the video source is on, is operating normally, and is in 'play' mode if appropriate. ■ you have the AVR500/AVR600/AV888 in a video resolution that is compatible with the connection you are using and with your display device. For example, composite video is only capable of carrying 480i and 576i resolutions. Test this by pressing and holding the OK key for more than two seconds to force 480i / 576i output resolutions.
There are bright edges or 'ghosts' on the picture	<ul style="list-style-type: none"> ■ the cables used for analogue video connections are designed to carry video (i.e., they are 75Ω coaxial cables). ■ ensure the 'sharpness' control on your display device is switched off or set to near minimum. ■ for HDMI connections, try using a shorter cable or alternatively a different brand.
No sound is produced	<ul style="list-style-type: none"> ■ the correct input has been selected. ■ the source equipment is on, is operating normally and is in 'play' mode if appropriate. ■ the volume is turned up to a reasonable level and the unit is not in mute mode.
The sound is poor or distorted	<ul style="list-style-type: none"> ■ you have not excessively increased the input sensitivity (i.e. reduced the maximum input signal voltage) in the Input Config. menu if an analogue input is being used. ■ you have selected the correct size of speakers to suit your system in the setup menu.

Problem	Check that...	Problem	Check that...
Sound only comes from some of the speakers	<ul style="list-style-type: none"> ■ you have an appropriate surround source selected and playing. ■ the DVD disc is encoded in the appropriate format, and the correct format has been selected in the disc start menu of the DVD player (if applicable). ■ the DVD player has been set to output 'bitstream' audio on the digital output. ■ the display window indicates that the disc you are playing is a multichannel recording (you may need to press the INFO key several times until you get to the 'incoming format' display). ■ all the speakers are correctly connected to the speaker terminals and are secure. ■ you have not selected 'Stereo' as the decoding mode. ■ your speaker balance is correct. ■ you have configured the unit to include all the speakers in your system. 	The source switching changes randomly or freezes on one source	<ul style="list-style-type: none"> ■ there are no static or impulse interference problems caused by nearby power equipment switching, e.g., heating or air conditioning control. Switch the unit off, wait ten seconds, then switch it on again to clear an operating problem. Contact your installer if the problem returns or persists. ■ there is no direct sunlight shining on the infra-red detector behind the front panel display.
Unable to select Dolby Digital or DTS decoding modes	<p>The AVR500/AVR600/AV888 can only apply Dolby Digital and DTS decoding to sources which have been encoded in the same format.</p> <p>Check that:</p> <ul style="list-style-type: none"> ■ digital source is selected and connected. ■ the source is playing appropriately encoded material. ■ the DVD disc is encoded in the appropriate format and that the correct format has been selected in the disc start menu of the DVD player (if applicable). ■ the DVD player has been set to output 'bitstream' audio on the digital output (not PCM). 	Volume is always too loud when I turn on	<ul style="list-style-type: none"> ■ the 'max on volume' setting is not set too high.
When playing a Dolby Digital DVD, the AVR600 selects Dolby Pro Logic	<ul style="list-style-type: none"> ■ you have a digital connection from your DVD player. ■ sometimes Dolby Digital DVD discs contain material at either the beginning or the end of the main movie that is not in full 5.1 format, but in two-channel or Pro Logic decoding. 	When Zone 2 or 3 is put into standby, the main zone is also switched off	<ul style="list-style-type: none"> ■ the 'zone standby' setting in the setup menu is set to LOCAL.
Hum on the analogue input	<ul style="list-style-type: none"> ■ all cables are making a good connection. If necessary withdraw the cable from the connector and plug it fully in again (turn the power off before doing this). ■ the connections inside the source cable connector are not broken or badly soldered. ■ if the hum originates only when one particular source component is connected, that an aerial cable, or dish connection to this source is ground isolated. Contact your installation contractor. 	When a USB memory device is connected, 'USB' is not shown in the network client's list of folders	<ul style="list-style-type: none"> ■ a USB memory device is connected that conforms to the mass storage class. ■ a USB hub is not being used.
There is radio or television reception interference	<ul style="list-style-type: none"> ■ where the interference is coming from. Switch off each source component in turn, then any other equipment. Most electronic equipment does generate low levels of interference. ■ try re-arranging cabling from the nuisance source away from other cabling. ■ ensure that the cabling used is high quality, specified for its purpose, and is properly screened. ■ if the problem persists, contact your dealer. 	If files on a USB memory device cannot be played:	<ul style="list-style-type: none"> ■ the USB device is formatted in FAT16 or FAT32. ■ the USB device does not have multiple partitions. ■ the files are in a compatible format.
		If files on a computer cannot be played	<ul style="list-style-type: none"> ■ the files are in a compatible format. ■ the computer is connected via a network and not USB – the AVR500/AVR600/AV888 USB port cannot be used for a direct connection to a computer
		If you cannot connect to a wired network	<ul style="list-style-type: none"> ■ the Ethernet cable you are using is correctly connected between the AVR500/AVR600/AV888 and the network hardware. ■ the network is set up for fixed IP addressing and you have the AVR500/AVR600/AV888 set to use DHCP. ■ the network is set up for DHCP and you have the AVR500/AVR600/AV888 set to use fixed IP addressing.
		If you cannot connect to a favourite internet radio station	<ul style="list-style-type: none"> ■ the station is still broadcasting or is not congested – try again later.
		If the internet radio station sound quality is poor or broken	<ul style="list-style-type: none"> ■ the radio station does not have a low bit rate (use the INFO key to find this or look on the OSD). ■ the network is not slow or congested.

specifications

Continuous power output (20Hz—20kHz at 0.05% THD), per channel (AVR600)		General
2 channels driven	150W	Mains voltage
All channels driven	120W	Power consumption (maximum)
THD at full rated power	<0.2%	AVR500/AVR600
Residual noise & hum	<0.25mV unweighted 20Hz – 22kHz	AV888
Continuous power output (20Hz—20kHz at 0.05% THD), per channel (AVR500)		1.5kVA (Thermal dissipation approx. 5200 BTU/hour)
2 channels driven	120W	120VA (Thermal dissipation approx. 410BTU/hour)
All channels driven	100W	Power consumption (idle, typical)
THD at full rated power	<0.2%	120VA (Thermal dissipation approx. 410 BTU/hour)
Residual noise & hum	<0.25mV unweighted 20Hz – 22kHz	Power consumption (standby)
Inputs		3VA
Phono input:		Dimensions W x D x H (including feet)
Input sensitivity at 1kHz	5mV	AVR500, AVR600
Input impedance	47kΩ	AV888
Signal/noise ratio (CCIR, 65W)	88dB	Weight (net)
Overload margin	31dB	AVR500
Line inputs:		AVR600
Nominal sensitivity	500mV–4V (user adjustable)	AV888
Input impedance	47kΩ	Weight (packed)
Signal/noise ratio (CCIR, 65W)	100dB	AVR500
Preamplifier outputs		AVR600
Max output level	6V RMS	AV888
Output impedance	<50Ω	Supplied accessories
THD+N (20Hz—20kHz)	-100dB	Mains lead CR102 remote control 4 x AAA batteries Manual HDMI lead support bar DAB aerial (if DAB module fitted) FM aerial (if AM/FM fitted) AM loop aerial (if AM/FM fitted) Calibration microphone
Video inputs		E&OE
Component video signal/noise	85dB	NOTE: All specification values are typical unless otherwise stated.
Composite video signal/noise	70dB	
Headphone output		
Maximum output level into 600Ω	4V p-p	
Output impedance	<5Ω	

Continual improvement policy

Arcam has a policy of continual improvement for its products. This means that designs and specifications are subject to change without notice.

product guarantee

English

Worldwide Guarantee

This entitles you to have the unit repaired free of charge, during the first three years after purchase, at any authorised Arcam distributor provided that it was originally purchased from an authorised Arcam dealer or distributor. The manufacturer can take no responsibility for defects arising from accident, misuse, abuse, wear and tear, neglect or through unauthorized adjustment and/or repair, neither can they accept responsibility for damage or loss occurring during transit to or from the person claiming under the guarantee.

The warranty covers:

Parts and labour costs for three years from the purchase date. After three years you must pay for both parts and labour costs. **The warranty does not cover transportation costs at any time.**

Claims under guarantee

This equipment should be packed in the original packing and returned to the dealer from whom it was purchased, or failing this, directly to the Arcam distributor in the country of residence.

It should be sent carriage prepaid by a reputable carrier – **not** by post. No responsibility can be accepted for the unit whilst in transit to the dealer or distributor and customers are therefore advised to insure the unit against loss or damage whilst in transit.

For further details contact Arcam at:

Arcam Customer Support Department,
Pembroke Avenue, Waterbeach, CAMBRIDGE, CB25 9QR, England
or via www.arcam.co.uk.

Problems?

If your Arcam dealer is unable to answer any query regarding this or any other Arcam product please contact Arcam Customer Support at the above address and we will do our best to help you.

On-line registration

You can register your product on-line at www.arcam.co.uk.

Correct disposal of this product



This marking indicates that this product should not be disposed with other household waste throughout the EU.



To prevent possible harm to the environment or human health from uncontrolled waste disposal and to conserve material resources, this product should be recycled responsibly.

To dispose of your product, please use your local return and collection systems or contact the retailer where the product was purchased.

device code tables

TV	
888	0294
A.R. Systems	0067 0382 0586
	0404 0485
Accent	0039 0067 0586
Accusound	0890
Acoustic Research	1299
Acoustic Solutions	1179 1067
Acura	0039
Adcom	0655
Addison	0683 0138
ADL	1247 0920
Admiral	0123 0193 0448
Advent	0906
Adyson	0247 0246
AEA	0067 0586
AEG	0636 1067 1179
	1193
Aftron	0921
Agashi	0294 0246 0247
Aiko	0039 0067 0586
	0246 0065 0463
	0910 0294 0247
Aim	0067 0586 0783
	0238 0736 0728
	0664 0404 0485
	0636 0529
Aiwa	1535
Akai	0039 0238 0586
	0067 0463 0065
	0783 0193 0759
	0744 0736 0728
	0745 0632 0578
	0510 0247 0294
	0661 0246 0208
	0407 0636 1067
	0503 1289 1278
Akashi	0890 0039
Akiba	0485 0067 0586
Akira	0448 0783 0067
Akito	0067 0586
Akura	0067 0294 0586
	0698 0039 0744
	1393
Alaron	0246
Alba	0039 0067 1067
	0586 0744 0448
	0400 0698 0246
	0193 0517 0473
Alkos	0065
Allorgan	0247
Allstar	0067 0586
All-Tel	0895 1299
Amplivision	0247 0400
Amstrad	0039 0067 0294
	0463 0586 1067
Anam	0067 0586 0039
	0680
Anam National	0067 0586 0680
Andersson	1193 1179
Anglo	0039 0294
Anitech	0039 0294 0067
	0586
Ansonic	0400 0067 0586
	0039 0698 0404
	0193
AOC	0655 0039 0090
	0123 0138 0208
Aolinpike	0294
Apex Digital	1247
Apollo	0503
Arc en Ciel	0139

Arcam	0246 0247	Blaupunkt	0225 0230 0357	Cobolt	0921
Arlen	0744		0485 0200	Concorde	0039
Ardem	0744 0516 0663	Blauren	0404	Condor	0067 0400 0586
	0067 0586	Blue Sky	0067 1067 0586		0246 0039 0448
Arena	0067		0698 0744 1179		0193 0294
Aristona	0586 0067		0517 0745 0655	Conia	0784 0850
Arthur Martin	0193		1939 0485 1221	Conrac	0838
ASA	0135 0376 0100		0838 1393	Conrad	0067 0586
	0193	Boots	0247 0039	Conrowa	0039 0294 0728
Asberg	0067 0586				0783 1200
Asora	0039	Bork	1393	Contec	0039 0246 0294
Astra	0067 0586	Bosch	0357		0067 0586
Asuka	0247 0246 0294	BPL	0067 0586 0926	Brandt	0139 0655 0365
ATD	0728		0373 0590		0365
Atlantic	0067 0586 0246	Brandt		Continental	0139 0517
		Electronique		Edison	
Atori	0039	Brinkmann	0067 0586 0698	Cosmel	0039 0067 0586
Auchan	0193		0448 0516	CPTEC	0655 1393
Audiosonic	0039 0067 0404	Brionvega	0067 0586	Crosley	0104 0193
	0850 0586 0139	Britannia	0246 0247	Crown	0039 0742 0067
	0744 0745 0247	Brother	0294		0400 0516 0586
	0400 0294 0516	Bruns	0516	Dux	0067 0586
Audioton	0247 0516 0400	BSR	0193	D-Vision	0067 0586
	0294	Bush	0039 1067 0067	DVX	0921
Audioworld	0728		0744 0698 0404	Dynatech	0247
Aumark	0090		0193 0728 0294	Dynatron	0067 0586
Autovox	0247		0517 0238 0247	e:max	0636
AWA	0039 0404 0067		0586 0808 1289	Easy Living	1278 1289 1247
	0586 0246 0636		1278 0617		0907
	0247 0138 0294	Caihong	0039	Ecco	0803 0736 0728
	1406 0208 0728	Caishi	0921	ECE	0067 0586
Axxent	0039	Cameron	0586	Edison-Minerva	0517
Axxon	0744	Camper	0067 0586 0516	Elbe	0640 0400 0193
B&D	1247	Capsonic	0294		0067 0586 0247
Baier	0906	Carad	0640 0067 0586	Elicit	0193
Baile	0039 0294		0698 1067	Electrograph	1785
Baile	0039 0404 0691	Carena	0485 0067 0586	Elektro	0039 0067 0586
Baird	0373 0139 0247	Carrefour	0100 0067 0586		0294
	0238 1226 0636	Carver	0200	Dantax	0400 0516 0744
Bang & Olufsen	0595	Cascade	0039 0067 0586		1067 0636 0745
BaoHuaShi	0294	Casio	0067 0586 0193	Datsura	0238
Baosheng	0039	Cathay	0067 0586	Dawa	0039 0067 0586
Barco	0193	CCE	0067 0247 0586	Daytek	0728 0736 1406
Base	0810	Celestial	0850	Dayton	0039
Basic Line	0039 0404 1179	Centrex	0810 0921 0728	Daytron	0039 0404 0067
	0067 0193 0698	Centurion	0067 0586		0586
	0586 0247 0485	CGE	0104 0448 0400	Dayu	0404 0691
	1067		0193	de Graaf	0238 0578 0193
Bastide	0247	Changcheng	0039 0294 0404	DEC	0890 0921 0926
Bauer	0039 0728 0736		0691	Decca	0067 0586 0247
	0294	Changfei	0039 0404	1167	1167
Baur	0039 0067 0542	Changfeng	0294 0783	Deitron	0067 0586 0404
	0225 0586 1535	Changhai	0039	Denko	0294
Bazin	0247	Changhong	0850 0039 0294	Denver	0067 0586 0636
Beaumark	0208		0538	Daytron	0039 0404 0067
Beijing	0039 0238 0256	Chengdu	0039		0586
	0294 0404 0512	Chimei	1535	Deitron	0067 0586 0404
	0691	Ching Tai	0039	Denko	0294
Beko	0400 0744 0516	Chun Yun	0039	Denver	0067 0586 0636
	0065 0745 0067	Chunfeng	0039 0294 0294	Daytron	0039 0404 0067
	0448 0586 0636		0691	Dayu	0404 0691
	0838	Clarinox	0067 0448 0586	de Graaf	0238 0578 0193
Belson	0728 1221		0100	DEC	0890 0921 0926
Bennett	0586 0067	Chung Hsin	0138	Decca	0067 0586 0247
		Chunsun	0039		1167
Beon	0067 0586 0448	Cimline	0039	Deitron	0067 0586 0404
Berthen	0698 0586	Citizen	0090	Denko	0294
Best	0400	City	0039	Denver	0067 0586 0636
Bestar	0067 0586 0400	Clarivox	0067 0448 0586	Daytron	0039 0404 0067
	0404		0100	Dayu	0404 0691
Bestar-Daewoo	0404	Clatronic	0067 0400 0744	de Graaf	0238 0578 0193
Binatone	0247		0294 0586 0247	DEC	0890 0921 0926
Black Diamond	0850 1067 0586		0039 0636 1193	Decca	0067 0586 0247
	1193 0783 0617	Clayton	1067		1167
Black Strip	0065	CMS	0246	Deitron	0067 0586 0404
		CMS hightec	0247	Denko	0294

Domeos	0698 0067 1067				
Domland	0424				
Dongda	0039				
Donghai	0039				
Dream Vision	1734				
DSE	0850 0728				
DTS	0039				
Dual	0247 0373 0067				
	0586 0382 0424				
	0193 1167 0661				
	1179 1067 0808				
	1193				
Dual Tec	0247				
Dumont	0100 0247				
Dunai	0193				
Durabrand	0067 0208 0586				
	1067				
Dux	0067 0586				
D-Vision	0067 0586				
DVX	0921				
Dynatech	0247				
Dynatron	0067 0586				
e:max	0636				
Easy Living	1278 1289 1247				
	0907				
Ecco	0803 0736 0728				
ECE	0067 0586				
Edison-Minerva	0517				
Elbe	0640 0400 0193				
	0067 0586 0247				
Elicit	0193				
Electrograph	1785				
Elektro	0039 0067 0586				
	0294				
Dantax	0400 0516 0744				
	1067 0636 0745				
Dantsai	0246				
Datson	0067 0586 0294				
	0065 0246 0339				
	0247 0238				
Dantax	0400 0516 0744				
	1067 0636 0745				
Datsura	0238				
Dawa	0039 0067 0586				
Daytek	0728 0736 1406				
	0294				
Dayton	0039				
Daytron	0039 0404 0067				
	0586				
Dayu	0404 0691				
de Graaf	0238 0578 0193				
DEC	0890 0921 0926				
Decca	0067 0586 0247				
	1167				
Denko	0294				
Denver	0067 0586 0636				
	1219 0617				
Desmet	0067 0586 0039				
Diamant	0067 0586				
Diamond	0294 0728 0399				
	0855 0246 0890				
	0850 0926 0736				
DiBoss	0067 0586				
Digatron	0067 0586				
Digihome	1179				
Digiline	0067 0586 0135				
	0698				
DigiLogic	0067 0586				
Digimate	0920				
Digitex	0850				
Digitox	0067 0586				
DigiX	0910				
DiK	0067 0586				
Dixi	0039 0067 0586				
	0247				
DL	0921 0810 0067		</td		

Ferguson	0067 0139 0655 0365 0373 0590 0586 0065 0683 0138 0578 0473 1067	G-Hanz	1393 Giant	0247 0039	Highline	0294 0067 0586 0039 0238 0067 0586 0193 0473 0517 0294	Interbuy	0039 0067 0294 0542 0586	KLL	0067	Madison	0067 0586
Fidelity	0193 0246 0542 0067 0586 0294	Goldhand	0246		Hisawa	0485 0640 0744 1393 0238 0039 0538 0783 0728 0921 0890 0810 1200 1238 0586	Interfunk	0067 0193 0586 0542 0357 0400 0139 0230	Kneissel	0067 0400 0640 0404 0529 0586	Magnadyne	0193
Filsai	0247	GoldStar	0067 0039 0208 0400 0407 0247 0586 0246 0193 0139 0636 0744		Hitachi	1606 0039 0511 0608 0138 0774 1067 1511 0139 0193 1255 0664 0208 0503 0247 0373 0538 1193 0578 0529 1179 1200 0510 0067 0586 1167 0135 0522 0907	Internal	0067 0586 0529 0404 1939	Kobra	1328	Magnafon	0246
Finlux	0067 0135 0100 0586 0744 0376 0247 0193 0745 0661 0522 0510 0503 0448 0636 0838 1278	Gooding	0517		Hitachi	1606 0039 0511 0608 0138 0774 1067 1511 0139 0193 1255 0664 0208 0503 0247 0373 0538 1193 0578 0529 1179 1200 0510 0067 0586 1167 0135 0522 0907	International	0067 0247 0485 0294 0407 0516 0400 0424 0517 0193 0039 0586	Kolin	0138	Magnavox	0067 0586 0736 0810 0783
Firstar	0039	Goodmans	0664 0745 1289 1067 1278 0067 0529 0586 0247 0744 0698 0373 1939 0404 1193 0294 0039 0517 0065 0510 0590 0365 0691 0910		Hitachi Fujian	0138 0067 0586 0890 0529	Intervision	0067 0247 0485 0294 0407 0516 0400 0424 0517 0193 0039 0586	Kolster	0067 0586	Magnum	0744 0067 0586 0745 1319
Firstline	0039 0067 0586 0246 0247 0404	Gorenje	0400		Hitsu	0039 0640 0485 0744 0895 1193	Ipure	1406	Kongque	0039 0294	Mandor	0294
Fisher	0247 0238 0400 0193	GP	0783		Höher	0744 0895 1193	Irradio	0039 0067 0586 0744	Konichi	0039	Manesth	0067 0247 0586 0294 0065 0193
Flint	0067 0485 0586 0640 0294	Gradiente	0683 0200 0067 0586		Home Electronics	0636	IRT	0728	Konka	0067 0586 0744 0448 0617 0784	Manhattan	0067 0906 0586 0698 1067 0193
Force	1179	Graetz	0744 0193 0067		Hongmei	0039 0123 0294	Isukai	0067 0586 0485	Kontakt	0517	Maqma	1328
Formenti	0067 0193 0586 0516 0246	Granada	0067 0586 0238 0256 0247 0138 0503 0365 0590 0193 0373 0578		Hongyan	0294	ITC	0247	Korpel	0067 0586	Marantz	0067 0586
Formenti-Phoenix	0246	Grandin	0067 0586 0039 0193 0640 0744 0745 0698 0404 0485 1067 0895 1221 0910		Hornphon	0067 0586	ITS	0067 0294 0246 0039 0586	Korting	0400	Mark	0067 0586 0247 0246 0404 0039 0744 0745
Fortress	0123	Gronic	0247 0193		Hoshai	0485	ITT	0193 0510 0578 0503 0376 0238 0640	Kosmos	0067 0586	Mascom	0586 0067
Fraba	0067 0586 0400	Grundig	0225 0538 1401 1221 0067 0100 0473 0517 0586 0617 0736 1067 0039 0400 0208 1406 0373 1289		Hua Tun	0039	ITT Nokia	0578 0193 0503 0510 0376 0238 0636 0640 0661	Kotron	0294	Master's	0529 0067
Frontech	0193 0294 0247 0039	Grunkel	1193		Huafa	0039	JEC	0065	Koyoda	0039	Masuda	039 0294 0067
Fuchsware	0810	H&B	0838		Huanghaiimei	0039	Jialicai	0039 0294	Kreisen	0906	Matsui	039 0067 1193
Fujimaro	0895	Haaz	0736		Huanghe	0039	Jinfeng	0238 0256	KTV	0247	Matsushita	0680
Fujitsu	0713 0883 0247 0193 0039 0382	Haier	0728 0294 0067		Huanglong	0039	Jinque	0039 0294	Kuale	0039 0294	Matsuvama	0617
Fujitsu General	0039 0247 0193	Hugoson	0920 1247		Huangshan	0039 0294	Jinxing	0039 0294 0728 0067 0586	Kuba	0193	Maxam	0294
Fujitsu Siemens	1328 1289 1278 1193 0838	HYD	1406		Huanyu	0246 0404 0294	JMB	0067 0529 0664 0404 0586 0473	Kulun	039	Maxdorf	0803 0728 0736
Funai	0294 1067 0698 1535 0744	Hypson	0067 0294 0586 0744 0745 0247		Huaqiang	0294	JNC	0906 0926	Kunlun	0238 0256 0294 0404 0691	Matsuhashita	0680
Furi	0294	Ices	0246		Huari	0294	Jocel	0742	Kyoshu	0448 0294	Matsuviama	0617
Furichi	0890	Ict	0067 1167 0586		Hugoson	0485 1067 0698	JITV	0890	Kyoto	0193 0246 0247	Maxent	1785
Future	0067 0586	ICE	0247 0294 0067		IHYD	0247 0246	Jubilee	0586	L&S Electronic	0895 0744	MCE	0039
Gaba	1067 0067	Hyper	0039 0246 0247		Hypson	0485 1067 0698	Junta	0039 0294	LaSAT	0516 0400	Mediator	0067 0586
Galaxi	0067 0586 0193	Ices	0516		IJC	0067 0294 0586	Jinxing	0039 0294 0728 0067 0586	Lavis	1067 0067 0193	Medion	0698 0744 0838
Galeria	0039	Ict	0067 1167 0586		Hygashi	0247 0246	JMB	0404 0586 0473	Lenoir	0039 1219 0920	Lenox	1219
Garza	0586	ICE	0247 0294 0067		Hyper	0039 0246 0247	JNC	0906 0926	Levis Austria	0067 0586	Levit	0697 0667 0586
Gateway	1785	IISSonic	1406		Hypson	0485 1067 0698	Jocel	0742	Lexus	1226	Liesenkötter	0067 0357 0586
GBC	0193 0039 0404	Ilyama	1247		IJC	0067 0294 0586	JITV	0890	Leyco	0067 0294 0586	Lifetec	0640
GE	0373 0208 0123 0590 0139 0365 0655	Imperial	0067 0104 0193 0400 0448 0538		Ilyama	1247 0920	Jubilee	0586	LG	1179 0208 0067 0586 0906 0744	Megatron	0208
Geant Casino	0193	Imperial Crown	0039 0294 0404		Imperial	0067 0104 0193 0400 0448 0538	Junta	0039 0294 0404	MEI	1067 0067 0586	Meile	0294
GEC	0067 0193 0247 0586	Ices	0246		Imperial Crown	0691	Kambrook	0407 0294	Meletronic	0039 0376 0067 0542 0139 0373	Mels	0193
Geloso	0039 0193 0404	Ict	0067 1167 0586		Imperial Crown	0691	Kamp	0246	Mermaid	0067	NEI	0067 0586 0193
General	0139	InFocus	0782 1194		Imperial Crown	0691	Kanghua	0926	Merritt	0578 0193	NEO	0784
General Electric	0373	Ingelen	0193 0517 0640		Imperial Crown	0691	Kangli	0039 0294 0404	Memorex	0309 1067 0208	Neovia	0895 1401 0906
General Technic	0039	Ingersoll	0744		Imperial Crown	0691	Kangyi	0039 0294	Memphis	0309 0067	Newave	039 0208 0123
Genesis	0039 0067 0586	Inno Hit	0039 1067 0067		Imperial Crown	0691	Kapsch	0193	Mercury	0067 0728 0039 0294 0586 0736	Nicamagic	0246
Genexxa	0193 0067 0586	Iono	0586		Imperial Crown	0691	Karcher	0067 0586 0400	Metz	1563 0776 0418 0477 1193 0225	Nikkai	0065 0067 0586 0246 0247 0294
Gericom	0895 1328 1247 0910 0838	Innovation	0067 0586		Imperial Crown	0691	Kathrein	0586 0067 0910	Mermaid	0067	NEI	0617 0586 0193
Gevalt	1401 1221	Innowert	0895 1328		Imperial Crown	0691	Kawasho	0246	Merritt	0578 0193	NEO	0784
		Inotech	0803 0850		Imperial Crown	0691	Kathrein	0586 0067 0910	Memorex	0309 1067 0208	Neovia	0895 1401 0906
		Interactive	0067 0586 0542		Imperial Crown	0691	Kawasho	0246	Memphis	0309 0067	Newave	039 0208 0123
		Hifivox	0139		Imperial Crown	0691	Kensley	0246	Mermaid	0067	Nicamagic	0246
		Higashi	0246		Imperial Crown	0691	Kioto	0586 0736	Merritt	0578 0193	Nikkai	0744
					Imperial Crown	0691	Kiton	0586 0067 0698	Memorex	0680 0090	Neovia	0895 1401 0906
					Imperial Crown	0691	LXI	0208	Memphis	0309 0067	Newave	039 0208 0123
					Imperial Crown	0691			Mermaid	0067	Nicamagic	0246
					Imperial Crown	0691			Merritt	0578 0193	Nikkai	0744
					Imperial Crown	0691			Memorex	0309 1067 0208	Neovia	0895 1401 0906
					Imperial Crown	0691			Memphis	0309 0067	Newave	039 0208 0123
					Imperial Crown	0691			Mermaid	0067	Nicamagic	0246
					Imperial Crown	0691			Merritt	0578 0193	Nikkai	0744
					Imperial Crown	0691			Memorex	0309 1067 0208	Neovia	0895 1401 0906
					Imperial Crown	0691			Memphis	0309 0067	Newave	039 0208 0123
					Imperial Crown	0691			Mermaid	0067	Nicamagic	0246
					Imperial Crown	0691			Merritt	0578 0193	Nikkai	0744
					Imperial Crown	0691			Memorex	0309 1067 0208	Neovia	0895 1401 0906
					Imperial Crown	0691			Memphis	0309 0067	Newave	039 0208 0123
					Imperial Crown	0691			Mermaid	0067	Nicamagic	0246
					Imperial Crown	0691			Merritt	0578 0193	Nikkai	0744
					Imperial Crown	0691			Memorex	0309 1067 0208	Neovia	0895 1401 0906
					Imperial Crown	0691			Memphis	0309 0067	Newave	039 0208 0123
					Imperial Crown	0691			Mermaid	0067	Nicamagic	0246
					Imperial Crown	0691			Merritt	0578 0193	Nikkai	0744
					Imperial Crown	0691			Memorex	0309 1067 0208	Neovia	0895 1401 0906
					Imperial Crown	0691			Memphis	0309 0067	Newave	039 0208 0123
					Imperial Crown	0691			Mermaid	0067	Nicamagic	0246
					Imperial Crown	0691			Merritt	0578 0193	Nikkai	0744
					Imperial Crown	0691			Memorex	0309 1067 0208	Neovia	0895 1401 0906
					Imperial Crown	0691			Memphis	0309 0067	Newave	039 0208 0123
					Imperial Crown	0691			Mermaid	0067	Nicamagic	0246
					Imperial Crown	0691			Merritt	0578 0193	Nikkai	0744
					Imperial Crown	0691			Memorex	0309 1067 0208	Neovia	0895 1401 0906
					Imperial Crown	0691			Memphis	0309 0067	Newave	039 0208 0123
					Imperial Crown	0691			Mermaid	0067	Nicamagic	0246
					Imperial Crown	0691			Merritt	0578 0193	Nikkai	0744
					Imperial Crown	0691			Memorex	0309 1067 0208	Neovia	0895 1401 0906
					Imperial Crown	0691			Memphis	0309 0067	Newave	039 0208 0123
					Imperial Crown	0691			Mermaid	0067	Nicamagic	0246
					Imperial Crown	0691			Merritt	0578 0193	Nikkai	07

TV (cont.)

Normerel	0067 0586
Novak	0067 0586
Novatronic	0067 0135 0404 0586
Nurnberg	0193
NU-TEC	0485 0728 0850 0067 0586 0736 0294
O.K.Line	1067
Oceanic	0193 0238 0503 0578 0510
Odeon	0294
Okano	0400 0067 0586 0294 0039
OKI	1067
Olidata	1406
Omega	0294
Omni	0810 0921 0728
Onida	0683
Onn	1179 0586
Onwa	0632 0463
Opera	0067 0586 0744
Optimus	0680
Optonica	0123
Orava	1067
Orbit	0067 0586
Orion	0067 0473 0744 0586 0039 0294 0910 1226
Orline	0067 0586
Ormond	0698 1067 0067 0586
Osaki	0247 0294 0067 0404 0586
Osio	0067 0586
Osume	0067 0586
Otto Versand	1353 0067 0247 0373 0542 0123 0586 0225 0139 0256 0039
Pacific	0067 0586 1167 0744 1067 0473
Pael	0246
Palladium	0400 0448 0067 0744 1167 1535 0230 0586 0357 0193 0247
Palsonic	0294 0803 0067 0247 0407 0728 0586 0448 0808 1226 1299
Panama	0039 0247 0294 0246 0067 0586
Panasonic	0680 0256 0067 1340 0586 0193 0238 0538 0926 0883 0578 0138
Panavision	0067 0586
Panda	0039 0238 0256 0294 0538 0728 0810 0736 0921
Papouw	0067 0586
Pathe Cinema	0193 0246 0400
Pathe Marconi	0139
Pausa	0039
Peng Sheng	0921
Penney	0208 0090
Perdio	0193 0067 0246 0586
Perfekt	0067 0586
Philco	0104 0448 0067 0193 0586 0400 0208 0511
Rank	0100
Philex	0193
Philharmonic	0247
Philips	0067 0586 0802 0208 0138 0404 0373 0039 0230
Phocus	1319 0744
Phoenix	0067 0586 0400 0516 0193 0246
Phonola	0067 0586 0246
Pilot	0586 0067 0742 0736
Pioneer	1290 0790 0200 0139 0193 0067 0586 0373 0516 0542
Pionier	0400 0516
Plantron	0067 0586 0294 0039
Playsonic	0744 0067 0247 0745
Polar	0067
Polaroid	0895
Policom	0139 0193 0100 0104
Poppy	0039
Portland	0404 1939
Powerpoint	0517 0067 0586 0728
Precision	0247
Premier	0039 0294 0921
President	0890
Prima	0039 0294 1299 1226
Princess	0728
Prinston	1067
Profex	0039 0193
Profi	0039
Profitronic	0067 0586
Proline	0067 0586 0655 0664 1406 1067
Prosonic	0067 0586 0400 0404 0910 0698 1406 0744 0246 0247 0636 0745 1226
Protech	0039 0067 0586 0247 0294 0448 0698 0193 0516 1067
Proton	0208 0039 0674
Provision	0529 0067 0586 1067 0744
PVision	1221 0906
Pye	0067 0586 0404
Pymi	0039
Qingdao	0238 0256 0294
Quadro	0783 0586 0067 1179 1193
Quasar	0680 0895 0039
Quelle	0067 1535 0100 0104 0139 0542 0247 0357 0135 0698 0586 0225 0230 0294 1067 0376 0039
Radialva	0139 0193 0067 0586
Radiola	0067 0586 0247
Radiomarelli	0067 0586
Radionette	0744
RadioShack	0067 0586 0208
Radiotone	0039 0067 0586 0400 0448 0698 0294 1067
Rank	0100
Rank Arena	0632 0783
RBM	0100
RCA	0655 0090 0123 0208 0590 0365 0648 0373 0783 0855
Realistic	0208
Recor	0067 0448 0586
Rectiligne	0067 0586
Rediffusion	0578 0376
Redstar	0067 0586
Reflex	0067 0586 1067 0698
Relisys	0895 0906 0907 1328 1406
Reoc	0744 0664 1939
Revox	0067 0838 0586 0400
Rex	0193 0294
RFT	0400 0294 0067 0586 0516
Rhapsody	0246
Ricoh	0067 0586
Rinex	0803 0448 0728 0294 0736
R-Line	0067 0586 0193
Roadstar	0039 1067 0745 0294 0448 0067 0586 0744 0698 1219
Rodex	0067 0586
Rolsen	1401 1221 0067 0586
Rover	0907
Rowa	0067 0294 0728 0742 0247 0039 0246 0736 0617 0586
Royal	0448 0855 0636
Royal Lux	0400 0365
Rukopir	0586 0067
Saba	0139 0655 0193 0590 0365 0373 0578 0680 0744
Sagem	0640 0485 0860 1343 0648
Seitech	1247
Seleco	0193 0294 0376
Sencora	0039
Sentra	0065 0039
Serie Dorada	0208
Serimo	0640 0485 0246 0123
Shancha	0294
Shanghai	0039 0238 0256 0294
Sharp	0123 1223 0039 1423 0680 0230
Shen Ying	0039
Shencai	0039 0294
Sheng Chai	0039
Sheng Chia	0039 0123
Shenyang	0039 0294 0783
Sherwood	0039
Shintoshi	0067 0586
Shivaki	0067 0586 0473 0404 0208
Show	0448 0039 0728 0294 0736 0067
Siarem	0193
Siemens	0067 0225 0230 0357 0586
Samsung	0674 0796 0090 0648 0208 0617 1279 0512 1265 0067 0294 0247 0400 0238 0256 0246 0193
Salsa	0365
Sampo	1785 0039 0123 0208 0680
Samsung	0674 0796 0090 0648 0208 0617 1279 0512 1265 0067 0294 0247 0400 0238 0256 0246 0193
Sandra	0246 0247
Sanjian	0294
Sansui	0067 0759 0586 0736 0632 0485 0783 1401 1221 0728 0294 0744 1278
Santon	0039
Sanyo	0238 1238 0400 0246 0247 0039 0538 0193 0067 0138 0586 0516 0200 0294 1067 1179 1193
Skysonic	0783
Skyworth	0067 0586 0039 0294 0728 0783 0855
Sliding	0895 0910
SLX	0698
Sanyuan	0039 0123
Save	0067 0586
SBR	0067 0586
Schaub Lorenz	0578 0744 0636 0516 0404 1221 1393 1401 0906
Schneider	0067 1167 0586 0698 0424 0382 0373 0247 1067 0193 0744 1939 0100
Schöntech	1067
Scotch	0208
Scotland	0193
Scott	1219 2028
Sears	0208
Seaway	0664
Selver	0586 1067 0067
SEG	1067 0247 0067 0294 1193 0586 0698 0517 0039 0193 0664 0246 1939 1179
SEI	1535 0193 0067 0586
Sei-Sinudyne	1535 0067 0586
Seitech	1247
Seleco	0193 0294 0376
Sencora	0039
Sentra	0065 0039
Serie Dorada	0208
Serimo	0640 0485 0246 0123
Shancha	0294
Shanghai	0039 0238 0256 0294
Sharp	0123 1223 0039 1423 0680 0230
Shen Ying	0039
Shencai	0039 0294
Sheng Chai	0039
Sheng Chia	0039 0123
Shenyang	0039 0294 0783
Sherwood	0039
Shintoshi	0067 0586
Shivaki	0067 0586 0473 0404 0208
Show	0448 0039 0728 0294 0736 0067
Siarem	0193
Siemens	0067 0225 0230 0357 0586
Siera	0067 0586 0617
Siesta	0400
Silva	0067 0586 0246
Silva Schneider	0783
Silver	0485 0067 0586 0745 0193
SilverCrest	1067 0067 0586
Singer	0039 0728 0067 0588 0365 0193
Sinotec	0803 0448 0636 0728
Sistec	0365
Sutron	0039
Sinudyne	0193 1535 0067 0586 0636
Sky	0067 0910 0208 0586 1406 0691 0895
Skymaster	0135
Skysonic	0783
Skyworth	0067 0586 0039 0294 0728 0783 0855
Sliding	0895 0910
SLX	0698
Sonyba	0039
Sonic	0783
Soniko	0067 0586
Soniq	1328
Sonitron	0895 1328
Sogo	1406
Solavox	0193 0578 0067 0586
Songba	0039
Sonic	0783
Sonoko	0039 0067 0586 0294 0247
Sonolor	0193 0238 1535 0578
Sontec	0067 0586 0400 0039
Sony	1535 1681 0680 1781 0383
Sound & Vision	0404 0067 0586
Sounddesign	0208
Soundwave	0067 0448 0586 0745
Sowa	0090 0256 0208
Soyea	0803
Spectra	0039
Ssangyong	039
Staksonic	0039
Standard	0039 0067 0247 0586 1067 0404
Starion	1067
Starlite	0039 0193 0067 0586 0294
Stern	0193 0294
Strato	0067 0586 0294 0039
Strong	1193 1179 1067 0067 0586
Starwood	0067 0586 0039
Super	1219
Superla	0246 0247
SuperScan	0123
Supersonic	0039 0238 0586 0728 0294 0485 0067
Sunkai	0485 0640 0067 0586 0517 0895
Sunny	0067
Sunstar	0067 0586 0039 0294
Sunwatt	0485
Sunwood	0067 0586 0039
SuperTech	0039 0246 0067 0586
Supervision	0728 0294
Supra	0208 0404 0039 0067
Susumu	0365
Sutron	0039
SVA	0617 0728 0294 0485 0895 0238 0736
Sky	0067 0910 0208 0586 1406 0691 0895
Svasta	0728 0238 0736 0294
Swisstec	0910 1406 0895 0294

Tennessee	0067 0586
Tensi	0067 0586 0247 0039 0135 0404 0407 0745 0193 1067
Tenson	0039
Tesla	1067 0067 0698 0744 0745 1167 0855 0783 0586 0640
Tevion	1328 1278 1289 0067 0586 0838 0895 0698 1167 0744 1067 1319
Texet	0246 0247 0404 0039
Thomson	0590 0655 0373 0139 0783 0365 0067 0586 0246
Thorn	0065 0138 0139 0067 0104 0373 1535 0529 0542 0586 0365 0404 0100
Thorn-Ferguson	0138 0737 0139 0365 0529 0065
Tiane	0123
Tiny	1226 1299
TMK	0208
Tobo	0039 0294
Tokai	0067 0586 0698 0193 0247 0404 0039 1067
Tokaido	1067
Tokyo	0246 0065
Tongguang	0294
Tongtel	0810 0617
Top Show	0728 0803 0448 0039 0294 0736
Topline	1067 0698
Toshiba	1538 0538 0680 0090 0039 0065 1734 1194 1319 1295 0744 0100 0123 0294 0648 0674 0247 0139 1067
Towada	0247
Toyoda	0039 0294
Trakton	0039 0294 0247
TRANS-continents	0698 1067 0895 0586 0067 0516 0247
Transonic	0067 0728 0742 0586 0485 0617 0542 0294 0448 0039 1393 0810
Transtec	0246
Triad	0067 0586 0039
Trident	0247
Trio	1278
Tristar	0294
Triumph	0376 0586 0067
Tuntex	0039
TVTEXT 95	0586
Uher	0067 0586 0404 0448 0516 0400 0510
Ultravox	0404 0246 0193 0067 0586
Unic Line	0067 0586 0503 0485
United	0744 0067 0745 0586 1067 0617
Universal	0744 0067 0586 0294

Universum	0838 1067 0067
	0104 1193 0294
	0376 0400 0698
	0135 0510 0225
	0503 1179 0542
	0522 0230 0448
	0100 0193 0586
	0357 1535 0247
	0139 0661 0039
	0200 0648
Univox	0067 0586 0193
Utax	0193
V7 Videoseven	1785 0208 0910
	1406 1247 0648
	1681 1535
Vanguard	0067 0586
Vestel	0067 1067 1193
	0698 0193 0247
	0586
Vexa	0039 0067 0586
Victor	0683 0680
Videocom	0538
Videologic	0246
Videologique	0246 0247
VideoSystem	0067 0586
Videotechnic	0246 0247 0404
Videoton	0193
Vidtech	0208
Viewpia	0906
ViewSonic	1785
Visioli	0246
Vision	0067 0294 0586
	0247
Vistron	1393
Vivax	0067
Vortec	0067 0586
Voxson	0193 0208 0067
	0586 0448
Walker	1179
Waltham	0247 0448 0067
	0586 0698 0139
	1067 0193 0473
Wards	0208
Warummaia	0404 0691 0664
Watson	0067 1067 1278
	1289 0586 0193
	0039 0698 0424
	1406 0357
Watt Radio	0193 0246 0516
Wega	0067 0586
Wegavox	0039 0067 0586
Weipai	0039
Welltech	0744
Weltblick	0067 0586 0247
Weltstar	1067
Westinghouse	0920
Weston	0067 0586
Wharfedale	0067 0926 0921
	0890 0586 0728
	0736
White	0067 0246 0586
Westinghouse	1939
Wilson	0586
Windsor	0698 1067
Windy Sam	0586
Wintel	0744
World-of-Vision	0910 0920 0895
	1319 1328 0907
	1247
Worldview	0485
XDome	0538
Xenius	0664 0691
Xiahua	0039 0294 0728
	0803

VCR	
Xianghai	0039
Xiangyang	0294
Xiangyu	0039
Xihu	0294
Xingfu	0039
Xinghai	0294
Aim	0308 0672 0378
Aiwa	0030 0378 0382
	0067 0772 1167
	0062
Akai	0030 0067 0136
	0345 0672 0382
	0270 0378
Akashi	0102
Akiba	0102
Akura	0102
Alba	0308 0102 0382
	0030 0345 0378
	0111
Allorgan	0270
Allstar	0111
Amstrad	0030 0308 0102
Yonggu	0039
Yoshita	0855
Yousida	0039
Yuhang	0039
YU-MA-TU	0067
Zaapa	1219
Zanussi	0247
Zenith	1939 0208 1295
Zhuhai	0039 0404
Zonda	0728

Denko	0102
Denon	0072
Diamant	0067
Diamond	0308
Digitor	0672
DSE	0672
Dual	0111 0308 0030
	0378
Dumont	0030 0111 0134
Durabrand	0672
Elbe	0308
Elctech	0102
Elin	0270
Elsay	0102
Eltta	0102 0308
Emerson	0102 0075 0030
	1167
ESC	0308 0270
EuroLine	0378
Ferguson	0350 0030 0308
	0378 0772
Fidelity	0030 0102 0270
	0462 0382
Finlandia	0134 0111 0072
	0196 0030 0078
	0067 0073 0136
	0256
Finlux	0030 0111 0134
	0072
Firstline	0102 0378 0073
	0067 0075 0072
	0308 1167
Baird	0136 0308 0134
	0030
Basic Line	0308 0102 0134
Beko	0134
Bestar	0308
Black Diamond	0672 0308
Black Panther	0308
Blaupunkt	1592 0256 0111
Blue Sky	0067 0378 0102
	0382 0308 0030
	0510 0672 1167
	0772
Bondstec	0102
Brandt	0350
Brinkmann	0378
Broksonic	0378 0772 0382
Bush	0102 0308 0345
	0382 0030 0378
	0111 0672 0772
Carena	0111
Carrefour	0075
Casio	0030
Cathay	0308
CGE	0030
Cimline	0102
CineVision	1167
Clatronic	0102 0030
Combitech	0382
Condor	0308
Crown	0067 0308 0510
	0102
Cyprus	0111
Daewoo	0308 0672 1167
	0667 0378 0382
	0075
Dansai	0102 0308
Dantax	0382 0772
Daytron	0308
de Graaf	0072 0196 0111
	0134 0078
Decca	0030 0111 0097
	0378 0382
Deitron	0308

Hypson	0102 0378 0308
	0382 0030 0067
	0510
Imperial	0030 0270
Ingersoll	0270
Inno Hit	0270 0308 0102
Interbuy	0067 0102
Interfunk	0111 0134
Internal	0308 0067
International	0308 0067
Intervision	0030 0308 0067
	0378
Irradio	0102 0067 0111
	1167
ITT	0136 0134 0270
ITT Nokia	0078
ITV	0308 0067
JMB	0382 0378
Joyce	0030
JVC	0097
Kaisui	0102
Kambrook	0067
Karcher	0308
Kendo	0136 0345 0378
	0102 0067 0308
KIC	0030
Kneissel	0382 0378 0067
	0308
Kolster	0378
Korpel	0102
Kyoto	0102
Lenco	0308
Leyco	0102
LG	0067 0510 0030
	0308 1167
Lifetec	0378
Loewe	0111 1592 0256
	0067
Logik	0270 0102 0136
Lumatron	0308
Lux May	0102
Luxor	0136 0073 0102
	0134 0078 0345
Magnavox	0111 0672
Magnum	0672
Manesth	0102 0075 0111
Marantz	0111
Mark	0308 0030
Mascom	0672
Mastec	0672
Master's	0308
Matsui	0378 0067 0270
	0382 030 0772
Maxton	0111
Mediator	0111
Medion	0378 0382
Meletronics	0030 0067
Memorex	0134 0030 0067
	0078 0378
Radiola	0111
Radiotette	1167 0067
RCA	0136 0350
Reoc	0378 0667 0308
RFT	0102
Roadstar	0270 0102 0067
	0308 0772 0111
Royal	0102
Saba	0350 0308
Saisho	0378
Salora	0073 0136 0134
Samsung	0270 0462
Sansui	0097 0136 0102
	0378
Sanyo	0134 0270 0078
	0097 0378
Multitec	0067
Multitech	0030 0102 0134
Murphy	0030
Mitsubishi	0073 0097 0111
	0510 0030 0672
Hoher	0308 0672
Hornynphon	0111

NAD	0134
Naiko	0672 0378
National	1592 0256
NEC	0097 0070 0134
	0067 0308 1167
Neckermann	0111
Nesco	0102 0030 0382
Neufunk	0067
Nikkai	0102 0308
Nokia	0134 0136 0345
	0308 0270 0078
	0072 0111
Nordmende	0350 0097 0672
NU-TEC	0378
Oceanic	0030 0350 0078
	0136 0111 0134
Okano	0345 0378 0102
	0308
Onimax	0672
Orbit	0102
Orion	0378 0382 0772
Orson	0030
Osaki	0030 0067 0102
Osume	0102
Otto Versand	0111
Pace	0382
Pacific	0030
Palladium	0102 0345 0067
	0270 0378 0462
Palsonic	0102 0030 0672
Panasonic	1592 0256 0866
Pathé Cinema	0073
Perdio	0030
Philco	0102
Philips	0111
Phoenix	0308
Phonola	0111
Pioneer	0097 0111 0072
Portland	0308 0667
Prinz	0030
Profftronic	0111 0270
Proline	0030 0308 0350
	0672
Proscopy	0308
Prosonic	0308 0030
Protech	0111 0308
Provision	0308
Pye	0111 0030
Quasar	0308
Quelle	0111
Radialva	0067 0102 0111
	0078
Radiola	0111
Radiotette	1167 0067
RCA	0136 0350
Reoc	0378 0667 0308
RFT	0102
Roadstar	0270 0102 0067
	0308 0772 0111
Royal	0102
Saba	0350 0308
Saisho	0378
Salora	0073 0136 0134
Samsung	0270 0462
Sansui	0097 0136 0102
	0378
Sanyo	0134 0270 0078
	0097 0378
Saville	0382 0308 0270
SBR	0111
ScanSonic	0270
Textex	0308

VCR (cont.)

Thomson	0350 0097 0308
Thorn	0134 0067
Thorn-Ferguson	0350
Tokai	0102 0067 0134
Tokiwa	0102
Topline	0378
Toshiba	0075 0073 0111 0772 0382
Towada	0102
Tradex	0111
Tredex	0308
Triad	0308
Uher	0067 0270
Ultravox	0308
Unitech	0270
United	0378 0772
Universum	0030 0111 0270 0067 0136 0378 0134
Victor	0097
Video Technic	0030
Watson	0111 0382 0308 0672
Weltblick	0067
Wharfedale	0672
White	0102
Westinghouse	0378
World	0102 0308
Yamishi	0102 0308
Yukan	0102
Yoko	0067 0102 0270
Yoshita	0102
Zenith	0667 1167
ZX	0378 0382
Stern	0308
STS	0072
Sunkai	0378 0308
Sunstar	0030
Suntronic	0030
Sunwood	0102
Supra	0067 0270 0378 0308
Sylvania	0030 0073 0111
Symphonic	0030 0102
T+A	0256
Tandberg	0308
Tandy	0030 0134
Tashiko	0030 0078 0270 0111 0067
Tatung	0030 0111 0078 0073 0378 0382
Tchibo	0378
TCM	0378
Teac	0102 0030 0308 0672 0067 0111 0667
TEC	0308 0102
Tech Line	0102
Technics	0256
TechniSat	0378
Tedelex	0067 0378 0672
Teknika	0030 0067
Telefunken	0672 0350 0308
Teletar	0067
Teletech	0102 0308 0030
Tenosal	0102
Tensai	0030 0067 0102 0308
Tevion	0378 0672
Texet	0308

VIDAC

Elonex	1302
Fujitsu Siemens	1302
Gateway	1302
Hewlett Packard	1302
hFX	1302
Microsoft	1302
Pinnacle Systems	1477
Ricavision	1302
Sony	1302
Trust	1302
Via Technologies	1302
XBox	1302

CBL

@Home	0030
Thomson	0350 0097 0308
Thorn	0134 0067
Thorn-Ferguson	0350
TMK	0270
Tokai	0102 0067 0134
Tokiwa	0102
Topline	0378
Toshiba	0075 0073 0111 0772 0382
Toteline	0067 0270
Towada	0102
Tradex	0111
Tredex	0308
Triad	0308
Uher	0067 0270
Ultravox	0308
Unitech	0270
United	0378 0772
Universum	0030 0111 0270 0067 0136 0378 0134
Victor	0097
Video Technic	0030
Watson	0111 0382 0308 0672
Weltblick	0067
Wharfedale	0672
White	0102
Westinghouse	0378
World	0102 0308
Yamishi	0102 0308
Yukan	0102
Yoko	0067 0102 0270
Yoshita	0102
Zenith	0667 1167
ZX	0378 0382
Stern	0308
STS	0072
Sunkai	0378 0308
Sunstar	0030
Suntronic	0030
Sunwood	0102
Supra	0067 0270 0378 0308
Sylvania	0030 0073 0111
Symphonic	0030 0102
T+A	0256
Tandberg	0308
Tandy	0030 0134
Tashiko	0030 0078 0270 0111 0067
Tatung	0030 0111 0078 0073 0378 0382
Tchibo	0378
TCM	0378
Teac	0102 0030 0308 0672 0067 0111 0667
TEC	0308 0102
Tech Line	0102
Technics	0256
TechniSat	0378
Tedelex	0067 0378 0672
Teknika	0030 0067
Telefunken	0672 0350 0308
Teletar	0067
Teletech	0102 0308 0030
Tenosal	0102
Tensai	0030 0067 0102 0308
Tevion	0378 0672
Texet	0308

CD

Advantage	0062
AH!	0187
Aiwa	0187
Arcam	0187
Atoll	0187
Electronique	
Audio Research	0187
Audiolab	0187
Com Hem	1696 0847
Comcrypt	0473
Daeryung	0507
Fastweb	1660
Filmnet	0473
Foxtel	1252
France Telecom	0847 1764
freebox	1512
Funai	0049
General	0306
Instrument	
Jerroll	0306
KabelBW	1090
Macab	0847
Madritel	1260
MNet	0473 0049
Motorola	0306 1136 1513
Multichoice	0049 0473
Nokia	1599
Noos	0847 1654
NTL	1090 1098
Numericable	0847
Oak	0049
Ono	1098 0306
Optus	0306 1090
Orange	0847 1764
Pace	1098 1607 1090
Philips	0847 1612
Premiere	1607
Sagem	0847 1654
Samsung	1090 1696
Scientific Atlanta	0507
SKY Deutschland	1607
StarHub	0306
Tele Danmark	0847
Tele+1	0473
Telepiu	0473
Telewest	1098 1090
Telsey	1660
Thomson	1612 1764
Trans PX	0306
UPC	1612
US Electronics	0306
Virgin Media	1090 1098
Visiopass	0847
YouSee	0847
Ziggo	1599 1696

Tag McLaren

Tag McLaren	0187
Tandy	0062
Teac	0423
Technics	0333 0059
Thorens	0187
Thule Audio	0187
Traxdata	0656
Universum	0187
Victor	0102
Wards	0187
Yamaha	0066 0520 0062

Goldmund

Goldmund	0219 1119 1219
Goodmans	0639 1229 1450

Grundig

Grundig	1119 1219 1299
Radiola	1119 1219 1299

Radioline

Radioline	1664 1323
RCA	1184 1420 1489

Red Star

Red Star	1419
Restek	0219

Revex

Revex	1119 1219 1299
Roadstar	1641

Rotel

Rotel	0823
Saba	1184

Integra

Integra	0165 1350
JVC	0104 1404 1525

Kenwood

Kenwood	1343 1057 1599
Sansui	0219 1119 0639

Sanyo

Sanyo	1831
Schneider	1420 1229 1250

SEG

SEG	1584
Sharp	0216 1664 1644

Sherwood

Sherwood	0683
Siemens	0639

Silva Schneider

Silva Schneider	1323
Sony	1188 1888 1789

Sunfire

Sunfire	1343
Sunstech	1450

Tag McLaren

Tag McLaren	1219
Targa	1323

Teac

Teac	1229 0639 1420
Technics	1793 1548 1809

Techwood

Techwood	0639 1584
Telefunken	1420 1419

Tevion

Tevion	1641
Thomson	1184 1384

Thorens

Thorens	1219 1119 1299
Thorens	1319 0219

Venturer

Venturer	1420
Victor	0104

Voxson

Voxson	1450
Waitec	1382

Wards

Wards	0219

<tbl

DVD
3 Plus 0520
3D LAB 0569
4Kus 1188
Acoustic Solutions 0760 0743 1258
AEG 0818 0800 0820
1263 0705
AFK 1258 1182 1081
AG Electronics 1258
Aim 0808 1195 0702
0820
Airis 1254 1351 0702
1035 1375 1137
Aiwa 0725 0899 0563
Akai 0820 0808 0818
0800 0725 1145
0928 0705 0746
0743 0882 0735
1725 1263
Akashi 0868
AKI 1035
Akira 0808 1351
Akura 1201 0928 1081
1170
Alba 0747 0743 0753
0725 0760 0569
0702 1170 1081
1560 1725
Alize 1181
All-Tel 0820 1481 0865
Amitech 0800 0880
Amoi 0882
Amoisonic 0865
Amstrad 0743 1145 1181
1601 0820 0800
AMW 0902
Ansonic 0789 0861
Apex Digital 0702 0747 1034
Arena 0882 1145
Aristona 0569 0676
Art Mito 1451
Asono 1254
ATACOM 1254
A-Trend 0744
Audiovox 0820 0747
audioworld 0820
Audix 1134 1182 0743
Autovox 0743
Auvio 0873
Avious 1195
AWA 0760 0902
Axion 0760
Base 1481
Basic Line 0743
Baze 1195 0928 0702
BBK 0892 1254
Bel Canto Design 1601
Bellagio 0902 1034
Best Buy 0887
Biostek 1035
Black Diamond 0743 0863
Blaupunkt 0747
Blusens 1263 1351
Blue Parade 0601
Blue Sky 0743 0725 0702
0873 0808 0681
0820
BNI 1351
Boghe 1034
Boman 0818 0928 1035
Brainwave 0800 1145

Brandt 0681 0581 0533
Broksonic 0725 1449
Bush 0743 0725 0863
1725 0760 0861
0747 0808 0546
0848 0753 1195
1466 1449 1513
1170 1560
Cambridge Audio 1139 0781
Campomatic 1081
Digital
CAT 0819
Celestial 0702
cello 1760
D-Vision 1145
DVX 0798 1182
e:max 1263 1351 0800
Centrex 0702 1034
Centrum 0743 0819 0809
1035 0705
CGV 0800 0781
Cinea 0871
Cineral 0760
Cinetec 0743 0902
CineVision 0899 0863
Classic 0760 1760
Clatronic 0818 0809 0848
0702 1195 0705
1263
Clayton 0743
Coby 0808 1137 1195
0760 0882
Codex 1263
Compacks 1137
Conia 0702 0882 0546
0865 1351
Contel 0818
Continental 0902 0861
Edison
Craig 0861
Crown 0800 0681
Crypto 1258
C-Tech 0798 1182
Cybercom 0861
CyberHome 0744 0846
Cytron 0746 0681 0735
0861 1377
Daenyx 0902
Daewoo 0863 0899 1513
0735 0800 0744
1466 0902 0808
Dalton 1066
Dansai 0800 1145 1725
Dantax 0753 0725 0743
Daytek 0902 1035
Dayton 0902
DCE 0861
DEC 0808 0848
Decca 0800
Diamond 0681 0798 0808
0781 0753 0820
1182 0800 1145
Digihome 0743
DigiLogic 0743
digiRED 0747
Digitor 1035 0681
Digitrex 0702 1034
DiK 0861
Dimarson 1263
Dinamic 0818
Disney 1253 0861

DiViDo 0735
DK digital 0861
DMTECH 0820 1301
Dragon 0861
DSE 1760 0863 1182
0705
Dual 0861 0743 0695
0681 0760 0809
0820 1466 1560
1145
Durabrand 0861 0705 0743
1560
D-Vision 1145
Elta 0800 1137 1195
0760 0882
Eltax 1351
Emerson 0621 0735 0899
0705
Enterprise 0621
Enzer 0695 1258 1035
0800
EuroLine 0818 1145 1263
0705
Ferguson 0681 1760 0928
0743 1725
Finlux 0771 0800 0621
0702 0781 1195
Fintec 0743 1560
Firstrline 0899 0681 1560
Fisher 0700
Funai 0725 0705
Futronic 1035
Gateway 1188
GE 0747
General Electric 0747
Germanic 1081
Germatic 1081
Global Link 1254
Global Solutions 0798 1182
Global Sphère 0798 1182
Go Video 0774 1188 0899
0863
GoldStar 0621 0771
Goodmans 0743 1034 0753
0781 0760 0681
0820 0848 0863
1170 1760 1560
0702
GPO Audio 1170
GPX 0771
Gradiente 0681
Graetz 0695
Gran Prix 0861 0928
Grandin 0746 0702 0743
Greenhill 0747
Grundig 0725 0805 0569
0681 0735 0820
0743 0700 0753
1725 1034 0581
1760 1466 1513
Grundig 0887 1137 1351
KXD 0887 1137 1351
Lawson 0735 0746 0798
1182
Leiker 0902
Lenco 0681 0800 0808
0848 0743 0861
1195
Grunkel 0800 0861
H&B 0848 0743 0871
0880 1263 1451

Haaz 0798 0781
Haier 0873
Hanseatic 0771 0820 1301
Harman/Kardon 0732
HCM 0818
HDT 0735 1227
HE 0760
Hello Kitty 0861
Henß 0743
Hicon 0702
HIMAX 0887 0873
Hitachi 0694 0809 0695
0603 0887 0743
Hiteker 0702
Höher 0861 1034 1254
0743 1560
Home Electronics 0760 0800
Home Tech Industries 1254
HYD 1263
Hyundai 0880 1258 0818
0798 1451 1560
1182 0863
ICP 1182
Ikei 1137
Ingelen 0818
Inno Hit 0743
Insignia 0705
Integra 0657
Irradio 0771 1145 1254
1263 0899 0800
ISP 0725
it's 0747
ITT 1263
Jamo 1066
Jaton 0695
JBL 0732
JDB 0760
JDV 1258
Jeken 0808
Jepssen 1213
JGC 1560
JMB 0725
JNC 1301
JVC 0653 0588 1194
0569 0533 0897
jWIN 1081
Kansai 1137
Kansas Technologies 1263 1560
Kendo 0743 0861 0702
1377 1725
Kennex 0800 0743 0928
Kenwood 0564 0520 1936
KeyPlug 0800
Kiilo 0800
King D'Home 0863
Kingavon 0848
Kiss 0871 0695
KLH 0820
KLH Digital 0747
Koda 0848
Koss 0681
Kreisen 1451
KXD 0887 1137 1351
Lawson 0735 0746 0798
1182
Leiker 0902
Lenco 0681 0800 0808
0848 0743 0861
1195
Grunkel 0800 0861
H&B 0848 0743 0871
0880 1263 1451

Lenox 0868 1035
Lexia 1182 0798
LG 0771 0621 1936
0899 1263
Lifetec 0681 0861 1377
Limit 0746 1182 0798
LiteOn 1188
Lodos 0743
Loewe 0569 0771
Logic3 0802
LogicLab 0798 1182
Logik 0743
Logix 0735
Lumatron 0735 1145 0771
0863 1351 0743
0760 0928
Luxman 0603
Luxor 1034 0743 1760
0760 0747
Magnavox 0533 0705 0848
0533 0705 0743
Magnex 0753 1195
Magnum 1466 1412
Majestic 1137 1375
Manhattan 0735 0743
Marantz 0569
Mark 0743 0725 1725
Marquant 0800 1481
Mastec 1036
Matsui 0681 0743 0702
0725 1760
Maxdorf 0818
Maxent 1377
Maxim 0743
Jamo 1066
Maya 1375
MBO 0760
MDS 0808
Mecotek 0800
Medialine 1301
Mediencom 0781
Medion 0861 1377 0681
0746 1375 0660
1195 1036 0771
MEI 0820
Memorex 0861
Memory 0760 1081
Metz 0601 0555 0743
Micro 0753 0781 1253
Micromaxx 1725 0725 1377
Micromedia 0533 0569
Micromega 0569
Microsoft 0552
Microstar 0861
Minax 0743
Minerva 0735
Minoka 0800 1145
Minowa 1195
Mintek 0747
Mitsubishi 0743
Mizuda 0848 0887 1481
Monyka 0695
MPX 0873
Mustek 0760 1760
Mx Onda 0681 0781 0753
1253
Mystral 0861
NAD 0771
Naiko 0800 1034
NEC 0899 0621 0771
Neovia 1301
Nesa 0747
Neufunk 0695

Nevir 0861 0800 0702
Nexus 0820
Nintaus 1081
Nordmende 0861 1560
Nowa 0873
NU-TEC 0546 1258
Omni 0808 0863 1134
1258
Onix 0868
Onkyo 0657 0533
Oopla 1188
Oppo 1254
Optim 0873
Optimus 0601 0555
Pacific 0820 1182 0798
0800 1182 0753
Orava 0848
Orbit 0902
Orion 0725 1725 1036
1263 1449 0928
Oritron 0681
P&B 0848 1481
Pacific 0820 1182 0798
0800 1182 0753
Packard Bell 0861
Palladium 0725 0809 0743
Palsonic 0865 0702 0882
0863
Panasonic 0520 1864 1938
Panda 0747 1137
Papouw 0563
Paramount Pictures 0809
peeKTON 1254 0928
Philips 0569 0676 1370
0705 0533 1188
Philo 1375
Phonotrend 1195
Pioneer 0601 0661 1995
0555 1601
Plu2 0880
Pointer 0800
Polk Audio 0569
Portland 0800
Powerpoint 0902 1035
Presidian 0705
Prima 1258
Prinz 0861
Prism 1036 0861
Pro2 1375
ProCaster 1034
Proline 0681 0702 0820
1034 1513 0863
Proscan 0552
Prosonic 0743 1035
Prosonic 1137
Provision 0848 1351 1137
0760
Pye 0676 0569
QONIX 0808 1081
Qwestar 0681
Radiotone 0743
Raite 0695
RCA 0552 0681 0820
1995
REC 0520
Red Star 0789 0793 0800
0818 0928 1137
1375
Relisys 1377
Reoc 0798 1182
Revoy 0871
Rex 0868

Richmond 1263
Rimax 1181
Rio Audio 0899
Roadstar 0743 0848 0760
1081 0928 0863
1257
Rocksonic 0819
Ronin 0902
Rotel 0653 0588
Rowa 0789 1034 0546
0555 0747
Rowsonic 0819 0753
S&V 1195
Saba 0681 0581
Sabaki 0798
Savod 0861 0789 0800
1182 0798
Sakyno 0861 0789 0800
1182 0798
Salora 0771
Sampo 1377
Samsung 0603 0774 1962
0520
Sansui 0725 0746 0798
0800 1182 0753
0781 1258 1725
1081 1145 0793
Sanyo 0700 0903 0725
0820 1466 0743
1258
Scan 0735 0865 0880
0887
SCE 0819
Schaub Lorenz 0818 1195 0800
1182
Schneider 0861 0809 0569
0735 0818 0743
0681 0899 0820
0676 1257
Schöntech 0743
Scientific Labs 0798 1182
0681 0702 1066
1263
Seeltech 1254 1481
SEG 0743 0695 0798
1182 0902 0793
1560 1513
Shanghai 0702
Sharp 1286 0660 0743
0725 1449
Sherwood 0747 0771
Shinco 0747
Siemssen 1412
Sigmatek 0887 1254
Siltex 1254
Silva

DVD (cont.)		
Sony	0563 0802 0894 1100 2011 1663 1463	Trevi 0861 Trio 0800 TruVision 0887 1481
Sound Color	1263	TSM 1254 TVE 0743
Soundmaster	0798 1182	Umax 1181 United 0818 0760 0820 1258 0702 1195 0725 1145 0798 1263 0743 1182 0705
Soundmax	0798 1182	Universal 0798 1182 Multimedia 0771 0743 0621 Universum 0809 1257 0820 1560
Soundwave	1560	Uptek 0793 upXus 1375
Spectra	0902	Urban Concepts 0533 Venture 0820 Vestel 0743 1560
Standard	0681 1182 0798 0818 0861 0928	Vieta 0735 Viewmaster 0892 1254 Voxson 0760 0861
Star Clusters	0798 1257 1182	VTrek 1258 Waitec 1254 0760
StarLogic	1035	Walkvision 0747 Waltham 1560
Starmedia	0848 1254 1035	Welkin 0861 Wellington 0743
Strato	1412 1182	Weltstar 0743 Wharfedale 0798 0820 0753 0781 1182 0800 1145
Strong	0743	Wilson 0861 1263 Windy Sam 0603
Sunfly	0887	Wintech 1217 Woxter 1181 1254
Sunkai	0800 0880	XBox 0552 XLogic 0800 0798 1182
Sunstech	0861 1301	XMS 0818 0800
Sunwood	0818	Xoro 1213 Yakumo 1034
SuperDigital	1217	Yamada 1034 0902 1181 1188
Supervision	0760 0798	Yamaha 0569 0676 0520 1188
SVA	0702	Yamakawa 0695 0902 1134
Sylvania	0705 0660	Yukai 0760 Zenith 0533 0899 0621 0771
Symphonic	0705	
Synn	0798 1182	
Sytech	0861	
Tandberg	0743 1725	
Tangent	1351	
Targa	1188 1257 1936 0771	
Tatung	0800	
Tchibo	0771	
TCM	0771	
Teac	0747 0771 0820 0546 0601 0798 1036 1182 0621 1227 0789 0863 1257 1195 0705 1254 1258	
TEC	0928	
Technics	0520 1938	
Technika	0800 1145 0861 1195 1560 1182	
Technisson	0702	
Technosonic	1081 1145	
Techwood	0743 1560 0569	
Tecnimagen	1263	
Tedelex	1034 1258 0798 0800 1182	
Telefunken	0820 0819 0818 1258 0863 1513 1145 0800 1375	
Teletech	0743 1182 0798	
Tensai	0681 0800	
Tevion	0681 1066 1412 1451 1182 0798 1034 1257 0863 1377 1760	
Theta Digital	0601	
Thomson	0581 0552 0861	
Tokai	0695 0928 0818 1263	
Tokiwa	0735 0746	
Tom-Tec	0819 0863	
Top Suxess	1254	
Toshiba	0533 0725 1075 1540	
TRANS-continents	0902 0861 1195 1263 0863	
Transonic	0702 1195	
Tredex	0873	

PVR		
@sat	1330	Sky XL 1442 SKY+ 1205
@Sky	1364	Skymaster 1364 skyplus 1364 1442
Amstrad	1205	Stream 1878 Strong 1189 1330
Arnion	1330	Sunny 1330 Systec 1364
ASCII	1364	TechniSat 1130 Technosat 1236
Astro	1130	Technosat 1236 Austar 1206
Aurora	1463	B@ytronic 1442 B@ytronic 1442
Austar	1206	Brainwave 1244 British Sky 1205
B@ytronic	1442	Broadcasting 1205 BSkyB 1205
Brainwave	1244	Broadcasting 1205 Bush 1314 1656 1702
British Sky	1205	Broadcasting 1205 Canal+ 0883
Broadcasting		Broadcasting 1205 Canal Digital 1883 0883 0197
BSkyB	1205	Broadcasting 1205 CanalSat 0883
Bush		Broadcasting 1205 CanalSatellite 0883 1369 1883
C		Broadcasting 1205 Centrex 1577
CGV		Broadcasting 1205 Champion 1309
Champion		Broadcasting 1205 Cherokee 1353
Chesley		Broadcasting 1205 Chess 1364 0743 1656
Chess		Broadcasting 1205 CityCom 1206 1262 0329
Clatronic		Broadcasting 1205 Com Hem 1206
Clayton		Broadcasting 1205 Comag 1262 1443 1442
Colombia		Broadcasting 1205 Comsat 1396 0162
Conrad		Broadcasting 1205 Connexions 0399
Coship		Broadcasting 1205 Crown 1314
Fortec Star		Broadcasting 1205 Cyfra+ 1883 1439 0883
Foxtel		Broadcasting 1205 Cyrus 0230
Fracarro		Broadcasting 1205 Daewoo 1326 1773 0743
Free Wave Technology		Broadcasting 1205 Dantax 1656
Freecom		Broadcasting 1205 D-box 1144 0753
FTEmaximal		Broadcasting 1205 DeltaSat 1105
Fuba		Broadcasting 1205 DGTEC 1272 1572
Fusionkyo		Broadcasting 1205 Digatron 1324
Galaxis		Broadcasting 1205 Digenius 0329 1191
Gardiner		Broadcasting 1205 Digi Raum Electronics 1206
Garnet		Broadcasting 1205 Digiality 1364
Gbsat		Broadcasting 1205 DigiFusion 1675 1773
Gecco		Broadcasting 1205 Digihome 1314
General Satellite		Broadcasting 1205 Diginet 1577
Globo		Broadcasting 1205 DigiQuest 1503 1487 1330
GOD Digital		Broadcasting 1205 DigiSat 1262
Gold Box		Broadcasting 1205 Digisky 1487
Gold Vision		Broadcasting 1205 Digital+ 1883 1076 0883
Golden Interstar		Broadcasting 1205 DigitAlb 1262 1577
GoldMaster		Broadcasting 1205 DigitalBox 1130
Goodmans		Broadcasting 1205 DiPro 1577 1503 1397
Gradiente		Broadcasting 1205 DirecTV 0129
Grandin		Broadcasting 1205 Distratrel 1313
Distrisat		Broadcasting 1205 DMT 1105
DNT		Broadcasting 1205 DNT 0230
Doro		Broadcasting 1205 DRE 1206
DRE		Broadcasting 1205 Dream Multimedia 1267
DStv		Broadcasting 1205 DStv 0672 0909
Dune		Broadcasting 1205 Durbbrand 1314
Hauppauge		Broadcasting 1205 Echolink 1396
H&B		Broadcasting 1205 Echostar 1230 0640 0197
Haloo		Broadcasting 1205 Echostar 0883 0743 1353
Hama		Broadcasting 1205 He@D 1309
Hansel & Gretel		Broadcasting 1205 Healing 1577
Hills		Broadcasting 1205 Hills 1262
Eco-Star		Broadcasting 1205 Edision 1309
Einhell		Broadcasting 1205 Elap 0162 0743
Elap		Broadcasting 1205 Electron 1309
Electron		Broadcasting 1205 Elsat 0743
Elta		Broadcasting 1205 Emme Esse 0399
Emme Esse		Broadcasting 1205 eMTech 1244
Engel		Broadcasting 1205 EuroLine 1281
Europa		Broadcasting 1205 Europah 0230
Europhon		Broadcasting 1205 Europsat 1443 1641
Europsat		Broadcasting 1205 Eurosky 1597
Eurosky		Broadcasting 1205 Eurostar 0848
Eurostar		Broadcasting 1205 Eutelsat 0743
Eutelsat		Broadcasting 1205 FMD 1281 1487 1443
FMD		Broadcasting 1205 Force 1224
Force		Broadcasting 1205 Forte Star 1047
Forte Star		Broadcasting 1205 Foxtel 1386 0909 0750
Foxtel		Broadcasting 1205 Fracarro 0155
Free Wave Technology		Broadcasting 1205 Fusionkyo 0155
Freecom		Broadcasting 1205 Gardiner 0848
FTEmaximal		Broadcasting 1205 Garnet 1105
Fuba		Broadcasting 1205 Gbsat 1244
Garnet		Broadcasting 1205 Gecco 1442 1303
Gbsat		Broadcasting 1205 General Satellite 1206
Gecco		Broadcasting 1205 Globo 1281 1656 1442
General Satellite		Broadcasting 1205 Globo 1459 1364
Globo		Broadcasting 1205 GOD Digital 0230
GOD Digital		Broadcasting 1205 Gold Box 0883
Gold Box		Broadcasting 1205 Gold Vision 1047
Gold Vision		Broadcasting 1205 Golden Interstar 1313
Golden Interstar		Broadcasting 1205 GoldMaster 1364
GoldMaster		Broadcasting 1205 Goodmans 1314 1321
Goodmans		Broadcasting 1205 Gradiente 0917
Gradiente		Broadcasting 1205 Grandin 1656
Grandin		Broadcasting 1205 Grocos 1439 1487
Grocos		Broadcasting 1205 Grundig 0203 0877 1321
Grundig		Broadcasting 1205 Grundig 1314 0909 0883
Grundig		Broadcasting 1205 H&B 1577
H&B		Broadcasting 1205 Hama 1597
Hama		Broadcasting 1205 Hansel & Gretel 0162
Hansel & Gretel		Broadcasting 1205 Hauppauge 1324 1702
Hauppauge		Broadcasting 1205 HB 1244 1831
HB		Broadcasting 1205 HDT 1189
HDT		Broadcasting 1205 HE@D 1309
HE@D		Broadcasting 1205 Healing 1577
Healing		Broadcasting 1205 Hills 1262
Hills		Broadcasting 1205 Eco-Star 1443

SAT		
@sat	1330	Sky XL 1442 SKY+ 1205
@Sky	1364	Skymaster 1364 skyplus 1364 1442
Arnon	1330	Stream 1878 Strong 1189 1330
ASCII	1364	Sunny 1330 Systec 1364
Astro	1130	TechniSat 1130 Technosat 1236
Aurora	1330	Technosat 1236 Akai 0230
BSat	1353	Technosat 1236 Akai 0230
Acoustic Solutions	1314	Technosat 1236 Alpha 0230
ADB	0672 0917 1289	Technosat 1236 Alpha 0230
Adcom	0230	Technosat 1236 Akai 0230
Akai	0230	Technosat 1236 Akura 1656
Akura	1656	Technosat 1236 Alba 1314 0743
Alba	1314 0743	Technosat 1236 Allsat 0230 1047
Allsat	0230 1047	Technosat 1236 Allsonic 0399
Allsonic	0399	Technosat 1236 Alltech 0743
Alltech	0743	Technosat 1236 Akira 1656
Akira	1656	Technosat 1236 Allvision 1262 1364 1442
Allvision	1262 1364 1442	Technosat 1236 Alpha 0230
Alpha	0230	Technosat 1236 Amstrad 0162 1105
Amstrad	0162 1105	Technosat 1236 Antar 1330
Antar	1330	Technosat 1236 AntSat 1047
AntSat	1047	Technosat 1236 Apro 1702
Apro	1702	Technosat 1236 Arcon 1309 0162 1105
Arcon	1309 0162 1105	Technosat 1236 Arion 1309
Arion	1309	Technosat 1236 Armstrong 0230
Armstrong	0230	Technosat 1236 Arnon 1330
Arnon	1330	Technosat 1236 ASA 0329
ASA	0329	Technosat 1236 Asat 0230
Asat	0230	Technosat 1236 ASCI 1364
ASCI	1364	Technosat 1236 ASLF 0743
ASLF	0743	Technosat 1236 AssCom 0883
AssCom	0883	Technosat 1236 Aston 1159 1291
Aston	1159 1291	Technosat 1236 Astra 0743
Astra	0743	Technosat 1236 Astratec 1773
Astratec	1773	Technosat 1236 Astro 0163 0203 0399
Astro	0163 0203 0399	Technosat 1236 Astro 0688 1143 1129
Astro	0688 1143 1129	Technosat 1236 Astro 1130 0230 1303
Astro	1130 0230 1303	Technosat 1236 Audioline 1459
Audioline	1459	Technosat 1236 Aurora 0909 0672 1463
Aurora	0909 0672 1463	Technosat 1236 Austar 1289 0672 0909
Austar	1289 0672 0909	Technosat 1236 Avanit 0329
Avanit	0329	Technosat 1236 Axil 1487
Axil	1487	Technosat 1236 Axis 1141 0399
Axis	1141 0399	Technosat 1236 Axitronic 1656
Axitronic	1656	Technosat 1236 B.net 1702
B.net	1702	Technosat 1236 B@ytronic 1442 0329
B@ytronic	1442 0329	Technosat 1236 Balmet 1487
Balmet	1487	Technosat 1236 Bentley Walker 1047
Bentley Walker	1047	Technosat 1236 Best 0399
Best	0399	Technosat 1236 Big Sat 1487
Big Sat	1487	Technosat 1236 Black Diamond 1314
Black Diamond	1314	Technosat 1236 Blaupunkt 0203
Blaupunkt	0203	Technosat 1236 Blue Sky 0743
Blue Sky	0743	Technosat 1236 Blue Star 1309
Blue Star	1309	Technosat 1236 Boca 0162 1396 0743
Boca	0162 1396 0743	Technosat 1236 Boshmann 1443
Boshmann	1443	Technosat 1236 Boston 0162
Boston	0162	Technosat 1236 Boxer 1488
Boxer	1488	Technosat 1236 Brainwave 1244 0688 1702
Brainwave	1244 0688 1702	Technosat 1236 British Sky 1205 0877
British Sky	1205 0877	Technosat 1236 Broadcasting 1205
Broadcasting	1205	Technosat 1236 Broco 0743
Broco	0743	Technosat 1236 BSkyB 1205 0877
BSkyB	1205 0877	Technosat 1236 BT 1326
BT	1326	Technosat 1236 Bubu Sat 0743
Bubu Sat	0743	Technosat 1236 Bush 1314 1656 1702
Bush	1314 1656 1702	Technosat 1236 1321 0382 0672
1321 0382 0672		Technosat 1236 Canal Digitaal 0883
Canal Digitaal	0883	Technosat 1236 Canal Digital 1076 1364
Canal Digital	1076 1364	Technosat 1236 Elap 0743
Elap	0743	Technosat 1236 Edison 1309
Edison	1309	Technosat 1236 Einhell 0162 0743
Einhell	0162 0743	Technosat 1236 Elpa 1597 1443
Elpa	1597 1443	Technosat 1236 Electron 1309
Electron	1309	Technosat 1236 Elsa 0743
Elsa	0743	Technosat 1236 Emme Esse 0399
Emme Esse	0399	Technosat 1236 eMTech 1244
eMTech	1244	Technosat 1236 Engel 1047 0743 1281
Engel	1047 0743 1281	Technosat 1236 EuroLine 1281
EuroLine	1281	Technosat 1236 Europa 0230
Europa	0230	Technosat 1236 Europhon 0329 0162 0743
Europhon	0329 0162 0743	Technosat 1236 1364
1364		

SAT (cont.)	
Hirschmann	1141 1143 0203 0329 1262 0399 0155 1442
Hitachi	1314
HNE	1262 0162
Homecast	1244
Humax	1206 1262 1457 1705 1773 1255
Huth	0162 1047 1105
Hyundai	1189 1105 1446
i-CAN	1397
ID Digital	1206
IDTE	1189
Imperial	1459 1364 1129 1130 1227 1225 0230 1702
Inno Hit	1656
International	0162
Interstar	1047 1244
Inves	1773
iotronic	1443 0162
ITT Nokia	0753
Jadeworld	0672
Jaeger	1364
Jepsen	1244
KabelBW	1225 1227 1076 1206
Kamm	0743
Kansalaiboksi	1577
Kaon	1330
KaTelco	1141
Kathrein	1591 1597 0688 0510 0534 0203 0230 0743 0848 1353 1446
Kennex	0155
Kenwood	0883
Key West	0162
Kongque	1330
König	1309
KPN	1575
Kreiling	0688 1656
Kreiselmeyer	0203
K-SAT	0743
Kystar	0162
L&S Electronic	0399 0162 1364
Labgear	1326
LaSAT	0399 0162 0329 0203
Leiko	1656
Lemon	1364
Lenco	0743 0399
Lennox	0399
Lenoxx	1641
Lexus	0230
LG	1444 1105
Lifesat	0162 0399 0329 0743
Linsar	1314
Listo	1656
Lodos	1314
Logik	1314
Logix	1047 1105
Lorenzen	0329 1324 1191 0162
Lupus	0399
Macab	0883
Madritel	0672
Manata	0743 0162
Manhattan	1047 1330

Marantz	0230
Maspro	0743 0203
Matsui	1656 0203 1773
Maximum	1105 1364
MDS	1255
Mediabox	0883
Mediacom	1236
MediaSat	0883
Medion	1262 0329 0743 0162 1105 1442 1656 1364 0399
Medison	0743
Mega	0230
Meletronic	0848
Metronic	0743 1309 1313 0848 0162 1443 1702
Metz	0203
Micro	0743 1324
Micro electronic	0743
Micro Technology	0743
Micromaxx	0329 0399
Microstar	1105 0329 1191
Microtec	0743
Morgan's	0162 0743 0230 1262 1442 1439
Motorola	0886 1503
Multichoice	0909 1463 0672
Myryad	0230
Mysat	0743
MySky	1880 1386 1878
Neotion	1364
Netgem	1352
Netsat	0917 0129
Neuf TV	1352
Neuhaus	0743
Neuling	1262 0162
Neusat	0743 1309
Neveling	1191
NextWave	1047
Nikko	0743 0753 0230
Nokia	1144 1753 1053 1253 0753 0883
Noos	0883
Nordmende	1641
Nova	0909
Numericable	0883
OctalTV	1324 1459
OKI	1597 1487
Onn	1314
Opentel	1262 1442
Optex	1313 0743 1641 1656 1443
Optima	1577
Optus	0909 0883 1386
Orbis	1364 1442 1262
Orbitech	1129 1225 1227 1130 0230
P/Sat	1262
Pace	1386 1205 0877 1453 1878 0917 1353 1880 0271 0821 0750 0230 0883
Pacific	1314
Packard Bell	1141
Palcom	0329 1641 1191 1439
Panasat	0909
Panasonic	0877 1334 1434
Panda	0203
Patriot	0162
peeKTON	1487
Philips	0129 1144 0883 0163 0230 1702 1773 0848 0203 1459
Phoenix	1303 1577
Phonetrend	1047 1230
Pilotime	1369
Pino	1364
Pioneer	0883 1338 0382
PMB	1641 0743
Portland	1326
Power Sky	1309
Preisner	0162 1143 1396
Premiere	1144 0753 1206 1225 1130 1705 1141 0688
Primacom	1141
Pro Basic	0883
Proline	1314
PYROD	1577
QNS	1434
Quadral	0399 1353
Quelle	0329
Radiola	0230
Radix	1143
RCA	1321
Rebox	1244
Red Star	0399
Regal	1281
RFT	0230
Roadstar	0743 0883
Rollmaster	1443
Rover	0743 0399
Rownsonic	1597
SAB	1281 1330
Sagem	1144 1720
Salora	1262
Samsung	1273 1600 1488 1047 1236 0883 1205
Sansui	1575 1281
Sanyo	1656
Sat Control	1330
Sat Industrie	1641
Sat Team	0743
SAT+	1439
Satec	0743
Satelco	0399
Satlink	1597
Satplus	1130
Schaub Lorenz	1244
Schneider	1281 1236
Schwaiger	0534 1364 1487 1442 1459 1141 1702 0162 1105
SCS	0329
Sedea Electronique	0155 0162 1313
SEG	1281 0399 1656 1105 1314
Serino	0640
Servimat	1641
ServiSat	1281 0743
Sherwood	1641 1439
Siemens	0203 1656 1364 1459 1702
Silva	0329
Skantin	0743
SKR	0743
SKT	0162
Sky	0129 0886 1205 0877 0917 0741
SKY Deutschland	1144 0753 1206 1225 1130 1705 1141 0688
SKY Italia	1878 1880
Sky XL	1442 1281
SKY+	1205
Skymaster	1439 1641 0743 1230 1105 1364 1597 1575
Skymax	0230 1443
Skypex	0329
skyplus	1262 1364 1205 1442 1487
SkySat	0743
SL	0162 1702
SM Electronic	0743 1230 1105
Smart	1303 0162 0329 1143 1262 0743 1443 1434
SmartVision	1487
Soniq	1597
Sony	0877 1588 0312 0883
SR	0162
Star Sat	0162
Starland	0743
Stream	1878
Stream System	1330
Strong	1397 1439 0743 1656 1831 0883 1314 1189 1330 0155 0399 0909 1503
Sumin	1442
Sunny	1330
Sunny Sound	0399
Sunsat	0743
Sunstar	0399 0162 0672
SuperMax	1313
Supratech	1443
Systec	0162 1364
S-ZWO	1237
Tarbs	1255
TBoston	1487 1281
Teac	1257 1255 1352 1577
Tecatel	1230
Technika	1314 1702
TechniSat	1225 1227 1130 1129 1352 0230
Technomate	1313
Technosat	1236
Technosonic	1702
Technotrend	1459 1702
Technowelt	0162
Techsan	1047
Techwood	1314 1656 1281
tekComm	1047
TELE System	1641 1831 1189 1439 1281
TeleClub	1397
Telecom	0743
Telestar	1129 1130 0230 1459 1281 1364 1656 1702 1225 1227
Televes	0162 1244 1330 1364 1439
Televisa	0917
Telewire	1262
Tesla	1656
Tevion	1702 1364 0743 1439 1597
Thomson	0741 0877 1321 1883 1076 1205 0883 1930 0743
Tiny	1702
Tioko	0162
Tividi	1459
Tokai	0230
Tonna	1641 0743
Topfield	1575 1813 1236 1237
Toshiba	1314
TPS	1283
Triax	0230 0743 0883 1281 1326 1321 0162 1129 1143 1257 1656 1641 1443
Tricolor TV	1206
Trio	1105
TT-micro	1459
Turnsat	0743
Twinner	0162 0743 1641
UEC	0909 1192 1386
Unimax	1577
Unisat	0230 0162
United	1281
Unitymedia	1459 1206 1225 1227
Universum	0203 0329 1129
Van Hunen	1191 0329
Vantage	1488
Variosat	0203
Vega	0399
Ventana	0230
Vestel	1314 1281
VH Sat	1191 0329
Viasat	1353 1053 1225 1227
Viola Digital	1702
Vision	1656
Visionic	0155 1309
Visiosat	1443 0743 1159 1487
Vitecom	1443
Vivid	1192
Voo	0883
VTech	0848
Wavelength	1262 1443
Wharfedale	1314 0230
Winbox	1831
Wisi	0203 0329 0162 1442 1262
Worldsat	1503 1244 1281
XMS	1105
Xrypton	0399
XSat	0743 1244 0877 1353
Xtreme	1330
Yakumo	1443
YES	0917
Yess	1577
Zehnder	1281 1364 1105 1262 1443 1442 0534 0848 0399
Zenith	0886
Zeta Technology	0230
Zinwell	1206
Zodiac	1831 1309

ARCAM

A&R CAMBRIDGE LTD, PEMBROKE AVENUE, WATERBEACH, CAMBRIDGE CB25 9QR, ENGLAND